

SECTION 2-7

 
OPERATION OF INSTRUMENTS AND CONTROLS

Multi-information display

Reference	160
Before using the multi-information display	163
Switch operation	163
Functions	164
Information	166
Hands-free system	171
Adjustment	238
Outside temperature display	240

Reference


►Type 1

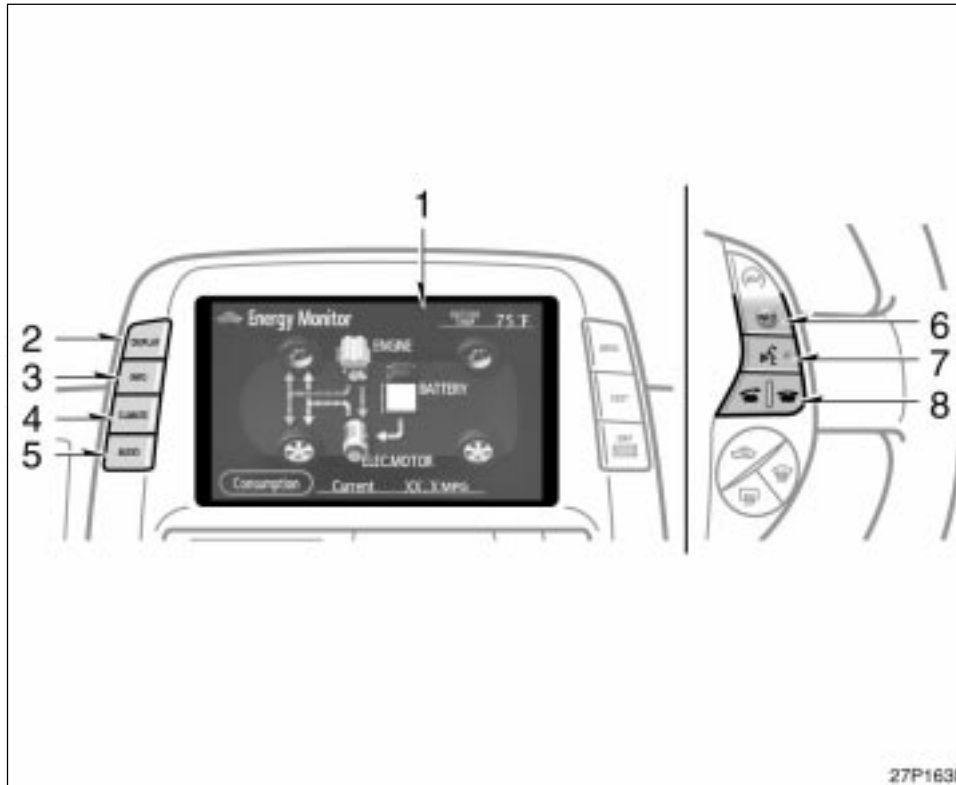

1. Multi-information display*
(See page 163 for details.)
2. “DISPLAY” button
The display adjustment screen is shown.
(See page 238 for details.)
3. “INFO” button
The information menu screen is shown.
(See page 166 for details.)
4. “CLIMATE” button
The air conditioning operation screen is shown.
(See page 288 for details.)
5. “AUDIO” button
The audio operation screen is shown.
(See page 242 for details.)
6. “INFO” button (on the steering pad)
The trip information screen is shown.
(See page 168 for details.)
7. Speech command button (on the steering pad)
(See page 236 for details.)
8. Telephone button (on the steering pad)
(See page 171 for details.)

*: In this manual, English version screens are shown as an example.

 
►Type 2

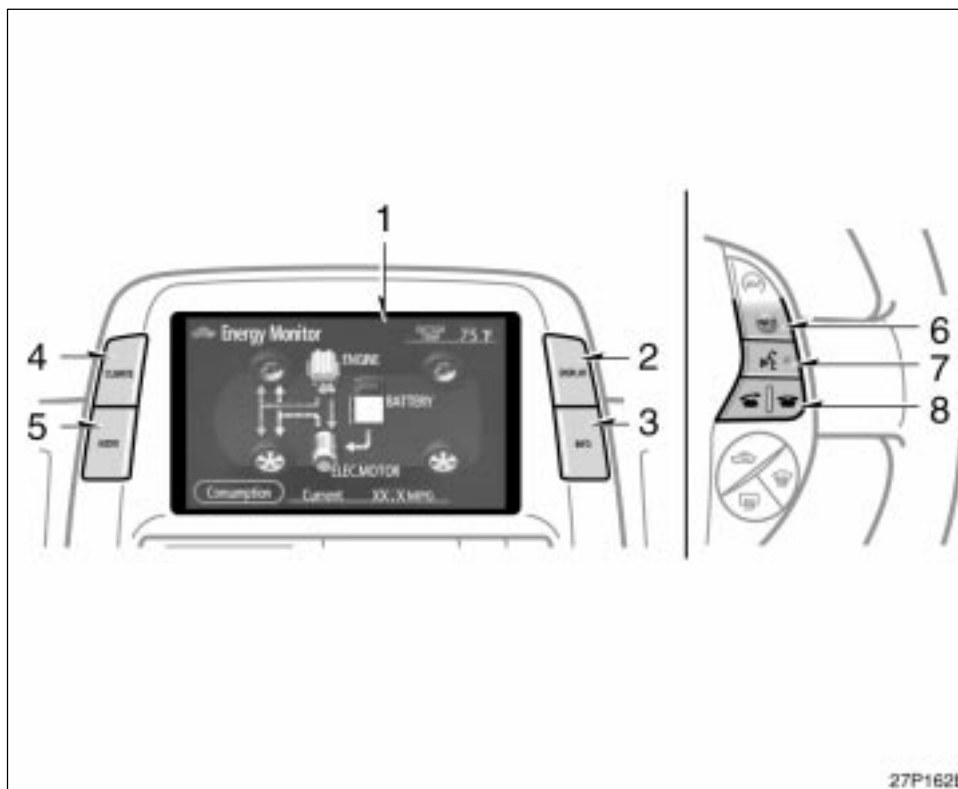

1. Multi-information display*
(See page 163 for details.)
2. "DISPLAY" button
The display adjustment screen is shown.
(See page 238 for details.)
3. "INFO" button
The information menu screen is shown.
(See page 166 for details.)
4. "CLIMATE" button
The air conditioning operation screen is shown.
(See page 288 for details.)
5. "AUDIO" button
The audio operation screen is shown.
(See page 242 for details.)
6. "INFO" button (on the steering pad)
The trip information screen is shown.
(See page 168 for details.)
7. Speech command button (on the steering pad)
(See page 185 for details.)
8. Telephone button (on the steering pad)
(See page 171 for details.)

*: In this manual, English version screens are shown as an example.

 ►Type 3

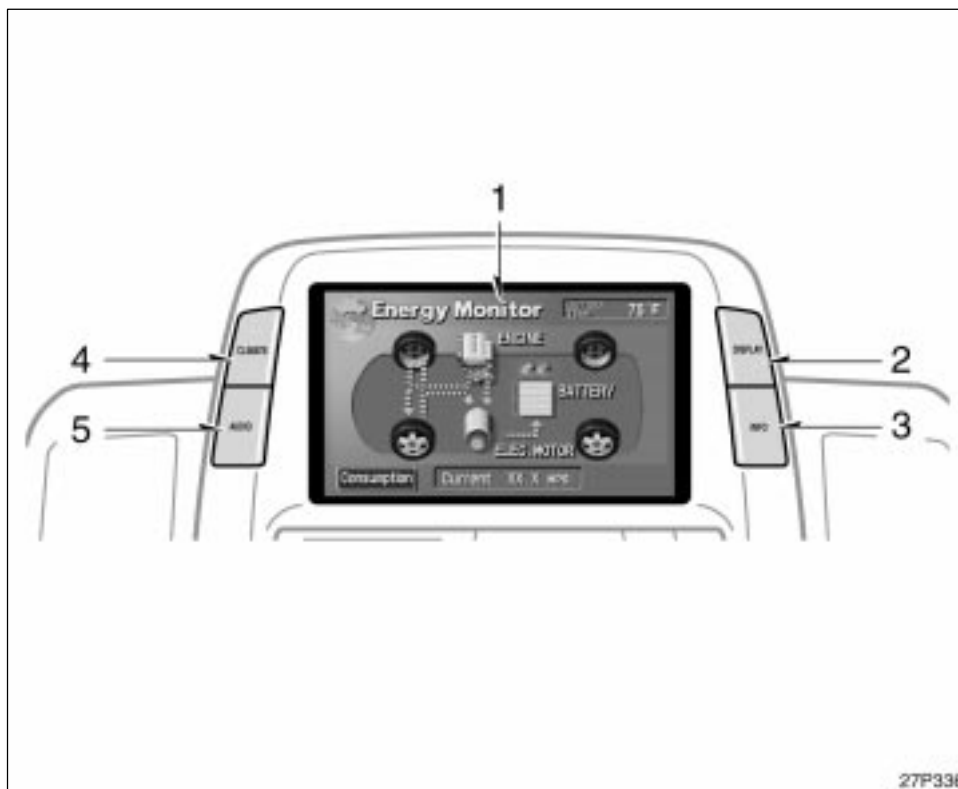

1. Multi-information display*
(See page 163 for details.)
2. “DISPLAY” button
The display adjustment screen is shown.
(See page 238 for details.)
3. “INFO” button
The information menu screen is shown.
(See page 166 for details.)
4. “CLIMATE” button
The air conditioning operation screen is shown.
(See page 288 for details.)
5. “AUDIO” button
The audio operation screen is shown.
(See page 242 for details.)

*: In this manual, English version screens are shown as an example.

Before using the multi-information display



Type 1 and Type 2



Type 3

When the “ACC” mode is enabled, the initial screen appears and the system begins operating.

After a few seconds, the previous mode display will appear.

If the electrical power source has been disconnected from the multi-information display, the display will be automatically set to the initial mode.

CAUTION

Do not adjust the display while the vehicle is moving. Be sure to adjust the display only when the vehicle is stopped.

Switch operation

This system operates mainly by the switches on the screen. To protect the screen, lightly touch switches on the screen with your finger. When you touch a switch on the screen or on the bezel, a beep sounds.

- If the system does not respond to a touch of a switch, move your finger away from the screen and then touch it again.
- You cannot operate dimmed switches.
- Wipe off fingerprints on the surface of the display using a glass cleaning cloth.
- The displayed image may become darker and moving images may be slightly distorted when the display is cold.
- When you look at the screen through polarized material such as polarized sunglasses, the screen may be dark and hard to see. If so, look at the screen from different angles, adjust the screen settings on the “Display” screen, or take off your sunglasses.

Functions



Type 1*




Type 3



2. Adjustment

 The contrast and brightness on the screen are adjusted. For details, see page 238.

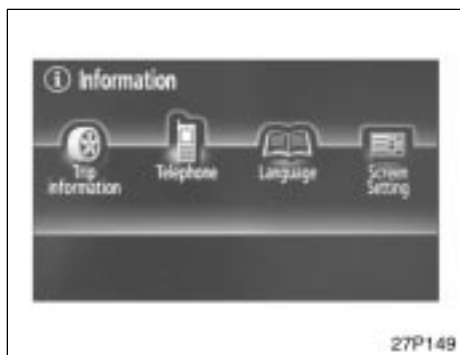

Type 2

1. Trip information, Telephone, Language and Screen setting

 
For details, see page 166.

*: For other functions (Maintenance, Calendar and Beep setting), see the separate "Navigation System Owner's Manual".



3. Air conditioner

Climate setting operations are available. For details, see page 288.

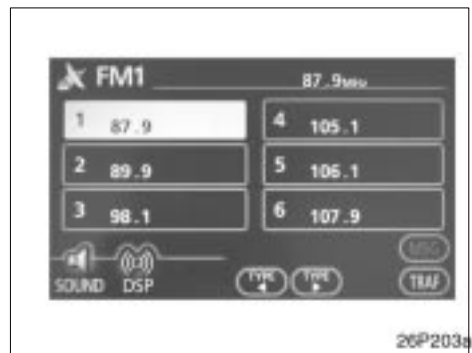

4. Audio

 
The radio and compact disc operations are available. For details, see page 242.




5. Warning display

The warning symbol for the faulty system appears. For details, see page 133.

Information

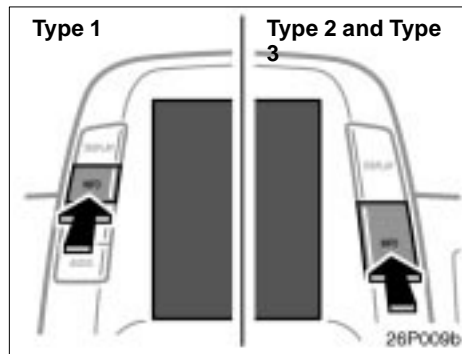

 Push the "INFO" button to display the "Information Menu" screen.

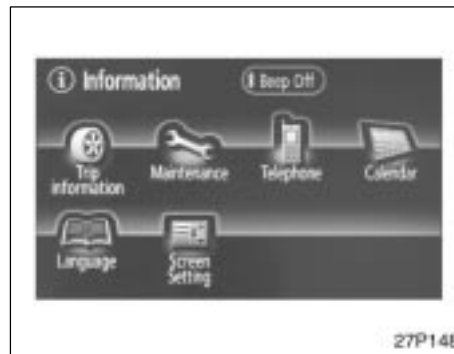

Type 1



Type 3



Type 2

 
Trip information: The energy monitor and fuel consumption screen are selected.

Telephone: Telephone screen is shown. (See "Hands-free system" on page 171 for details.)


Language: Select language screen is shown.

Screen setting: The screen setting screen is shown.

—Trip information

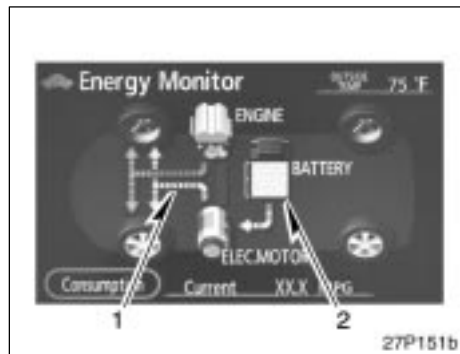

Type 1 and Type 2

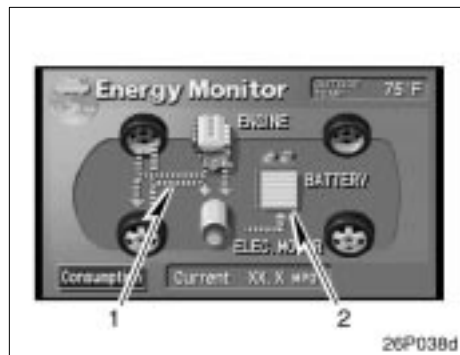 


Type 3

Energy monitor screen


Touch the “Energy” switch. Vehicle driving condition, hybrid system operating condition and energy recovery condition are shown.

1. Indicates the flow of energy by orange and yellow arrows. While the energy is recovered, the arrows change the pointing direction and turn green.
2. Indicates the remaining capacity of the hybrid battery.

 The screen display updates every 3 seconds, so it may not coincide with the actual status.

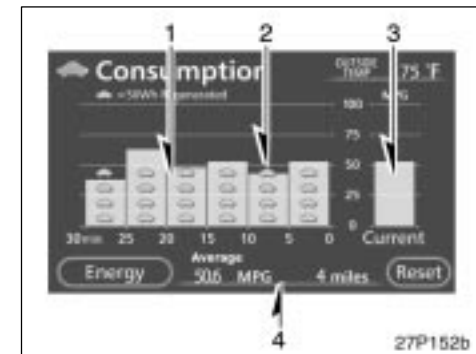

Type 1 and Type 2

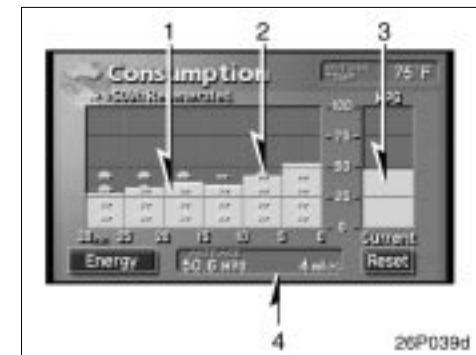 


Type 3

Fuel consumption screen

Touch the "Consumption" switch. Average fuel consumption, momentary fuel consumption and recovered energy are shown.

 
1. Indicates the past momentary fuel consumption every 5 minutes.
2. Indicates the energy recovered for 5 minutes with symbols. One symbol refers to 50 Wh or the energy by which a 50 W bulb illuminates for an hour. Up to 4 symbols will be shown.
3. Indicates the current momentary fuel consumption.
4. Indicates the average fuel consumption after being reset. When the "Reset" switch is touched or more than 10 L (2.6 gal., 2.2 Imp.gal.) fuel is supplied, the average fuel consumption is reset.

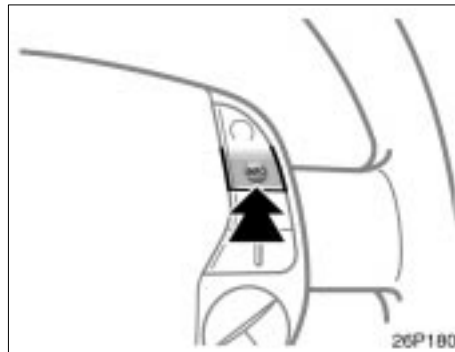

Steering switch operation (Type 1 and Type 2)

The trip information screen appears directly by pressing the "INFO" button on the right side of the steering pad. Each press changes the "Energy Monitor" and "Consumption" screens alternately.

 —Language

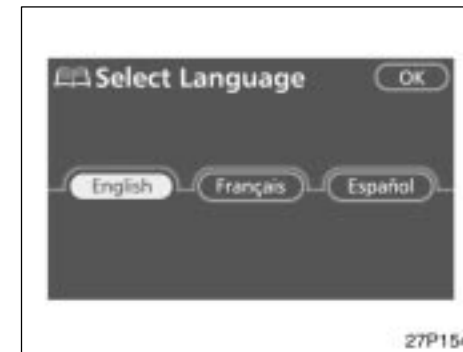


Type 1 and Type 2



Type 3

You can select the language shown on the screen. Touch your desired switch on the screen.

 —Screen setting

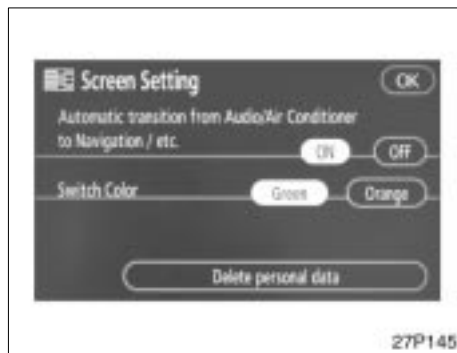

Type 1 and Type 2

AUTOMATIC TRANSITION

The function returning to the previous screen from the audio or air conditioner screen is selectable. Select “ON” or “OFF” and then touch “OK”.

ON: The previous screen automatically returns from the audio or air conditioner screen 20 seconds after the end of audio or air conditioner screen operation.

OFF: The audio or air conditioner screen remains on.

SWITCH COLOR

Select the desired switch color and touch “OK”.

DELETE PERSONAL DATA

The following personal data can be deleted or returned to their default settings:

- Phone book data
- Dialed numbers and received calls
- Speed dial
- Bluetooth® phone data
- Security code

This function is available only when the vehicle is not moving.



1. Touch “Delete personal data”.

The “Delete personal data” screen appears.



2. Touch “Delete”.

The “Confirmation for deleting all personal data” screen appears.



3. Touch “Yes”.



Type 3

AUTOMATIC TRANSITION

The function returning to the previous screen from the audio or air conditioner screen is selectable. Select “ON” or “OFF” and then touch “OK”.

ON: The previous screen automatically returns from the audio or air conditioner screen 20 seconds after the end of audio or air conditioner screen operation.

OFF: The audio or air conditioner screen remains on.

BACKGROUND COLOR

Select the desired background color and touch “OK”.

Hands-free system—

Hands-free system allows you to make or receive a call without taking your hands off the steering wheel by connecting your cellular phone.

This system supports Bluetooth®. Bluetooth® is a wireless data system by which you can call without your cellular phone being connected with a cable or placed on a cradle.

If your cellular phone does not support Bluetooth®, this system cannot function.

CAUTION

While you are driving, do not use a cellular phone or connect the Bluetooth® phone.

 
NOTICE

Do not leave your cellular phone in the vehicle. The temperature indoors may be high and damage the phone.


INFORMATION

In the following conditions, the system may not function.

- *The cellular phone is turned off.*
- *The current position is outside the communication area.*
- *The cellular phone is not connected.*
- *The cellular phone has a low battery.*

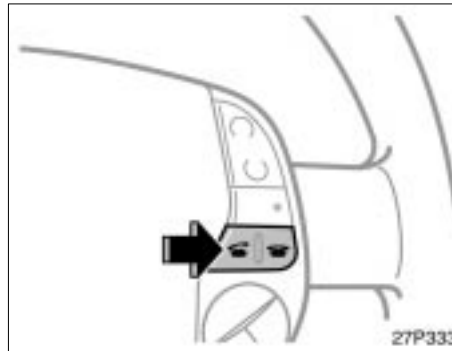

 By pushing the telephone button above, you can receive a call or hang up without taking your hands off the steering wheel.

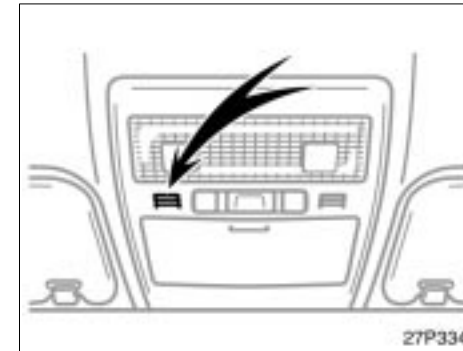

You can use the microphone above when talking on the phone.

The other party's voice outputs from the driver's speaker. When the received calls or received voice outputs, the audio from the audio system will be muted.

INFORMATION

- Talk alternately with the other party on the phone. If you talk at the same time, the voice may not reach each other. (It is not a malfunction.)
- Keep the volume of receiving voice down. Otherwise, echo is coming up. When you talk on the phone, speak clearly towards the microphone.
- In the following situations, your voice may not reach the other party.
 - ◆ Driving on unpaved road. (Making a traffic noise.)
 - ◆ Driving at the high speed.
 - ◆ The window is open.
 - ◆ Turning the air conditioning vents towards the microphone.
 - ◆ The sound of the air conditioning fan is loud.



1. Indicates the condition of Bluetooth® connection.

“Blue” indicates an excellent connection to Bluetooth®.

“Yellow” indicates a bad connection to Bluetooth®, resulting in possible deterioration of voice quality.



: no connection to Bluetooth®.

2. Indicates the amount of battery charge left.



It is not displayed while the Bluetooth® is connecting or the phone book data is being transferred.

The amount left does not always correspond with the one of your cellular phone. This system does not have a charging function.

3. Indicates the receiving area.

“Rm” is displayed when receiving in Roaming area.

“Hm” is displayed when receiving in Home area.

4. Indicates the level of reception.



The level of reception does not always correspond with the one of your cellular phone.

INFORMATION

This system supports the following service.

- HFP (Hands Free Profile) Ver. 1.0
- OPP (Object Push Profile) Ver. 1.1

If your cellular phone does not support HFP, you cannot enter the Bluetooth® phone, and take OPP service individually.

An antenna for the Bluetooth® connection is built in the display. The indication of the Bluetooth® connection may turn yellow and the system may not function when you use the Bluetooth® phone in the following conditions and places.

- Your cellular phone is hiding behind the display (behind the seat or in the glove box and console box).
- Your cellular phone touches or is covered with metal materials.

Leave the Bluetooth® phone on the place where "Blue" indication is displayed.



Bluetooth is a registered trademark of Bluetooth SIG. Inc.

When you release your vehicle:

A lot of personal data is registered when you use the hands-free system. When you release your vehicle, initialize your data.

If you initialize it, the former state will never come back again. Pay much attention when initializing the data.

You can initialize the following data in the system.

- phone book data
- dialed numbers and received calls
- speed dial
- Bluetooth® phone data
- security code

FCC ID: BABBT003A
IC ID: 2024B-BT003A
MADE IN JAPAN

This device complies with Part 15 of the FCC Rules and RSS-210 of the IC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAUTION: Radio Frequency Radiation Exposure

 
This equipment complies with FCC radiation exposure limits set forth for uncontrolled equipment and meets the FCC radio frequency (RF) Exposure Guidelines in Supplement C to OET65. This equipment has very low levels of RF energy that it is deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated with at least 20cm and more between radiator and person's body (excluding extremities; hands, wrists, feet and legs).

Co-location: This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter.


—Entering a Bluetooth® phone

To use the hands-free system, you need to enter your phone into the system. Once you have registered it, you can make a hands-free call.

1. Push the “INFO” button to display the “Information” screen.

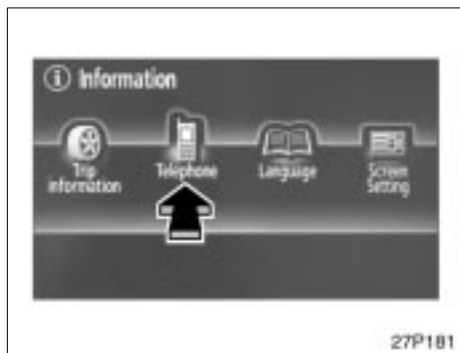


2. Touch the “Telephone” switch to display “Telephone” screen.

You can also push the  button of the steering wheel to display this screen when the vehicle is stopped.




 3. Touch the “Settings” switch to display “Settings” screen.

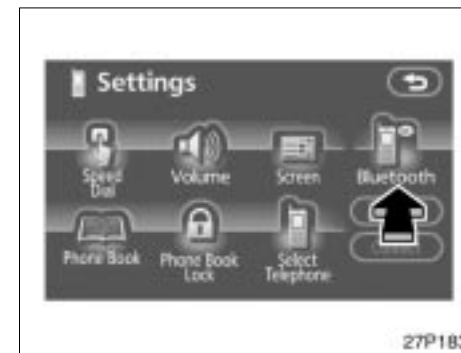

4. Touch the “Bluetooth*” switch to display the “Bluetooth* Settings” screen.

 *: Bluetooth is a registered trademark of Bluetooth SIG, Inc.

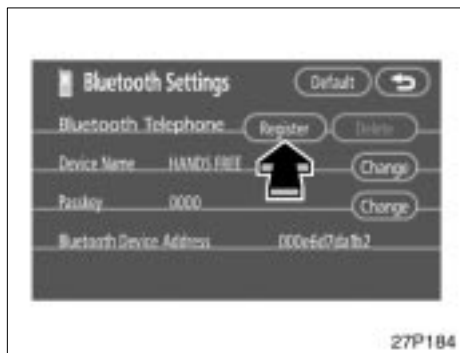


5. Touch the “Register” switch to connect your cellular phone to the system.



6. When this screen is displayed, input the Passkey displayed on the screen into the phone.

For the operation of the phone, see the manual that comes with your cellular phone.

 If you want to cancel it, touch “Cancel”.

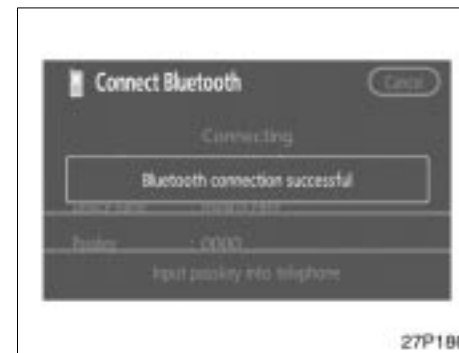

7. When the connection is completed, this screen is displayed.

You do not need to enter the phone in case of using the same one.



When this screen is displayed, follow the guidance on the screen to try again.

 


● Connecting a Bluetooth® phone

(a) automatically


When you register your phone, auto connection will be turned on. Always set it to this mode and leave the Bluetooth® phone in a condition where connection can be established.

Each time you touch the “Auto Connect” switch, auto connection will be switched on or off.

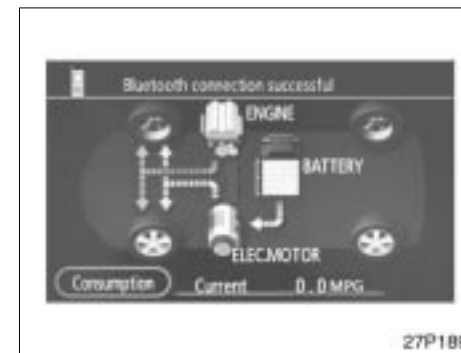

When the “ACC” or “IG-ON” mode is enabled, the selected Bluetooth® phone will be automatically connected and the connection result is displayed.

 
This screen appears when the Bluetooth® phone is first connected after the “ACC” or “IG-ON” mode is enabled.

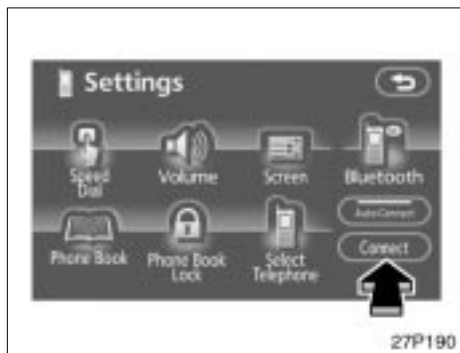

(b) manually

When the auto connection failed or turned off, you have to connect Bluetooth® manually.

 Touch the “Connect” switch after having enabled the Bluetooth® connection on the phone.

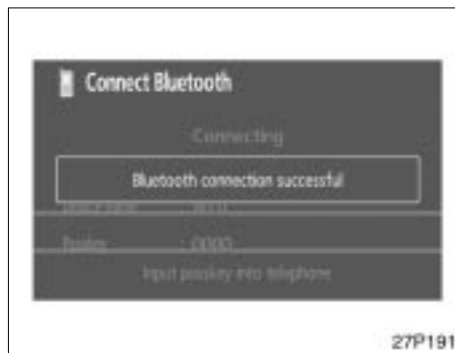

When the connection is completed, this screen is displayed.

Now you can use the Bluetooth® phone.

● **Reconnecting the Bluetooth® phone**

If the Bluetooth® phone is disconnected with a poor reception from the Bluetooth® network when the “ACC” or “IG-ON” mode is enabled, the system automatically reconnects the Bluetooth® phone. In this case, the connection result is not displayed.

If the Bluetooth® is disconnected on purpose such as you turned your cellular phone off, this does not happen. Reconnect it by the following methods.

- Select the Bluetooth® phone again.
- Enter the Bluetooth® phone.

—Calling on the Bluetooth® phone

After you enter the Bluetooth® phone, you can call by using hands-free system. You can call using the 7 methods described below.



(a) By dial


You can call by inputting the telephone number.

This cannot be operated while you are driving.

Touch the desired key to input the telephone number.

Each time you touch “X”, an inputted digit is deleted.

When you touch “☎”, the number you called last is inputted.

Touch “☎” or push the  button of the steering wheel.



(b) By phone book

 
You can call by phone book data which is transferred from your cellular phone.

The system has one phone book. You can register up to 1000 numbers.

This cannot be operated while you are driving.


Touch the desired key to input the telephone number.

1. Touch the "Phone Book" switch to display "Phone Book" screen.

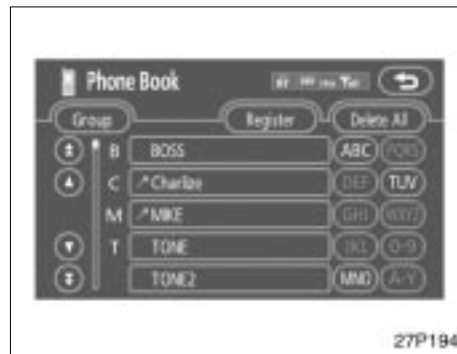

2. Select the desired number from the list.



Touch "☎" or push the  button of the steering wheel.

 


(c) By dialed numbers

You can call by dialed number. The system memorizes up to 5 dialed numbers. If it is over 5, the oldest number is deleted.


This cannot be operated while you are driving.

1. Touch the "Call Log" switch to display "Outgoing Calls" screen.

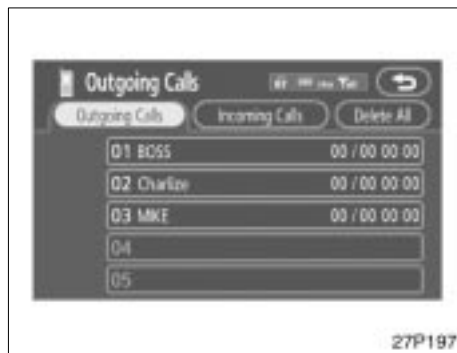

- When you call by phone book, the name (if registered) is displayed.
 - When you call the same number continuously, only the newest number is registered.
2. Select the desired number from the list.



Touch "☎" or push the  button of the steering wheel.

 


(d) By received calls

You can call by received calls. When a call is received, the system memorizes up to 5 numbers. If it is over 5, the oldest number is deleted.

This cannot be operated while you are driving.

1. Touch the "Call Log" switch to display.

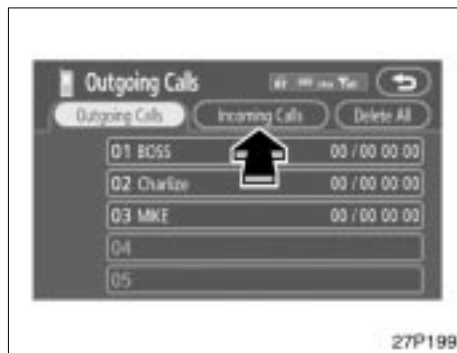

2. Touch the "Incoming Calls" switch to display "Incoming Calls" screen.



- When a telephone number registered in the phone book is received, the name and the number are displayed.
 - Received calls which you did not answer are also memorized in the system and "Abs." is displayed on the left side of the number.
 - Unnoticed telephone number such as a public telephone is not memorized in the system.
3. Select the desired number from the list.



Touch “” or push the button of the steering wheel.

 
- An international phone call may not be made depending on the cellular phone which you have.



(e) By speed dial

You can call by registered telephone number which you selected from a phone book, dialed numbers and received calls. (See page 191 for registering the speed dial.)

1. Touch the “Speed Dial” switch to display “Speed Dial” screen.

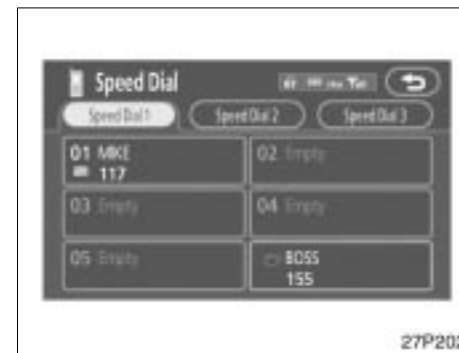


2. Touch the desired number to call.
You can change the page by touching “Speed Dial 2” or “Speed Dial 3”.

When you push the telephone button while you are driving, the screen above appears. Touch the desired name to call. (The telephone number is not displayed.)



(f) By voice recognition

 You can call by giving a command. (For the operation and command of voice recognition, see “Speech Command System” on page 236 and “Help screen” on page 237.)

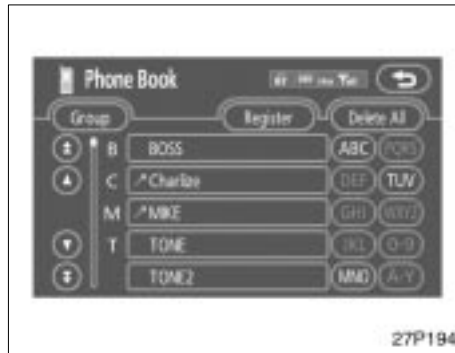

Example: Call Charize

● **Dialing by name**

You can call by giving a voice tag registered in the phone book. For setting the voice recognition, see “Setting the voice recognition” on page 210.

You: Push the talk switch.
 System: “After the beep, please say the name.”
 You: “Charlize.”
 System: “Charlize chosen, when ready, please briefly push the talk switch or push the off-hook switch to dial.”
 You: Push the talk switch.
 System: “After the beep, please say “Dial”. ”
 You: “Dial.”
 System: “Dialing the name.”
 Now you can call Charlize.



“Next” is displayed when multiple entries are found for a searched name.

Up to 6 entries can be displayed including the first searched one.

Do the following to change the entry to the next one.


- Touch the “Next” switch.
- Push the talk switch to say “Next Candidate”.

Calling without the voice recognition.

After the entry number is displayed, you can also call by pushing the telephone button or touching the “Dial” switch.

Cancelling the voice recognition

The voice recognition will be cancelled when you do the following.

- Keep on pushing the talk switch.
- Push the  button of the steering wheel.
- Touch the “Cancel” switch. (Except for recognizing the command)
- Say “Cancel”.



- **Dialing by phone number**

You can call by giving a desired number.

You: Push the talk switch.
 System: "After the beep, please say the number."
 You: "812387"
 System: "When ready, please briefly push the talk switch or push the off-hook switch to dial."
 You: Push the talk switch.
 System: "After the beep, please continue to add numbers or say "Dial"."
 You: "Dial."
 System: "Dialing the number."
 Now you can call 812387.



● **Sending a tone**

You can send a tone by giving a desired number.

 
You: Push the talk switch.
 System: "Say numbers, pound, or star."
 You: "1234."
 System: "1234." "Push the talk switch."
 You: Push the talk switch.
 System: "Send? Say Yes or No."
 You: "Yes."
 System: "Sending."
 Now you can send the tone.




(g) By POI call (with Navigation System)


You can call by touching "☎" when it is displayed on the screen from Navigation system. (See the separate "Navigation System Owner's Manual" for details.)

—Receiving on the Bluetooth® phone

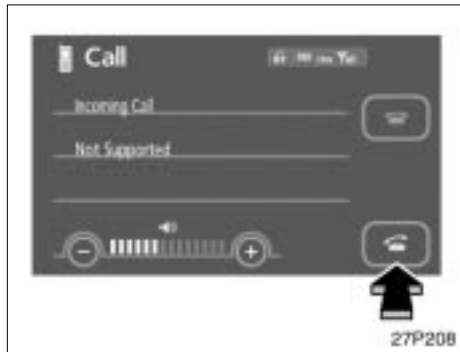


When a call is received, this screen is displayed with a sound. Touch “ button of the steering wheel to talk on the phone.

To hang up the phone:

Touch “ button of the steering wheel again.

To refuse to receive the call:

Touch “

To adjust the volume of received call:

Touch “-” or “+” or use the volume switch of the steering wheel.

On the international phone call, the other party’s name may not be displayed correctly depending on the cellular phone which you have.

—Talking on the Bluetooth® phone




While you are talking on the phone, this screen is displayed. You can do the operations below on the screen.

To adjust the volume of the other party’s voice:

Touch “-” or “+” or use the volume switch of the steering wheel.

To hang up the phone:

Touch the “ button of the steering wheel

To mute your voice:

Touch the “Mute” switch.

To input a Key:

Touch the "0-9" switch.

To transfer the call

Touch the "Transfer Call" switch.

You cannot change from hands-free call to cellular phone call while you are driving.

When you change from cellular phone call to hands-free call, the hands-free screen will be displayed and you can operate it on the screen.


Transferring method and behavior are different depending on the cellular phone which you have.

For the operation of the phone, see the manual that comes with your cellular phone.



Touch the desired number to input the key.

To hang up the phone:

Touch "■" or push the  button of the steering wheel.

This cannot be operated while you are driving.




If the continuous tone signal is registered in a phone book, this screen appears. (If not registered, "Send" and "Exit" are not displayed.)

Confirm the number displayed on the screen and touch "Send". The number before marked sign will be sent.

When you touch "Exit", this function will be finished and normal tone screen appears.

To hang up the phone:

Touch "■" or push the  button of the steering wheel.

The continuous tone signal is the marked sign (p or w) and the number following telephone number. (ex. 056133p0123w#1*)

You can do this operation when you want to operate an answering machine or use a telephone service in bank for example. You can register the phone number and the code number in the phone book.



● **Sending a tone by the speed tone**
 You can send a tone by the speed tone. (For registering the speed tone, see “Registering the speed tone” on page 195.)

1. Touch the “Speed Tone” switch.

 


2. Touch the desired switch to send a tone.


—Changing the settings of the Bluetooth® phone



Touch the “Settings” switch to display “Settings” screen.

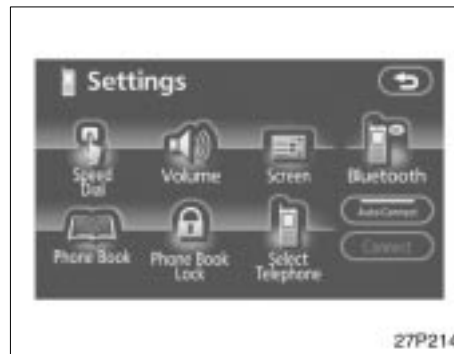

 You can change the settings of the phone.

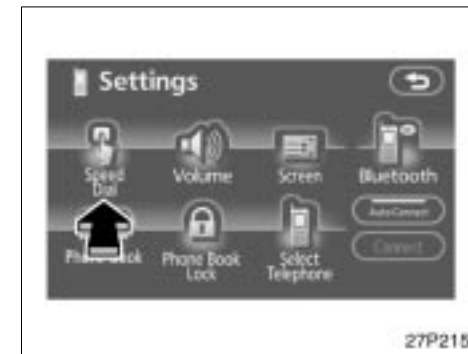


(a) Registering the speed dial


You can register the desired telephone number from phone book, dialed numbers and received calls. Up to 17 speed dial numbers can be registered.

The 6th entry is the speed dial for redialing.

 1. Touch the “Speed Dial” switch to display the “Speed Dial Settings” screen.

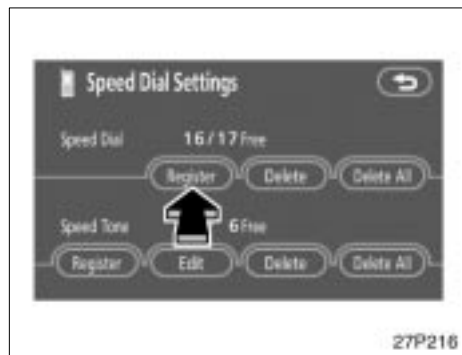

 2. Touch the “Register” switch of “Speed Dial”.

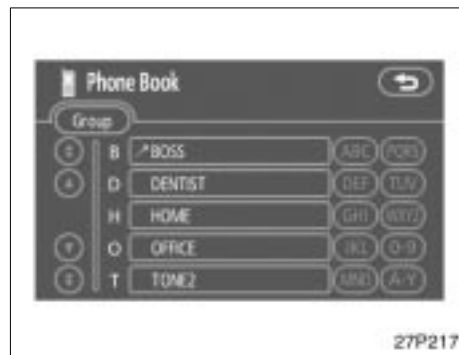

3. Select the data you want to register.

 


4. Touch the desired telephone number.




5. Touch the switch you want to register in.

The latest dialed number is registered in the 6th item (speed redial).

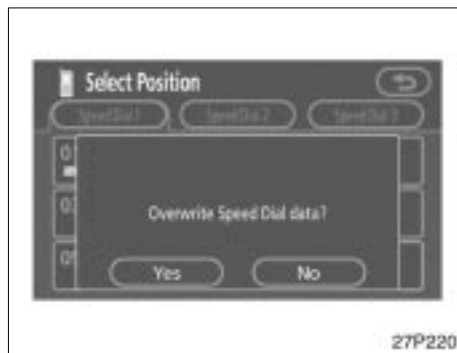

6. If you select a switch you registered before, this screen is displayed.

 
Touch the “Yes” switch if you want to overwrite it.

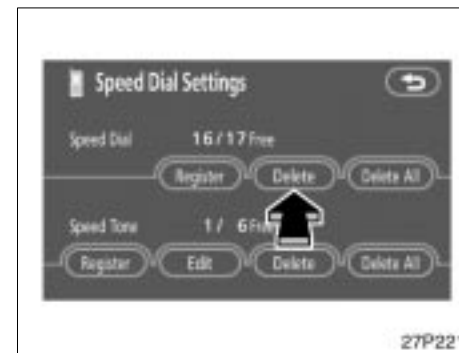

● Deleting the speed dial individually
You can delete “01” – “17” of the speed dial individually.

If you delete them all at once, all of 17 numbers are deleted.

 
1. Touch the “Delete” switch of “Speed Dial”.

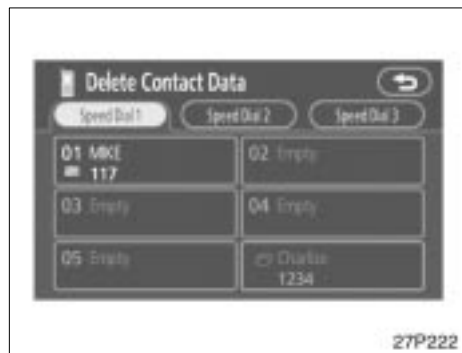


2. Touch the switch you want to delete.



 
3. Touch the “Yes” switch.

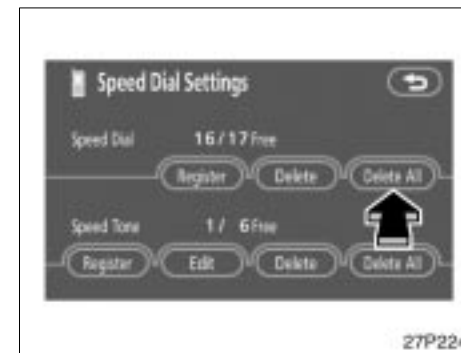

 ● Deleting all of the speed dial
1. Touch the “Delete All” switch of “Speed Dial”.

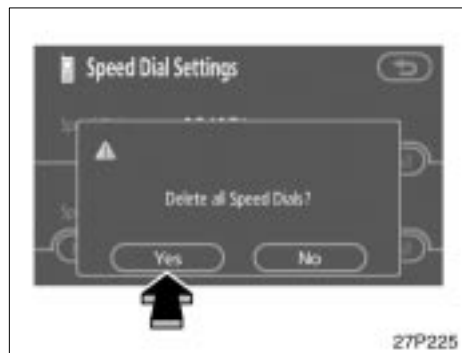

 2. Touch the “Yes” switch.

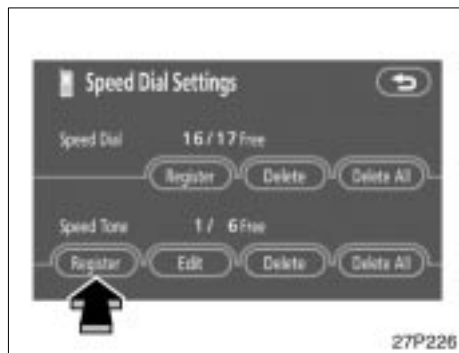

(b) Registering the speed tone

You can register the desired tone number. Up to 6 speed tone numbers can be registered.

 
1. Touch the “Register” switch of “Speed Tone”.




2. Use the software keyboard to input the name.




3. Input the number and touch “OK”.

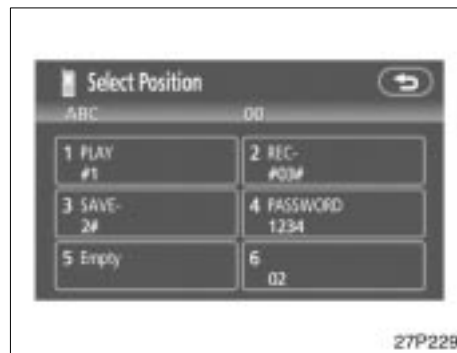

 
4. Touch the desired switch you want to register in.

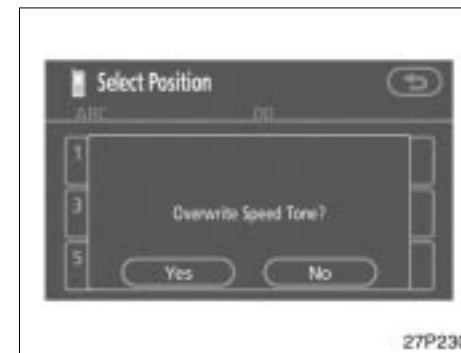

 5. If you select a switch you registered before, this screen is displayed. Touch the “Yes” switch if you want to overwrite it.

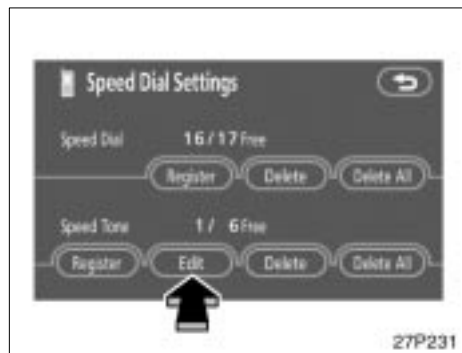

 - Editing the speed tone.
- You can edit the speed tone.
1. Touch the “Edit” switch of “Speed Tone”.

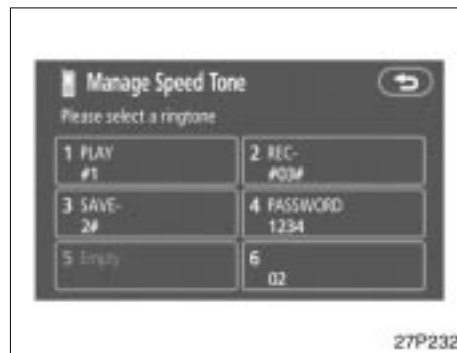


2. Touch the switch you want to edit.



3. Use the software keyboard to input the name.



 
4. Input the number and touch “OK”.

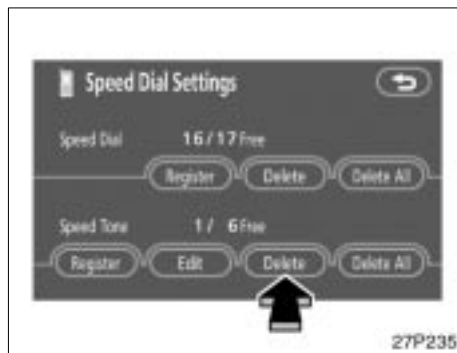

● Deleting the speed tone individually.
You can delete “1” to “6” of the speed tone.

If you delete them all at once, all of 6 numbers are deleted.

 
1. Touch the “Delete” switch of “Speed Tone”.

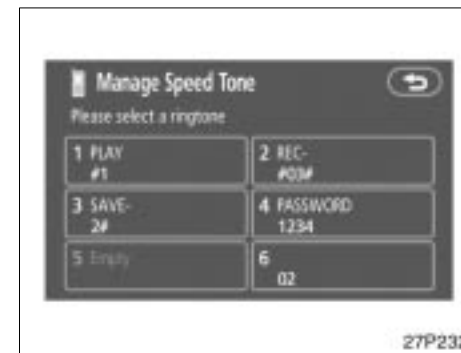


2. Touch the switch you want to delete.



 
3. Touch the “Yes” switch.

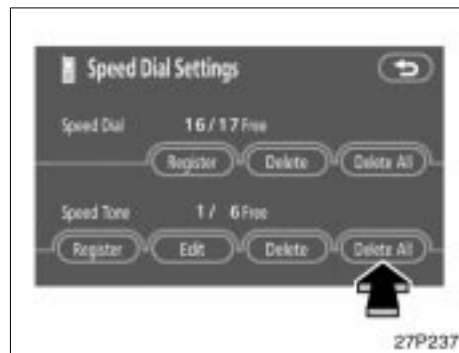

 ● Deleting all the speed tone
1. Touch the “Delete All” switch of “Speed Tone”.

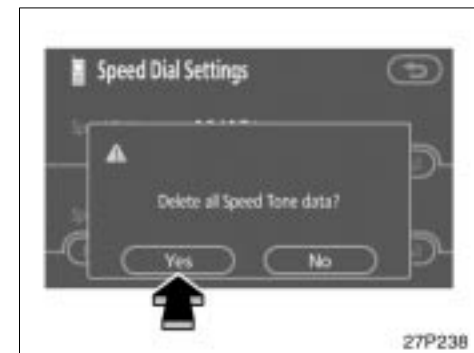


 2. Touch the “Yes” switch.

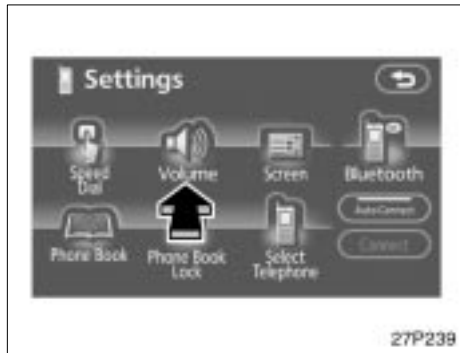

(c) Setting the volume

 1. Touch the "Volume" switch to display the "Volume Setting" screen.

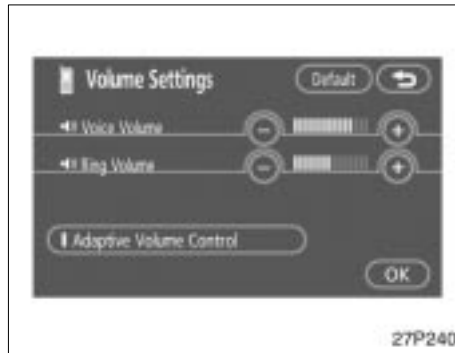

2. Touch the "-" or "+" switch to adjust the "Voice Volume" or "Ring Volume".

 
Voice Volume ... adjusting the other party's voice.

Ring Volume ... adjusting the ring volume.


- Automatic volume settings for high speed

You can set the volume one step up when the vehicle speed is over 80 km/h (50 mph). (When it is under 70 km/h (44 mph), previous volume is back.)

Each time you touch the "Adaptive Volume Control" switch, you can switch on or off.

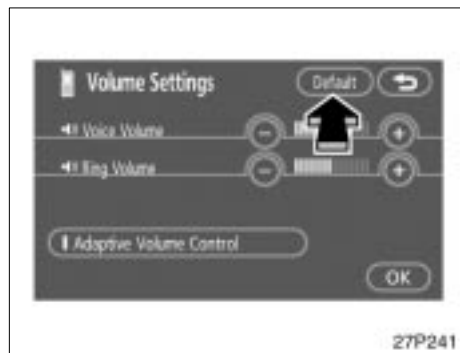

 
- Initializing the settings
You can initialize the settings.
Touch the “Default” switch.

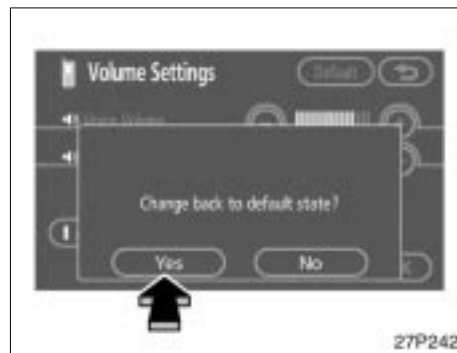


Touch the “Yes” switch.



 - (d) Setting the screen
1. Touch the “Screen” switch to display the “Screen Settings” screen.

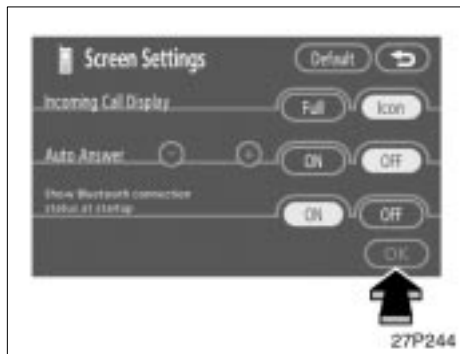

 2. Do the detailed settings of the screen and touch “OK”.

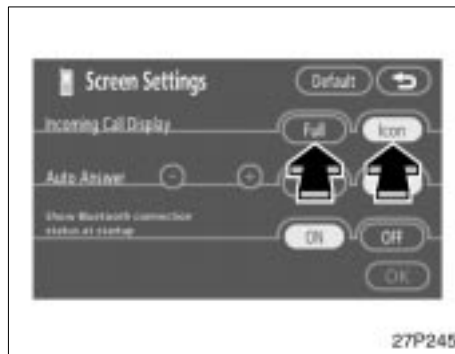


● Receiving Call Display

You can select the method of the receiving call display.

Touch the “Full” or “Icon” switch.

Full mode When a call is received, the hands-free screen is displayed and you can operate it on the screen.


Icon mode The message is displayed on the upper side of the screen. You can only operate the steering switch.

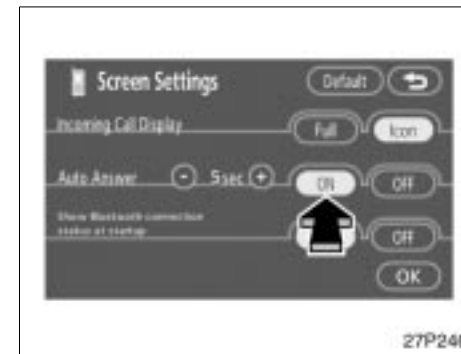 

● Auto answer


When a call is received, the display automatically changes to the talking screen and you can start to talk on the phone (without touching any switch) after the preset time.

 Touch the “ON” switch of “Auto Answer” and “-” or “+” switch to adjust the waiting time of auto answer within 1 – 60 seconds.

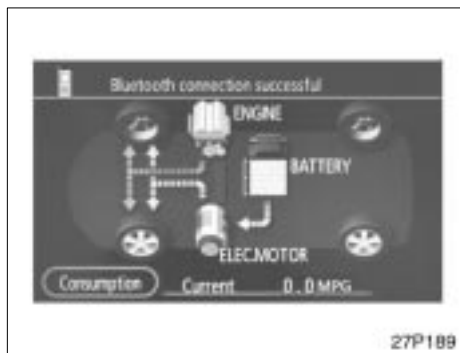


- The Bluetooth® connection status at startup

 When you turn the “POWER” switch to “ACC” or “IG-ON” and the Bluetooth® is automatically connected, the connection check is displayed.

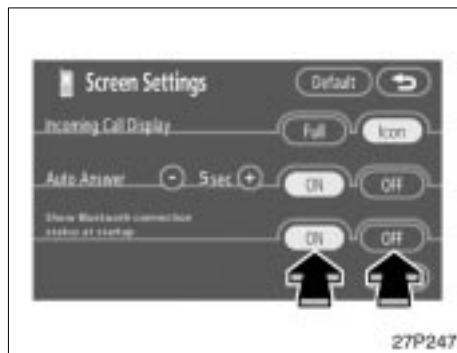

 Touch the “ON” or “OFF” switch of Show Bluetooth® connection status at startup.

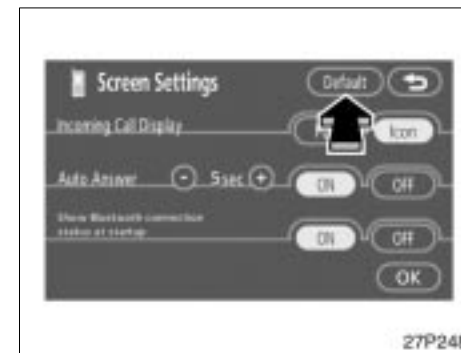

- Initializing the settings
You can initialize the settings.
Touch the “Default” switch.



 
Touch the “Yes” switch.



(e) Setting the phone book

You can register phone numbers in the phone book.

Touch the “Phone Book” to display the “Phone Book Management” screen.

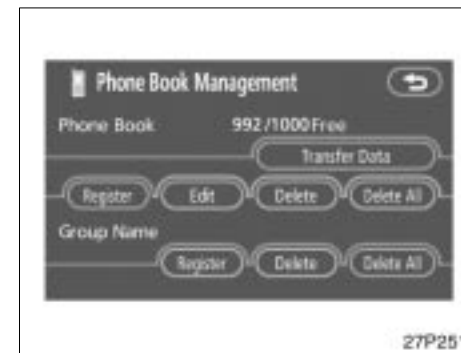

You can do the detailed settings of phone book.



 
● **Transferring a telephone number**
 You can transfer the telephone numbers in your Bluetooth® phone to the system. Up to 1000 person's data (up to 2 numbers a person) can be registered in the phone book.

Transfer it while the engine is running.

1. Touch the "Transfer Data" switch to display "Select Group" screen.



2. Select the group you want to transfer the data to.

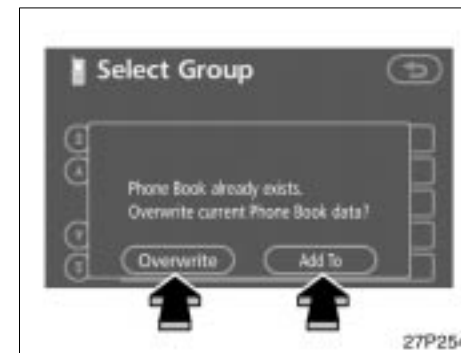

3. Touch the "Overwrite" or "Add To" switch.



4. Transfer the phone book data to the system using the Bluetooth® phone.

This screen appears while transferring. To cancel it, touch the “Cancel” switch. If the transferring is interrupted on the way, the phone book data transferred until then can be memorized in the system.



 
5. When this screen is displayed, the transfer is completed.




When this screen is displayed, try the transfer operation again.




- Registering the phone book data
You can register the phone book data.
1. Touch the "Register" switch.

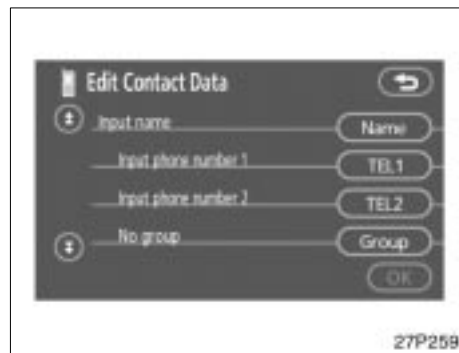

 2. Touch the desired switch to edit the phone book.

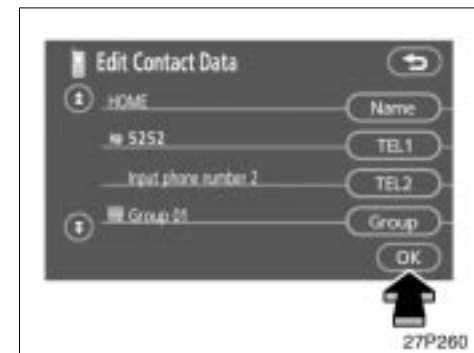

 3. When you complete the edit, touch the "OK" switch.

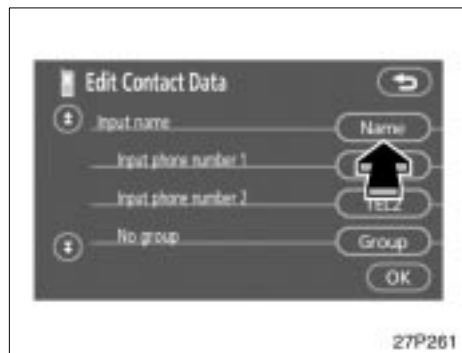


- Editing the name

When you do not input the name, the number is displayed.

1. Touch the “Name” switch.



 
2. Use the software keyboard to input the name.

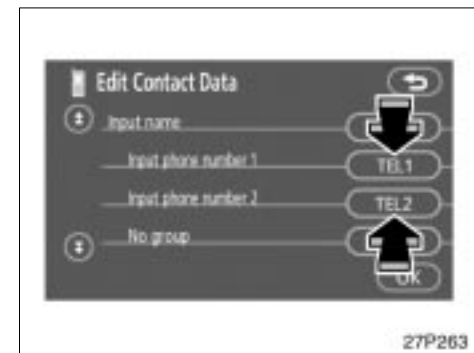

- Editing the phone number

You can register a phone number in “TEL1” and “TEL 2” separately. Up to 2 numbers a person can be registered.

 
1. Touch the “TEL 1” or “TEL 2” switch.

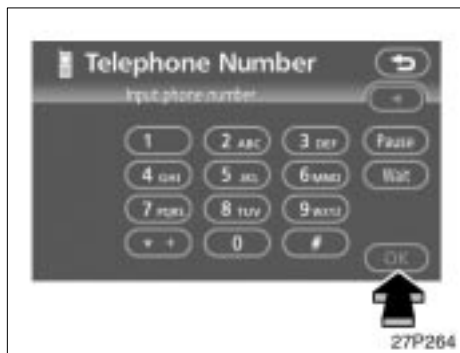

2. Input the number and touch "OK".



 3. Select the desired icon.

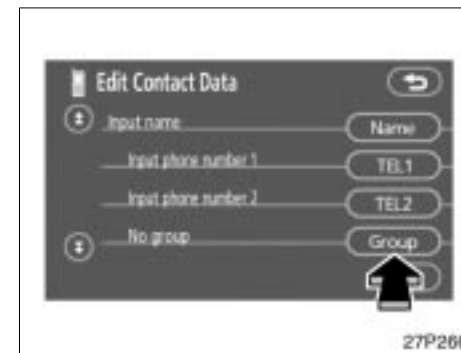

● Selecting the group

You can set a group for a contact (for example: "Family", "Friends", "Office"...). It will then be easier for you to find this contact when needed, by using the group display.

You can select "No group" or "Group 01" to "Group 19".

"No group" is displayed if you do not set the group.

1. Touch the "Group" switch.



2. Select the desired group.



● Setting the voice recognition

You can set the voice recognition. Up to 20 numbers can be registered for the voice recognition.

1. Touch the “Voice Rec.” switch.



2. Select the phone number and touch the “REC” switch to record a voice tag.



 
3. Touch the “PLAY” switch to play the voice tag.

If you want to delete it, touch the “Delete” switch and “OK”.




● Adding data to the phone book
You can add data to the phone book.


1. Touch the “Add to” switch.

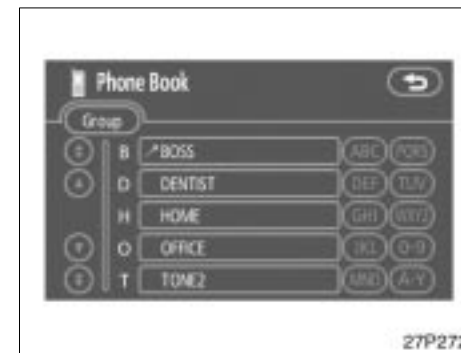

 
2. Select the data you want to add log data to.

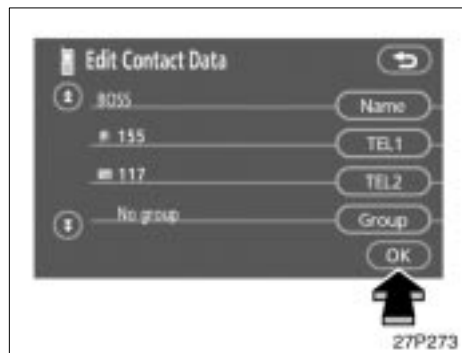

 
3. Confirm the added data on the screen and touch "OK".

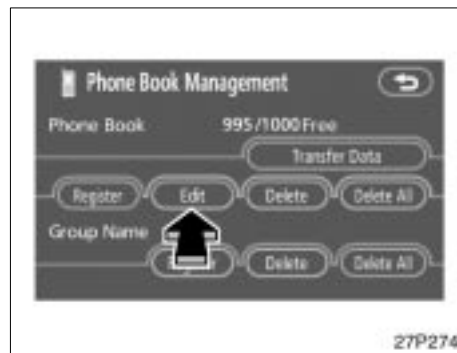

 ● Editing the data
You can edit the registered data.
1. Touch the "Edit" switch.

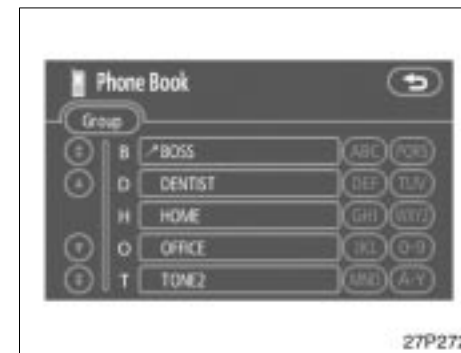

 
2. Select the data you want to edit.

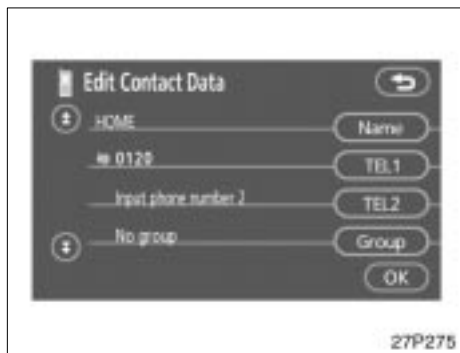

3. Touch the desired switch.
When you edit the data, touch "OK".



 When you also touch the "Edit" switch on this screen, you can edit it.

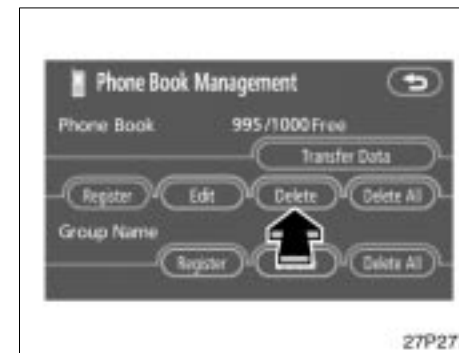


- Deleting the data


You can delete the data.

When you release your vehicle, delete all your data on the system.

 1. Touch the "Delete" switch of "Phone Book".

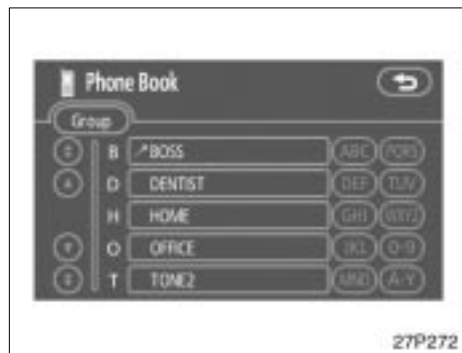

 2. Touch the desired switch.

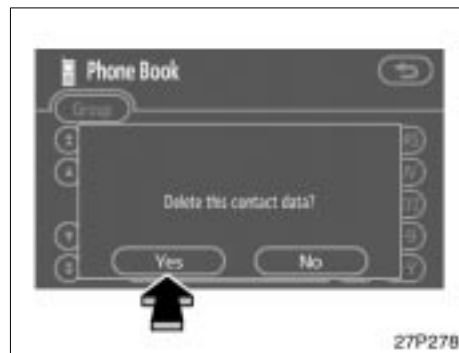


3. Touch the "Yes" switch.



You can also delete it in the following way.

 1. Touch the "Phone Book" switch.

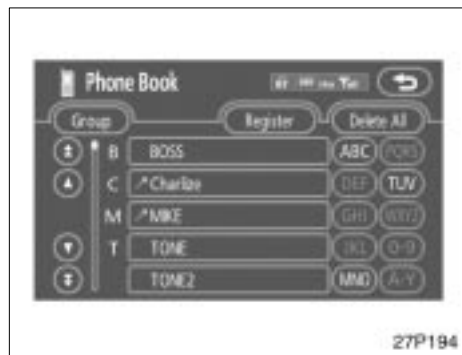

2. Select the desired data.



3. Touch the "Delete" switch.



4. Touch the "Yes" switch.



 
- Deleting all the phone data
- 1. Touch the “Delete All” switch of “Phone book”.



- 2. Select the deleting method.
- Group Data deleting all the phone data in group
- All Contact Data . . deleting all the phone data
- 3. When you select “Group Data”, the “Select Group” screen is displayed.



- 4. Select the desired group.

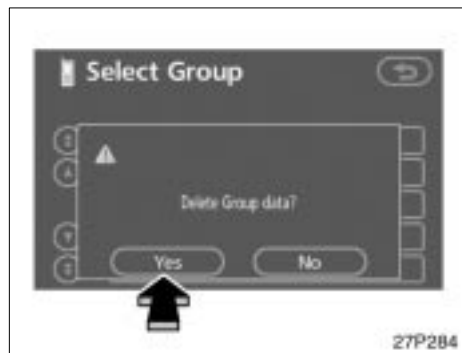


5. Touch the “Yes” switch.



You can also delete it in the following way.

 1. Touch the “Phone Book” switch.

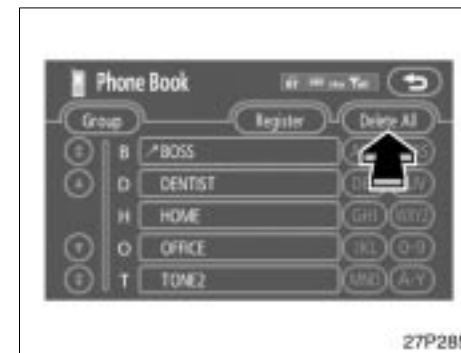

2. Touch the “Delete All” switch.



3. Touch the “Yes” switch.



● Registering a group name

 
You can register 20 groups. “No Group”, “Group 01” – “Group 19” are registered by default.

You can change “Group 01” – “Group 19” into desired names.

1. Touch the “Register” switch of “Group name”.




2. Select the group you want to register.

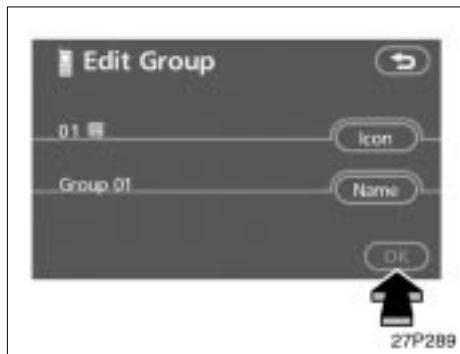

3. When you complete all the edit, touch the “OK” switch.



 ● Selecting a group icon
1. Touch the “Icon” switch.

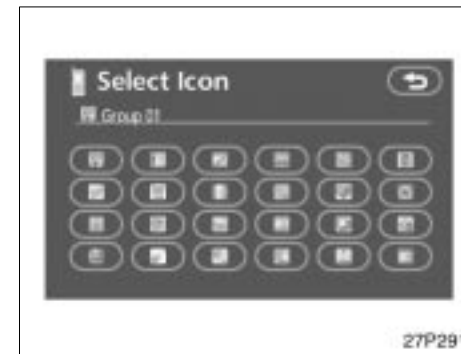


2. Select the desired icon.



- Editing a group name
1. Touch the “Name” switch.



 
2. Use the software keyboard to input the name.

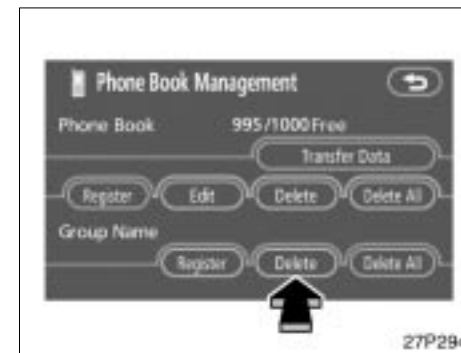


- Deleting a group name
- You can delete the group names individually or all at once. If you delete a group name, that group will return to the default setting. (excluding “No Group”)
1. Touch the “Delete” switch of “Group Name”.



 2. Select the group you want to delete the name of.

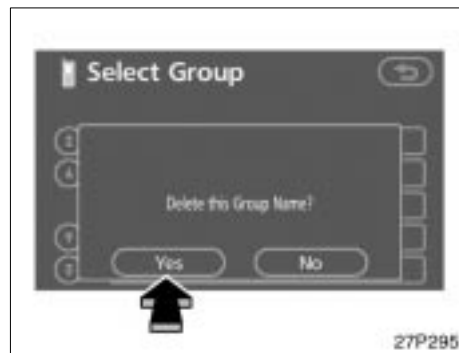

 
3. Touch the "Yes" switch.

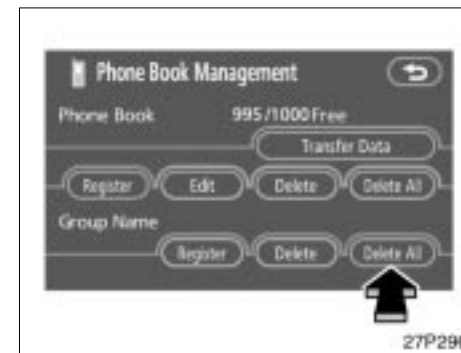

● Deleting all the group names
1. Touch the "Delete All" switch of "Group Name".



 2. Touch the “Yes” switch.

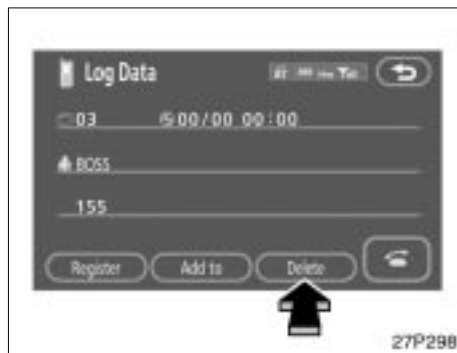


● Deleting the log data

You can delete the log data individually or all at once.


When you release your vehicle, delete all the data on the system.

a) individually

 1. Touch the “Delete” switch on the “Log Data” screen.

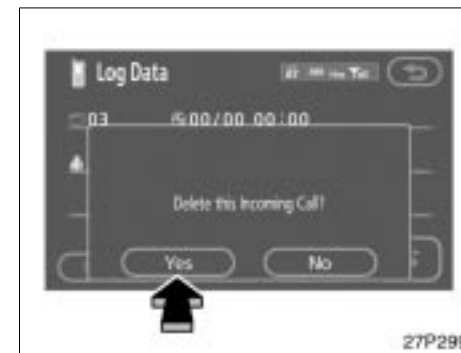

 2. Touch the “Yes” switch.

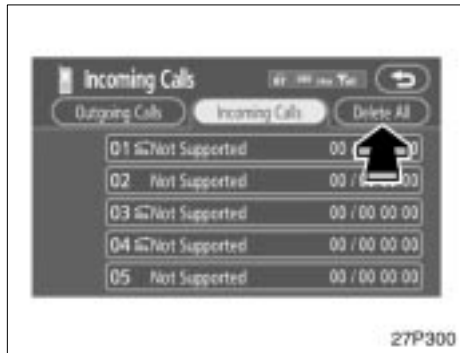

b) all at once

 
1. Touch the “Delete All” switch on the “Outgoing Calls” or “Incoming Calls” screen.

2. Touch the “Yes” switch.

(f) Setting the security

When you set the security, you can prevent people from using some functions of the hands-free system. It is useful when you leave your vehicle with the hotel or you do not want others to see the data you registered.


When you set or unlock the security, you have to input the security code. Be sure to change the default code when you use the security for the first time.

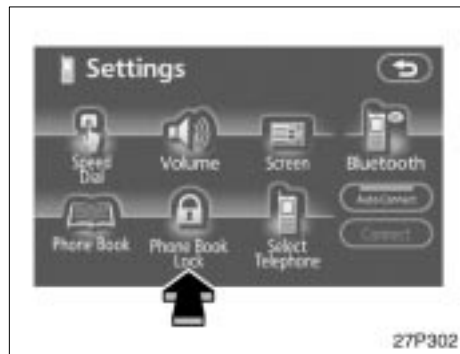


- Changing the security code
- The security code is 4 digits and the default is "0000".
1. Touch the "Phone Book Lock" switch.



 2. Touch the "Change" switch.

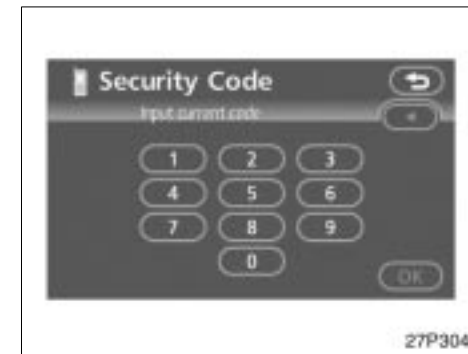

 3. Input the security code.
- Choose a new code that is hard for other people to know.
- When you change the security code, do not forget the code. The dealers cannot unlock the security when you forget it.
- If you forget the security code, initialize your personal data. (See "Initializing the security code" on page 226.)
- Each time you touch "◀", an inputted digit is deleted.

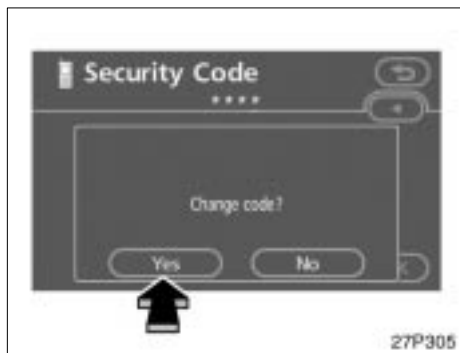


4. Touch the “Yes” switch.

● Phone Book Lock


When you set the phone book lock, you can have the following functions locked.

- Display of the phone book screen and transferring, registering, editing, deleting the phone book data.
- Display of speed dial screen, registering, deleting the speed dial and speed dialing.
- Display of the other party’s name for calls being received or made.
- Display of dialed numbers screen and received calls screen, deleting dialed numbers and received numbers.
- Display of phone information screen.
- Changing the security code.

 When you set this function, the speed dial screen is not displayed while you are driving.

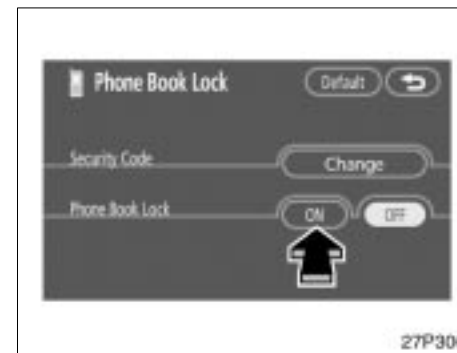

 
1. Touch the “ON” switch.

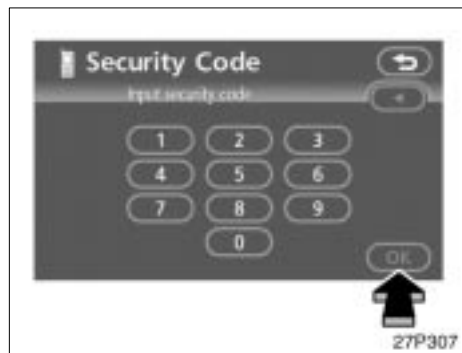

2. Input the security code and touch "OK".



 ● Initializing the security code
You can initialize the settings.
1. Touch the "Default" switch.

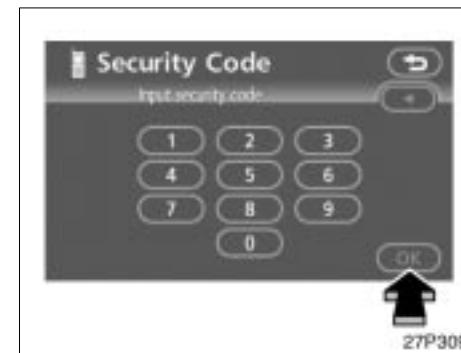

2. Input the security code and touch "OK".

—Setting a Bluetooth® phone



 
3. Touch the “Yes” switch.



(a) Selecting a Bluetooth® phone

In case you register more than one Bluetooth® phone, you need to choose a favorite one.

1. Touch the “Settings” switch to display “Settings” screen.

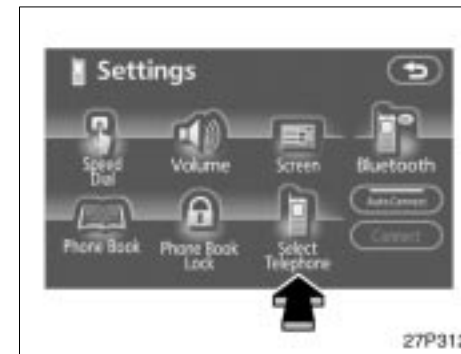

2. Touch the “Select Telephone” switch to display “Select Telephone” screen. You can select the Bluetooth® phone from a maximum of 6 numbers.

“Empty” is displayed when you have not registered a Bluetooth® phone yet.

 
Bluetooth® mark is displayed when you choose the phone.




Although you can register up to 6 Bluetooth® phones in the system, only one Bluetooth® phone can function at a time.



3. Touch the “OK” switch.

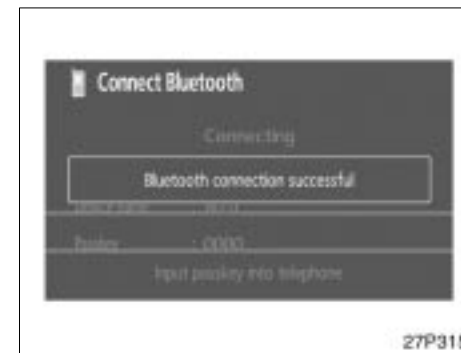

 When the result message is displayed, you can use the Bluetooth® phone.

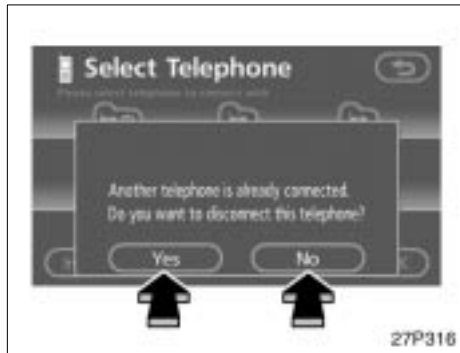

When another Bluetooth® phone is trying to connect, this screen is displayed. Touch the “Yes” or “No” switch.

(b) Displaying Bluetooth® information

You can see or set the information of the Bluetooth® phone on the system.

Device Name .. the name of the Bluetooth® phone which is displayed on the screen. You can change it into a desired name.

Bluetooth® Device Address the address peculiar to the system. You cannot change it.



 
1. Select the desired phone and touch the “Information” switch.



2. Touch the “Change” switch.



3. When you complete the setting, touch “”.

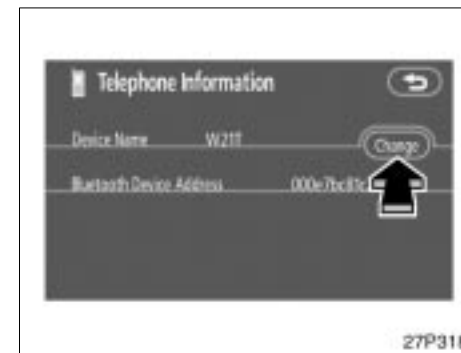

(c) Changing a Device Name

You can change a device name. If you change a device name, the name registered in your cellular phone is not changed.

1. Touch the “Change” switch.



2. Use the software keyboard to input the device name.

(d) Changing the Bluetooth® settings

 
You can change the display and settings of Bluetooth® information on the system.

The information displays the following items.

Device Name .. the name in the Bluetooth® network. You can change it.

Passkey the password when you register your cellular phone in the system. You can change it into the figure of 4–8 digits.


Bluetooth® Device Address the address peculiar to the system. You can not change it. If you have registered two Bluetooth® phones with the same Device Name or Passkey and you cannot distinguish one from the other, refer to it.

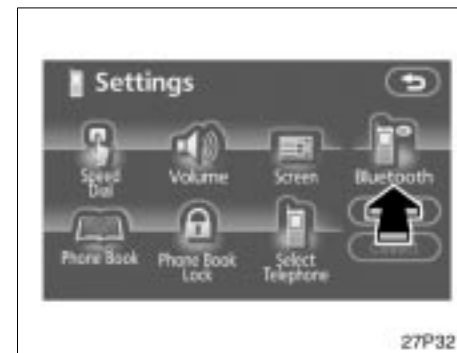

When you change the device name or Passkey, do the following.

1. Touch the “Bluetooth*” switch.

 
*: Bluetooth is a registered trademark of Bluetooth SIG. Inc.

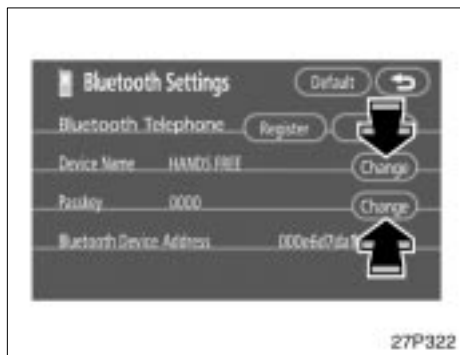


2. Touch the “Change” of “Device Name” or “Passkey”.



 
3. Use the software keyboard to input the device name.
You can input up to 20 characters.

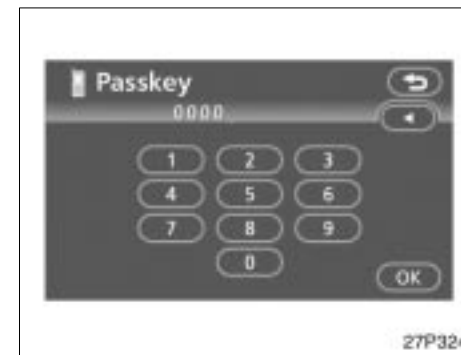

 4. Input a Passkey with 4 – 8 digits.
When you touch “◀”, the inputted digit is deleted.

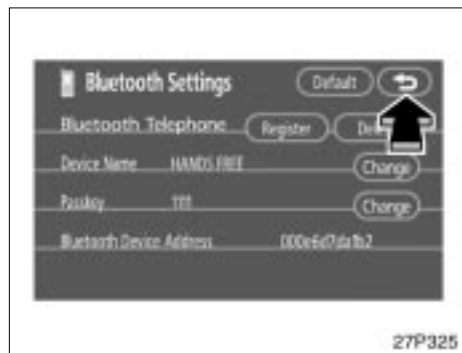

 
5. When you complete the setting, touch “”.

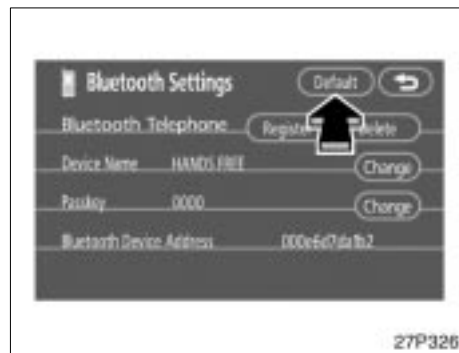

(e) Initializing the Bluetooth® settings. You can initialize the settings.
1. Touch the “Default” switch.



 2. Touch the “Yes” switch.

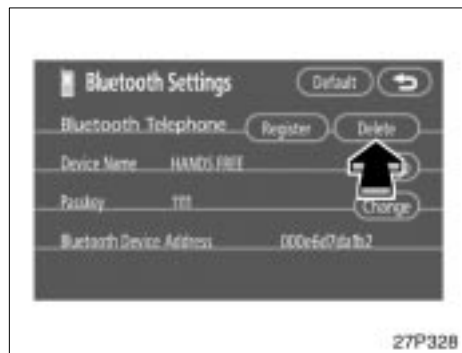


(f) Deleting a Bluetooth® phone

1. Touch the “Delete” switch of “Bluetooth* Telephone”.

*: Bluetooth is a registered trademark of Bluetooth SIG, Inc.



 2. Select the telephone you want to delete and touch “OK”.

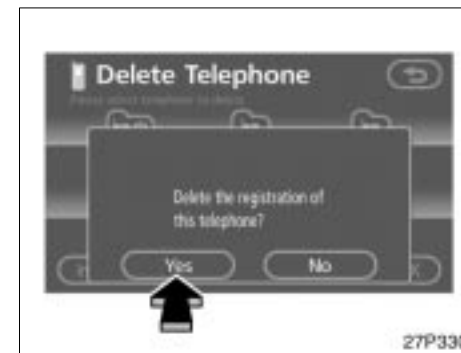

3. Touch the “Yes” switch.



When you delete the telephone while another Bluetooth® phone is connected, this message is displayed.
Touch the “Yes” switch.



(g) Displaying the information of the Bluetooth® phone you delete

 
You can display the information of the Bluetooth® phone before you delete it and you can make sure whether the telephone you delete is correct or not.

1. Select the telephone you want to display the information about.



2. When you complete confirming it, touch “”.

—Speech command system

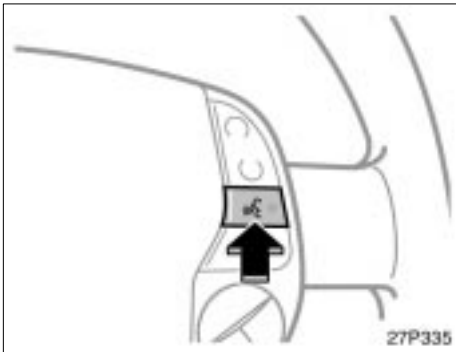

The speech command system enables you to operate the hands-free system by giving a command.

1. Push the speech command switch.

A beep sounds and on-screen message is displayed with an indicator at the top left.



2. Give a command while an indicator is shown in the display. If you want to check the command list, touch the “Help” switch to display the Help screen. (See “Help screen” on page 237.) When you touch the “Cancel”, the previous screen returns.

If the hands-free system does not respond or the confirmation screen does not disappear, push the speech command switch and try again.

If no command is given, a beep sounds and the indicator disappears 6 seconds later.

If the system does not recognize your speech, the system will respond with this message (“System does not recognize this command, rephrase your command.”). Start the operation from the beginning.

 


Microphone

It is unnecessary to speak directly into the microphone when giving a command.

—Help screen

This system has a function which displays the voice recognition help screen. You can see the command list and operating guide on it.

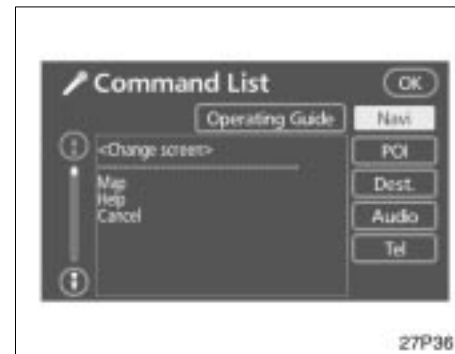


(a) Command List

1. Touch the “Command List” tab on the upper side of the screen.
2. Select the desired category by touching the buttons on the right side of the “Command List” screen.*
3. You can scroll through the command list by touching “▲” or “▼” switch.

*: For the vehicles without Navigation System, “Tel” only is shown.

Touch the “OK” switch after you check it.

 Adjustment

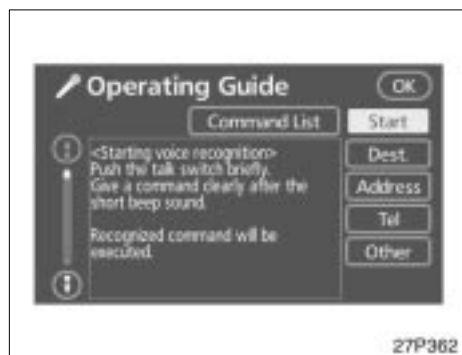


(b) Operating Guide

1. Touch the "Operating Guide" tab on the upper side of the screen.
2. Select the desired category by touching the buttons on the right side of the "Operating Guide" screen.*
3. You can scroll through the list of the operating guide by touching "▲" or "▼" switch.

*: For the vehicles without Navigation System, "Tel" only is shown.

 Touch the "OK" switch after you check it.

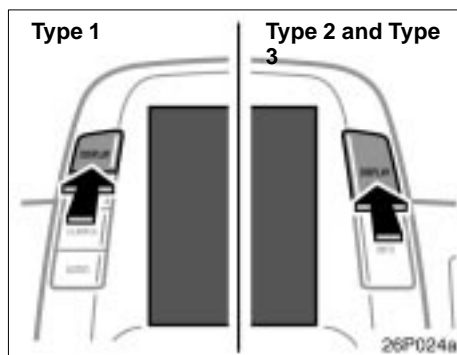

Push the "DISPLAY" button to display the "Display" screen.



Type 1 and Type 2



Type 3

Contrast and brightness adjustment

CONTRAST “+”:

Strengthens the contrast of the screen.

 
CONTRAST “-”:

Weakens the contrast of the screen.

BRIGHTNESS “+”: Brightens the screen.

BRIGHTNESS “-”: Darkens the screen.

The screen turns off when you touch the “SCREEN OFF”. To turn the display screen back on, push any bezel switch such as “INFO”, etc. The selected screen appears.

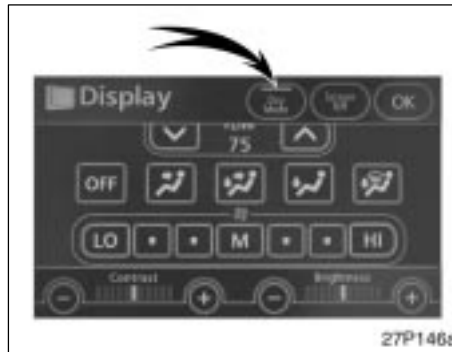

Type 1 and Type 2



Type 3

 
Depending on the position of the headlight switch, the screen changes to the day mode or night mode.

To display the screen in the day mode even with the headlight switch on, touch “DAY MODE” on the adjustment screen for brightness and contrast control.


However, if the km/h or MPH button is on, mode switching cannot be done. It remains in the day mode. In this case, “DAY MODE” is not shown on the screen.

If the screen is set in the day mode with the headlight switch turned to on, this condition is memorized in the system even with the hybrid system turned off.

Outside temperature display

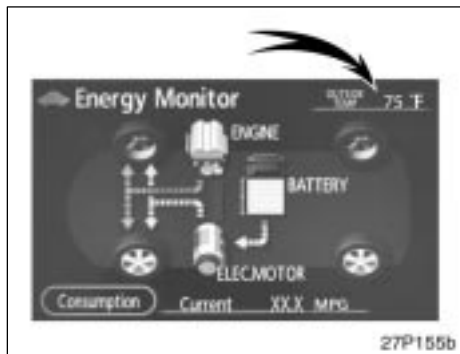


Type 1 and Type 2

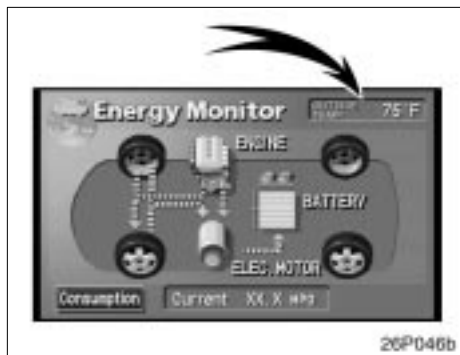 


Type 3

The outside temperature is shown ranging from -30°C (-22°F) up to 50°C (122°F) at the upper right of the energy consumption or energy monitor screen or the upper left/right of the air conditioner screen.

Separate to the above screen, when the outside temperature drops below 3°C (37°F), * and the outside temperature are displayed in the upper portion of the screen for a few seconds.

(This outside temperature is displayed even if on the map screen etc.)

*:  may not be displayed depending on the display type.