

Last Modified: 5-3-2010	6.4 A	From: 200904
Model Year: 2010	Model: Prius	Doc ID: RM000000VYC00FX
Title: HYBRID / BATTERY CONTROL: BATTERY BLOWER: REMOVAL (2010 Prius)		

REMOVAL

1. REMOVE REAR SEAT CUSHION ASSEMBLY

[INFO](#)

2. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY

[INFO](#)

3. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY

[INFO](#)

4. REMOVE REAR NO. 1 FLOOR BOARD

[INFO](#)

5. REMOVE REAR FLOOR BOARD SPACER

[INFO](#)

6. REMOVE NO. 1 HYBRID BATTERY EXHAUST DUCT

[INFO](#)

7. REMOVE REAR DOOR SCUFF PLATE RH

HINT:

Use the same procedure described for the LH side

[INFO](#)

8. REMOVE REAR SIDE SEAT BACK ASSEMBLY RH

[INFO](#)

9. REMOVE NO. 1 HYBRID BATTERY INTAKE DUCT


[INFO](#)

10. REMOVE BATTERY COOLING BLOWER ASSEMBLY


NOTICE:

- Be sure not to touch the fan part of the battery cooling blower assemblies.
- Do not lift the battery cooling blower assemblies using the wire harness.

(a) Disconnect the 3 wire harness clamps.

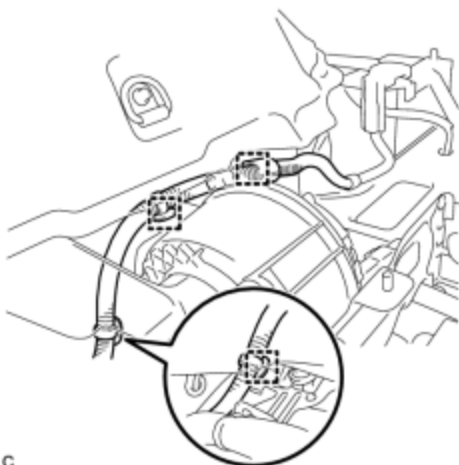

c

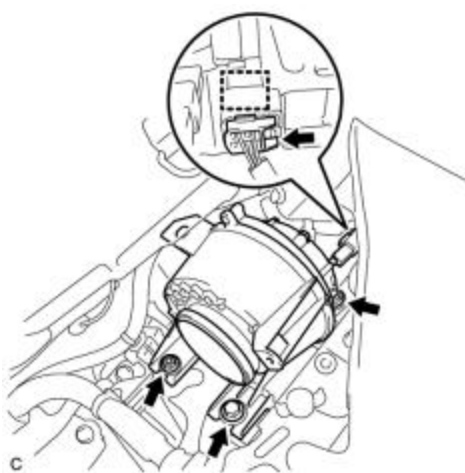

c

(b) Disconnect the battery cooling blower assembly connector and clamp.

(c) Remove the 2 bolts, nut and battery cooling blower assembly.

