

⚠ WARNING

To reduce the risk of fire, electric shock, or injury to persons when using your product, basic safety precautions should be followed, including the following. Read all instructions before using this appliance.

1. When connecting the power

 
The dedicated outlet should be used.

- Using several devices at one outlet may cause fire.
- The electric leakage breaker may damage food and the dispenser may be leaked.




Do not allow the power cord bent or pressed by the heavy object to be damaged.

It may damage the power cord to cause fire or electric shock.

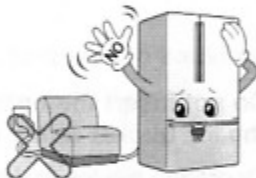

Unplug the power plug when cleaning, handling or replacing the interior lamp of the refrigerator.

 - It may cause electric shock or injury.
- When replacing the interior lamp of the refrigerator, make sure that the rubber ring for preventing the electric spark within the socket is not taken off.

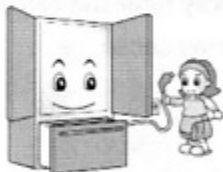

Remove water or dust from the power plug and insert it with the ends of the pins securely connected.

Dust, water or unstable connection may fire or electric shock.



When the power cord or the power plug is damaged or the holes of the outlet are loosed, do not use them.

It may cause electric shock or short circuit to make fire.



 
Do not allow the power plug to face upward or to be squeezed at the back of the refrigerator.

Water may be flown into or the plug may be damaged, which causes fire or electric shock.



Do not extend or modify the length of the power plug.

It causes electric shock or fire by the electric damage of the power cord or others.

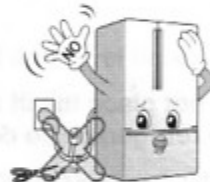


Do not pull out the cord or touch the power plug with wet hands.

- It may cause electric shock or injury.



Make sure of grounding.

 The incorrect grounding may cause breakdown and electric shock.

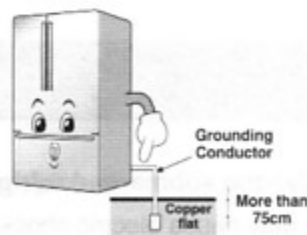

IMPORTANT SAFETY INSTRUCTIONS

2. When using the refrigerator

Do not place the heavy object or the dangerous object (container with liquid) on the refrigerator.

It may be dropped to cause injury, fire or electric shock when opening or closing the door.



Do not cling to the door or the shelves of the door or the home bar of the freezer or the cool chamber.

It may make the refrigerator fallen down or damage the hands. Especially, do not allow the children to do the above.



Do not place the lit candle within the refrigerator to deodorize.

It may cause explosion or fire.

 


Do not store the medicine or the academic materials at the refrigerator.

When the material with the strict temperature control is stored, it may be deteriorated or it may make an unexpected reaction to cause any risk.




Avoid the heating devices.
It may cause fire.

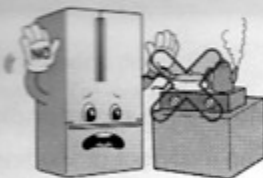


Use the submerged refrigerator after checking it.

 It may cause electric shock or fire.

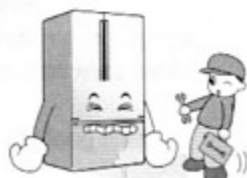


Do not install the refrigerator in the wet place or the place which water or rain splashes.

 Deterioration of insulation of electric parts may cause electric leakage.

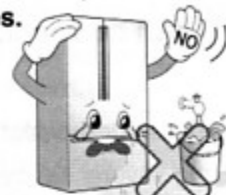

Do not use or store inflammable materials ether, benzene, alcohol, medicine, LP gas, spray or cosmetics near or in the refrigerator.

 It may cause explosion or fire.

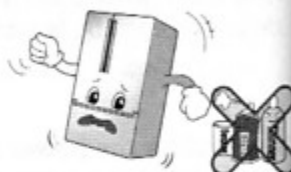


Do not insert the hands into the ice bucket or the ice dispenser.

Operating the ice maker may cause injury.




Do not use the combustible spray near the refrigerator.

 It may cause fire.

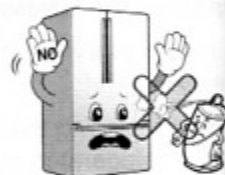


Do not place flower vase, cup, cosmetics, medicine or any container with water on the refrigerator.

 It may cause fire, electric shock or injury by dropping down.

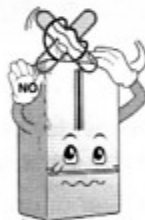

When gas is leaked, do not touch the refrigerator or the outlet and ventilate the room immediately.

 - The explosion by spark may cause fire or burn.
- Because this refrigerator uses natural gas (isobutene, R600a) as the environment-friendly refrigerant, even a small amount (80~90g) is combustible. When the gas is leaked by the severe damage during delivering, installing or using the refrigerator, any spark may cause fire or burn.

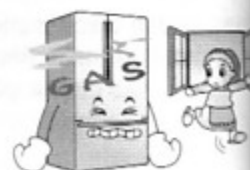

IMPORTANT SAFETY INSTRUCTIONS

2. When using the refrigerator

 
Do not spray water at the outside or the inside of the refrigerator or do not clean it with benzene or thinner.

Deterioration of insulation of electric parts may cause electric shock or fire.



Do not allow any person except the qualified engineer to disassemble, repair or alter the refrigerator.

It may cause injury, electric shock or fire.

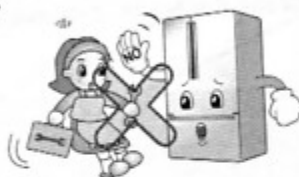


When disposing the refrigerator, remove the packing materials from the door.

It may cause to lock out the child.




Do not insert the hands or the metal stick into the exit of cool air, the cover, the bottom of the refrigerator, the heatproof grill (exhaust hole) at the backside.

 It may cause electric shock or injury.

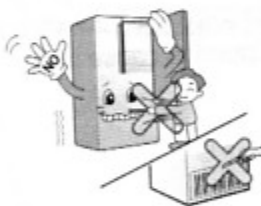

When any strange smell or smoke is detected from the refrigerator, disconnect the power plug immediately and contact to the service center. Service center

 It may cause fire.

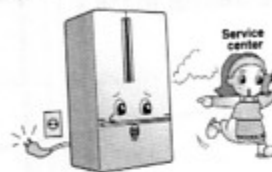


Do not use the refrigerator for non-domestic purpose (storing medicine or testing material, using at the ship, etc.).

It may cause an unexpected risk such as fire, electric shock, deterioration of stored material or chemical reaction.



Install the refrigerator on the solid and level floor.

 Installing it on the unstable place may cause death by falling down the refrigerator when opening or closing the door.

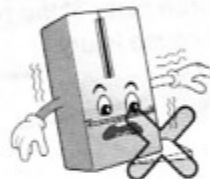

When you want to dispose the refrigerator, contact to the down-block office.

When you want to dispose the large living waste such as electric home appliance and furniture, you'd better contact the local down-block office.

 


⚠ CAUTION

Violating this direction may cause injury or damage house or furniture. Always be careful, please.


Do not touch food or containers at the freezer with wet hands.

It may cause frostbite.

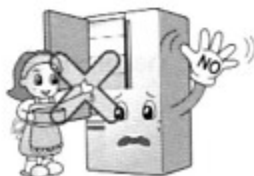

Do not put ice in thin crystal cup or ceramic ware.

 It may break cup or ceramic ware to cause injury.

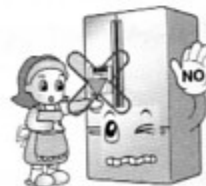

⚠ CAUTION

Wait for 5 minutes or longer when reconnecting the plug.

It may cause the operation of the freezer to fail.



Pull out the power plug not by grasping the cord but the plug of its end.

It may cause electric shock or short circuit to fire.



Do not insert the hands into the bottom of the refrigerator.

The iron plate of the bottom may cause injury.



Because opening or closing the door of the refrigerator may cause injury to the person around it, be careful, please.

Opening or closing the door may cause feet or hands to be caught in the chink in door or the child to be get hurt by the corner.

 


Do not put any living animal in the refrigerator.



Supply the automatic ice maker with drinkable water only (only for the model with the dispenser).

Otherwise, it may cause any risk.

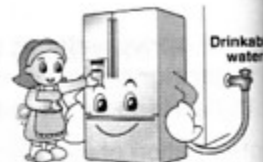


Do not put bottle in the freezer.

It may freeze the contents to break the bottle to cause injury.




Do not install the refrigerator in the wet place or the place which water or rain splashes.

 Deterioration of insulation of electric parts may cause electric leakage.

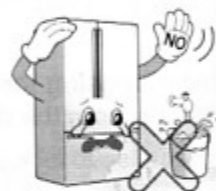

Carry the refrigerator with the handle bar at the bottom of the front and the top of the rear.

 Otherwise, your hands may be slipped to cause injury.

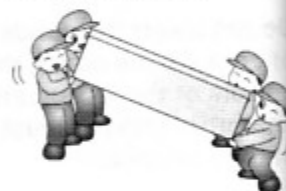

Do not place
across the
contents
the top

FRUAS A