


## 1-4. Adjustable components (seats, mirrors, steering wheel) Head restraints

Head restraints are provided for all seats.

### ► Front seats

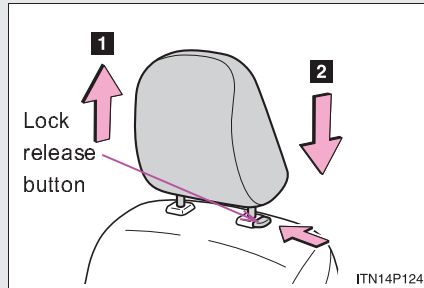

Vertical adjustment


#### 1 Up

Pull the head restraints up.

#### 2 Down

Push and hold the lock release button when lowering the head restraint.

### ► Rear center seat

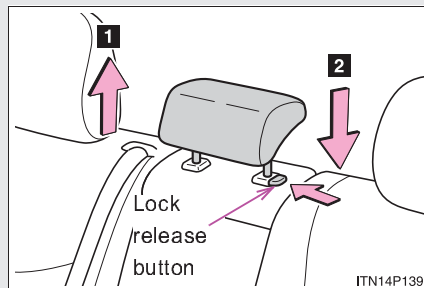


Vertical adjustment

#### 1 Up

#### 2 Down

Push the head restraint up or down while pressing the lock release button.

### ► Rear outboard seats (foldable type only)

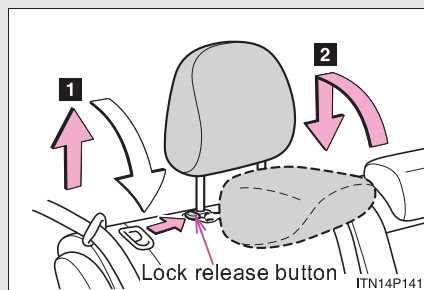

#### 1 To fold

Push the head restraint up while pressing the lock release button.

#### 2 To use

Lift up and push down the head restraint to the lowest lock position.