

## CIRCUIT DESCRIPTION

The HV ECU detects the malfunction of the generator inverter current sensor. It detects the malfunction of the sensor system, not of the high voltage system.

### DTC P3125 – Information code 344, 345

INF. Code.	Detecting Condition	Trouble Area
344	Failure in monitoring generator torque performance	• Converter & inverter assembly
345	Abnormal current value of generator	

## INSPECTION PROCEDURE

If the information code 344 or 345 is output, check if other DTC or information codes are recorded. If they are recorded, check and repair those codes first.

If the information code 344 or 345 alone is recorded, replace the converter & inverter assembly.