

Courtesy Toyota Motor Sales (TMS) USA, Inc.

#### Working at foglight:

- Disengage 3 claws (**inset**) and press foglight housing forward to disengage.
- Detach foglight electrical connector.
- Twist bulb socket to remove from back of foglight housing. Do not touch bulb glass with your fingers.

— Installation is reverse of removal.

### Taillight housing, removing and installing

- Switch hybrid system OFF (READY indicator not illuminated). See **3 Safety**.

#### WARNING —

- Be sure hybrid system is OFF when servicing vehicle (READY indicator not illuminated). Failure to switch the hybrid system OFF could result in engine start at any time.




- Working in cargo compartment, remove taillight housing service cover.

#### Working in cargo compartment at taillight housing:

- Remove 2 mounting nuts (**arrows**).
- Gently pry housing to disengage pins from vehicle.
- Detach electrical connector.
- Replace bulbs as necessary. Do not touch bulb glass with your fingers.

— Installation is reverse of removal.

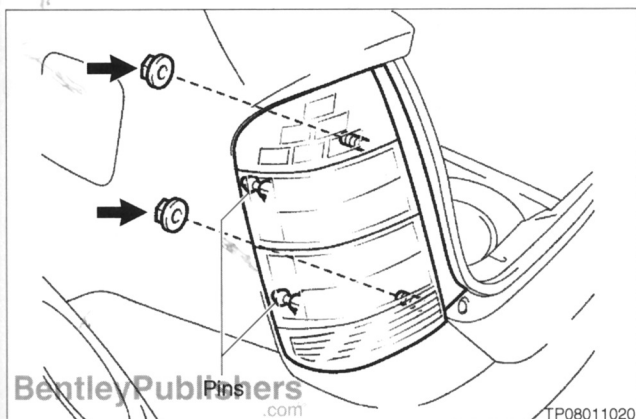

Courtesy Toyota Motor Sales (TMS) USA, Inc.