

2010 Prius Maintenance Schedule (Canadian)

* kilometers:	8000	16000	24000	32000	40000	48000	56000	64000	72000	80000	88000	96000	104000	112000	120000	128000
	6 mo	12 mo	18 mo	24 mo	30 mo	36 mo	42 mo	48 mo	54 mo	60 mo	66 mo	72 mo	78 mo	84 mo	90 mo	96 mo
maintenance items:																
replace engine oil & filter	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
inspect engine air filter (1)	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
lube locks, hinges & latches	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
inspect lights, horns & wipers	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
check coolant, brake & washer fluid levels	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
check transaxle fluid level		x		x		x				x		x		x		
change transaxle fluid								x								x
inspect tire condition & pressure (2)	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
inspect drive belts for damage (3) (4)		x		x		x		x		x		x		x		x
inspect steer. gear box, linkage, suspension (5)		x		x		x		x		x		x		x		x
inspect ball joints & dust covers		x		x		x		x		x		x		x		x
inspect drive shaft and steering rack boots		x		x		x		x		x		x		x		x
inspect chassis nuts, for looseness or damage		x		x		x		x		x		x		x		x
inspect brake linings, drums pads & discs		x		x		x		x		x		x		x		x
inspect brake lines & hoses		x		x		x		x		x		x		x		x
inspect exhaust system for leaks or damage		x		x		x		x		x		x		x		x
Road test		x		x		x		x		x		x		x		x
replace super long life coolant (6)																x
replace cabin air filter		x		x		x		x		x		x		x		x
inspect fuel lines, vapour vent system				x				x				x				x
inspect gas tank bands and cap gasket				x				x				x				x
replace iridium spark plugs (7)																

(1) inspect as scheduled, visually check & clean with compressed air as needed. Replace at least every 48000km

(2) including spare, rotate as needed

(3) adjust belt tension as needed

(4) no belts on Prius?

(5) check for looseness, damage or leakage

(6) thereafter every 60 months / 80000 km

(7) every 192000 km

* months or kilometers, whichever comes first