



To constant 12V source  
in underhood fusebox