


OVERHAUL

HINT:

- The installation procedures are the removal procedures in reverse order. However, only installation procedures requiring additional information are included.
- Use the same procedures for the RH side and LH side.
- The procedures listed below are for the LH side.
- A bolt without a torque specification is shown in the standard bolt chart (see page 03-2).

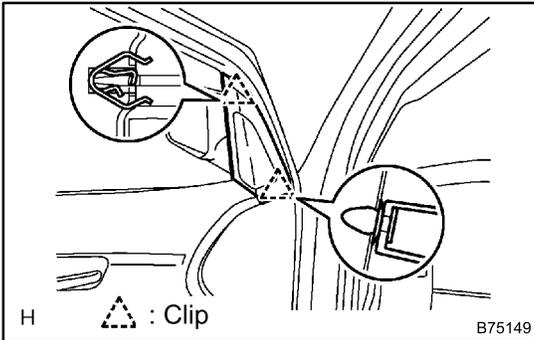


1. REMOVE FRONT DOOR LOWER FRAME BRACKET GARNISH

- (a) Using a screwdriver, disengage the 2 clips and remove the garnish.

HINT:

Tape the screwdriver tip before use.

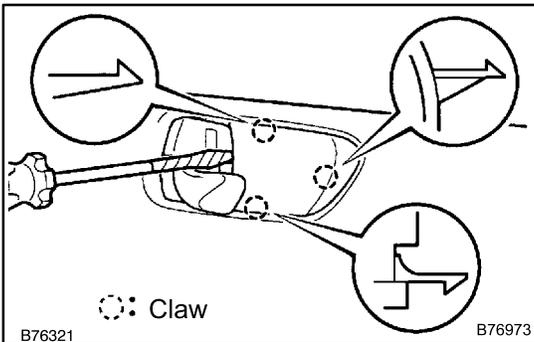


2. REMOVE FRONT DOOR INSIDE HANDLE BEZEL

- (a) Using a screwdriver, disengage the 3 claws and remove the bezel.


HINT:

Tape the screwdriver tip before use.

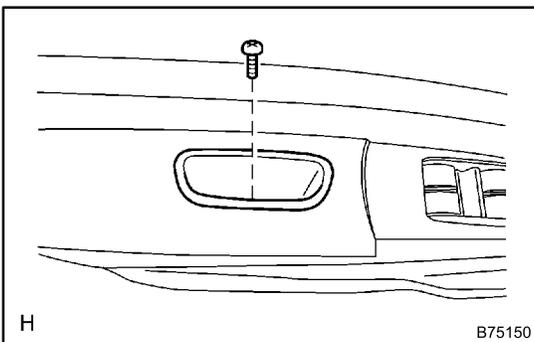

3. REMOVE DOOR PULL HANDLE

- (a) Remove the screw and pull handle.

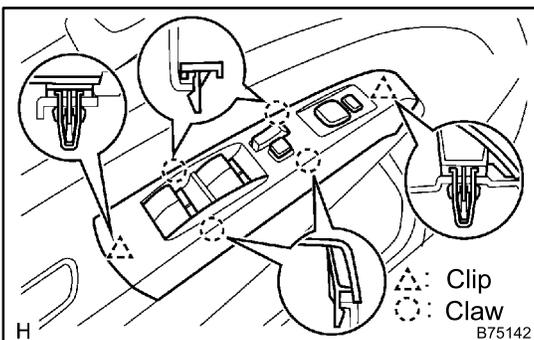

4. REMOVE FRONT ARMREST BASE PANEL UPPER

- (a) Driver's side:


Using a screwdriver, disengage the 2 clips and 4 claws, and remove the armrest base panel together with the window regulator master switch.

HINT:

Tape the screwdriver tip before use.

- (b) Disconnect the switch connector.

- (c) Remove the 3 screws and the window regulator master switch from the armrest base panel upper.

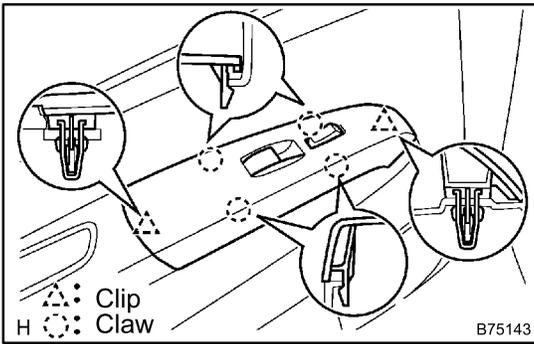

- (d) Passenger's side:
Using a screwdriver, disengage the 2 clips and 4 claws, and remove the armrest base panel together with the 2 switches.

HINT:

Tape the screwdriver tip before use.

- (e) Disconnect the switch connector.
(f) Using a screwdriver, disengage the 2 claws and remove the door control switch.

HINT:

Tape the screwdriver tip before use.

- (g) Using a screwdriver, disengage the 2 claws and remove the power window regulator switch.

HINT:



Tape the screwdriver tip before use.

5. REMOVE FRONT DOOR TRIM BOARD SUB-ASSY

- (a) Remove the screw.
(b) Using a screwdriver, disengage the 7 clips and remove the trim board.

HINT:

- Tape the screwdriver tip before use.
- In order to prevent the door panel from being damaged, use protective tape to cover the areas indicated by the arrow marks in the illustration.
- If the clip cannot be reached with the screwdriver, pull on the lower trim to remove it.

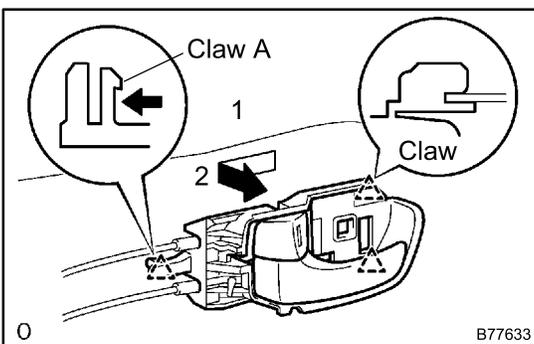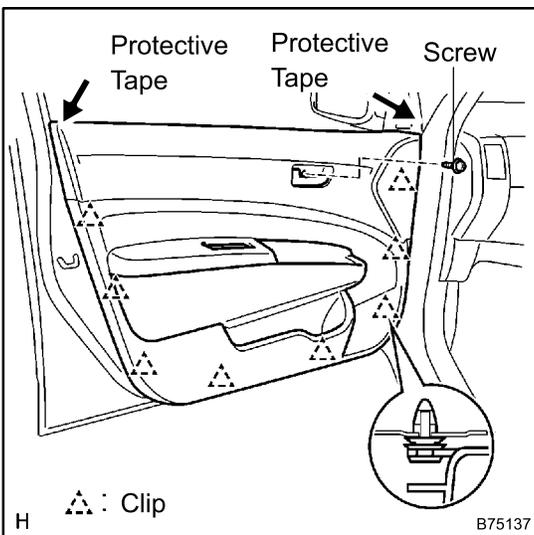

6. REMOVE FRONT DOOR INSIDE HANDLE SUB-ASSY

- (a) Using a screwdriver, disengage claw A as shown in the illustration.

HINT:

Tape the screwdriver tip before use.


- (b) Move the inside handle in the direction indicated by the arrow mark in the illustration. This will release the claw and allow removal of the inside handle.
(c) Disconnect the 2 cables from the inside handle.

7. REMOVE OUTER REAR VIEW MIRROR ASSY

- (a) Disconnect the mirror connector.
(b) Remove the 3 nuts and mirror.

NOTICE:

Be careful when removing the nuts as the mirror may fall and become damaged.

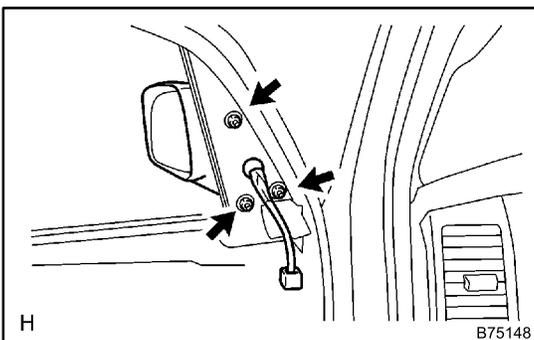

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.