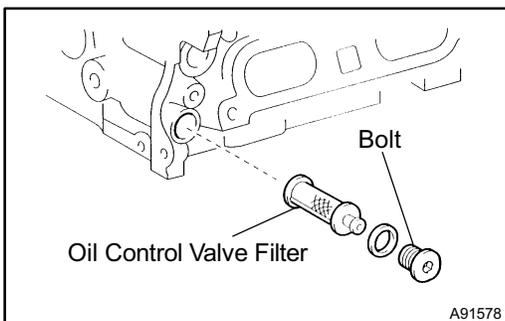


5 INSPECT OIL CONTROL VALVE FILTER (See page 14-124)

- (a) Remove the air cleaner inlet, bolt and oil control valve filter.
- (b) Check for blockages in the oil control valve filter.
- (c) Reinstall the filter, bolt and air cleaner inlet.

NOTICE:

If necessary, clean the filter.

OK: The filter has not clogged.

NG →

REPLACE OIL CONTROL VALVE FILTER

OK

**6 INSPECT CAMSHAFT TIMING OIL CONTROL VALVE ASSY (OCV)
(See page 10-5)**

OK: OCV has no contamination and moves smoothly.

OK →

Go to step 8

NG

7 REPLACE CAMSHAFT TIMING OIL CONTROL VALVE ASSY (OCV)

GO

8 INSPECT CAMSHAFT TIMING GEAR ASSY (See page 14-95)

OK →

Go to step 10

NG

9 REPLACE CAMSHAFT TIMING GEAR ASSY

GO

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.