



SHIFT CONTROL ACTUATOR ASSY REPLACEMENT

2200W-01

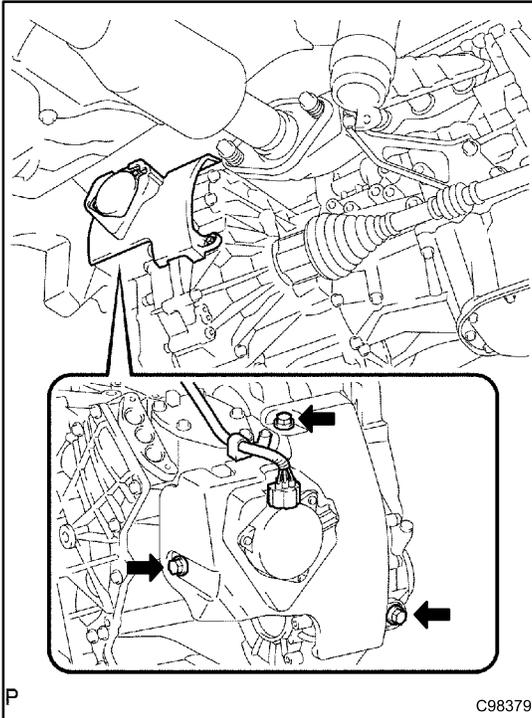

1. REMOVE SHIFT CONTROL ACTUATOR ASSY

- (a) Disconnect the connector.
- (b) Remove the 3 bolts. Remove the transmission case cover from the hybrid vehicle transaxle.

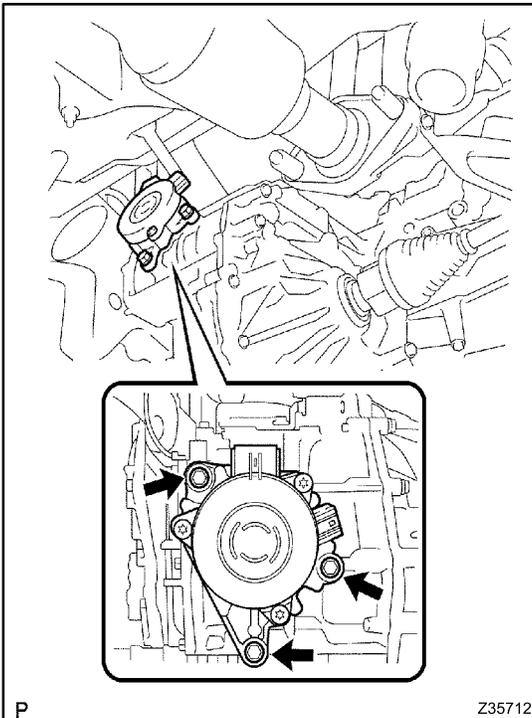

- (c) Remove the 3 bolts. Remove the shift control actuator assy from the hybrid vehicle transaxle.

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.