

**20. REMOVE AIR CONDITIONER UNIT ASSY**


- (a) Disconnect the 5 connectors and remove the 9 clamps. Disconnect the wire harness.

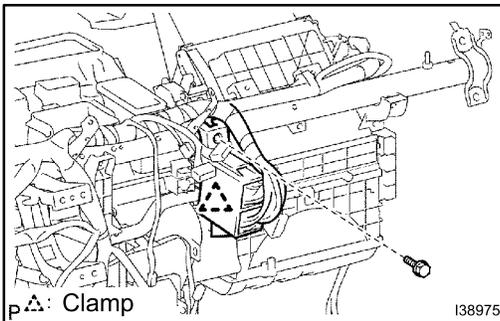

- (b) Remove the bolt and the clamp and then disconnect the junction connector.

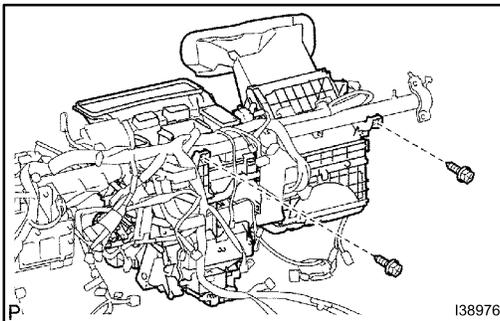

- (c) Remove the 2 screws and the air conditioner unit assy from the instrument panel reinforcement assy.

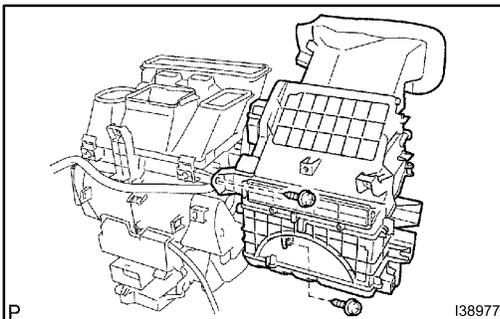**21. REMOVE BLOWER ASSY**

- (a) Remove the 2 screws.
 (b) Disengage the fittings with the air conditioner assy and then remove the blower assy.

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.