

2004-UP iPod®/AUXILIARY INTERFACE FOR SELECT LEXUS/TOYOTA VEHICLES (WITH SAT READY RADIOS)

The AXIPTA works with vehicles that have any Sirius tuners, navigation or non-navigation radios. At the press of a button, you can switch between iPod, auxiliary input, and Sirius Radio. For best results, please read this entire manual before installing your AXIPTA. To get the most current application guide information, please contact Scosche Tech Support: 800-621-3695 Ext.3.

APPLICATION GUIDE

SEE IMPORTANT APPLICATION INFORMATION BELOW

LEXUS

2006-2007	GS300 /GS350
2006-2007	GS430
2007	GS450H
2005-2007	GX470
2006-2007	LX470
2004-2007	LS460
2005-2007	RX330 /RX350
2006-2007	RX400H

SCION

2005-2007	TC
2005-2007	XA
2005-2007	XB

TOYOTA

2005-2007	4Runner	w/JBL system or navigation system
2005-2007	Avalon	w/JBL system or navigation system
2005-2007	Camry	w/JBL system or navigation system
2007	FJ Cruiser	
2005-2007	Highlander	w/JBL system or navigation system
2005-2007	Land Cruiser	w/JBL system or navigation system
2005-2007	Prius	w/JBL system or navigation system
2005-2007	Rav 4	
2005-2007	Solara	w/JBL system or navigation system
2005-2007	Sienna	w/JBL system or navigation system
2005-2007	Tacoma	w/JBL system or navigation system
2007	Tundra	w/JBL system or navigation system

APPLICATION NOTE

The audio input is dedicated only to be used when any Satellite tuner is connected. Factory radio will display text from the Satellite/iPod (unless noted) and will not display text from the "auxiliary input" device. This interface gives you (1) Satellite/iPod interface and one auxiliary input. All current factory radio functions will continue to operate as normal.


LIMITED WARRANTY

Scosche Industries Inc. warrants this product to be free from defects in material and workmanship for a period of 90 days from purchase. This Scosche product is sold with the understanding that the purchaser has independently determined the suitability of this product. This warranty is offered to the original purchaser of the product only. This warranty does not cover the product if physically damaged, subject to negligence or misuse, abuse, alteration, accident, or an act of GOD. This warranty does not apply to product which has water or physically damaged by accident or which has been misused, disassembled or altered.

The original dated sales slip or proof of purchase will establish warranty eligibility. If the product should prove defective within the warranty period, return the product with proof of purchase to Scosche Industries Inc. Scosche, at its option, will replace or repair the product free of charge and return the product postage paid. In no event shall Scosche Industries, Inc. be responsible for claims beyond the replacement value of the defective product, or in any way be liable or responsible for consequential or incidental damages. No express warranties and no implied warranties, whether for fitness or any particular use or otherwise, except as set forth above (which is made expressly in lieu of all other warranties) shall apply to products sold by Scosche. Scosche Industries cannot be held responsible for discrepancies/inconsistencies that may occur due to automotive manufacturing changes or option.

OVERVIEW (AT THE RADIO)


FIGURE 1

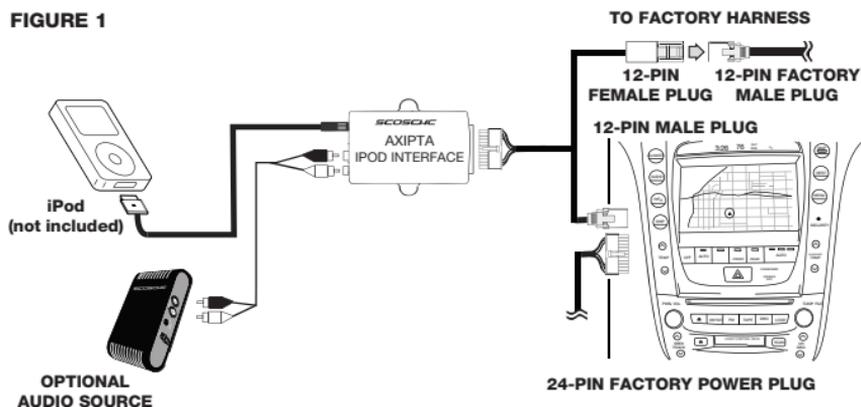

1. Carefully remove the radio from the dash of the vehicle (For assistance you can contact Scosche Tech Support at 800-361-3695ext.3) and install the Toyota to iPod interface.
2. Plug the male 12-pin connector of the AXIPTA harness into the female 12-pin port on the back of the radio. Next connect the factory male 12-pin connector into the female 12-pin connector on the AXIPTA harness.
3. Connect the 8-pin connector on the iPod docking cable to the AXIPTA interface. (DO NOT CONNECT iPod AT THIS TIME, WAIT UNTIL INITIALIZATION IS COMPLETE)
4. Plug the male 24-pin connector of the AXIPTA harness into the AXIPTA interface.

OVERVIEW (AT THE SATELLITE TUNER)

FIGURE 2

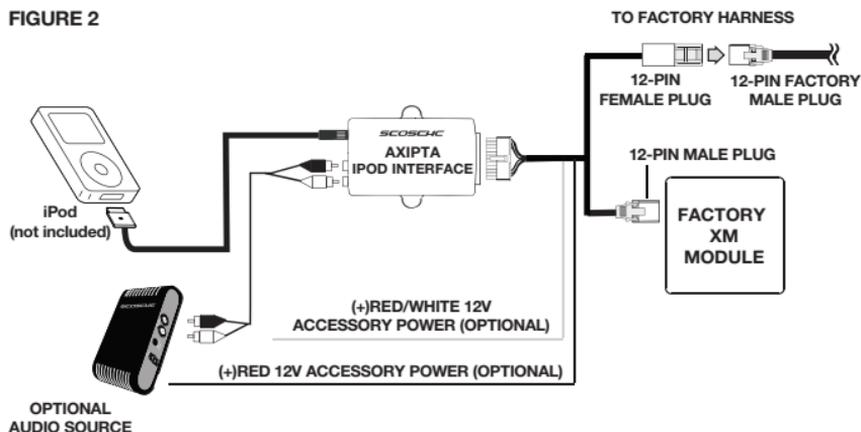

1. Locate the factory XM tuner. Remove any panels if necessary to access XM tuner's 12-pin harness. Unplug the 12-pin harness from the XM tuner.
Note: XM harness is badged with an XM label.
2. Plug the male 12-pin end of the AXIPTA harness into the 12-pin port on the XM tuner. Next connect the factory male 12-pin into the female 12-pin connector on the AXIPTA harness.
3. Connect the 8-pin connector on the iPod docking cable to the AXIPTA interface.
(DO NOT CONNECT iPod AT THIS TIME, WAIT UNTIL INITIALIZATION IS COMPLETE).

OPERATION (TOUCH SCREEN)

To access the iPod control screen you must press the [AM SAT] button twice (pressing the button only once will only bring you to the AM radio screen).

 
Pressing the [AM SAT] button twice will bring you to the iPod's interface main menu screen. On this interface there are (2) ways to navigate the iPod.

1. **Advanced Mode:** Full control of your iPod through the factory radio.

2. **Manual Mode:** Full control of your iPod through your iPod in hand.

We will begin in the Advanced mode. Select the [ADV] button to have full navigation control of your iPod through your factory radio.

To begin browsing through your iPod simply begin by selecting the [Browse iPod] button in the main menu.


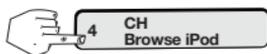


Now you are in the iPod's top menu and ready to navigate through your music in the same orderly fashion as on your iPod.

To scroll through your playlists press the [PlayLists] button and begin scrolling through your playlists by using the [TUNE FILE] knob (**Note:** This knob controls the scrolling portion of it, to select an item press the [SCAN] button to make your selection).



 Once in the Playlists menu, it then gives you the break down of all your playlists on your iPod. When a song is selected from a playlist, your selection will be displayed at the top of your screen next to the SAT 1 display, with the song selected and playing you then can choose to go to the previous, next and fast forward the song. To return to the iPod's top menu simply press the [Browse iPod] button.

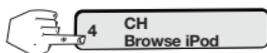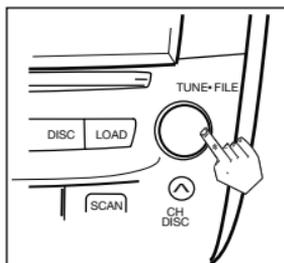


To scroll through your Artists, Albums, Genre, Songs categories you must operate those menu's the same way you operated the playlists menu in the previous section.

TO FAST FORWARD (FFWD):

When a song is in play and you decide to fast forward to section you desire press the [FFWD] button. The song will continue to fast forward until you press the [TYPE SEEK] button on the screen. It will then resume playing at the location you desired.



 Note: This interface does not offer a rewind option through the factory radio display. You must be in Manual Mode in order to rewind the song, or you have the option to return to the beginning of the song and fast forward to the section you desire. To explore the second mode this interface offers (Manual Mode) you must be in the AXIPTA Main Menu. Select the [Manual Mode] button, you will then notice your iPod's screen change back to its original view. This feature offers you full control of your iPod in a passenger's hand.

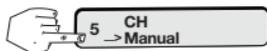

AUTO PLAY/PAUSE:

This interface offers the new Auto Play/Pause feature. This feature automatically pauses your iPod whenever you turn off your ignition. This feature keeps your iPod charged and ready to go.

LIMITED ITEMS:


 
This interface will only play the first 256 items in any category. We recommend creating playlists with your selected favorites.

OPERATION (CONT'D.)

TEXT/DISPLAY:


To change the view of the way your iPod displays its information looks, press the [TEXT] button on your screen.

To return to your default iPod display, press the [TEXT] button and the screen should return to the default screen. This will bring you to the iPod's Top Menu screen. If you choose to return to the AXIPTA Main Menu press the [Main Menu] button.

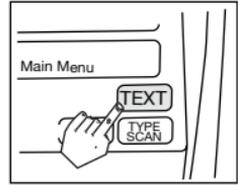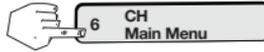

SATELLITE RADIO:

 To return to Satellite Radio, in the AXIPTA Main Menu, press the [SAT] button on your screen and the Satellite buttons and functions should default to its original Satellite settings.

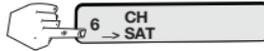


LIMITED ITEMS:

This interface may only play the first 256 items in any category. We recommend creating playlists with your selected favorites.

OPERATION (STANDARD RADIO)

To access the iPod screen you must press the [SAT] button, be advised that SAT 3 is the auxiliary input on this iPod interface.

Pressing the [SAT] button will bring you to the iPod's interface. On this interface there are (2) ways to navigate the iPod.

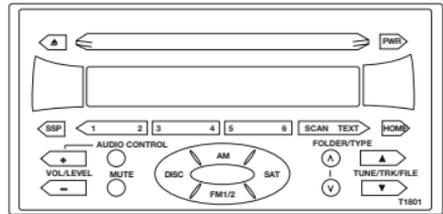


1. **Advanced Mode:** Full control of your iPod through the factory radio.
2. **Manual Mode:** Full control of your iPod with your iPod in hand.

Advanced Mode

Press button [3] and a check mark will appear on your iPod's screen. Now you have full control of your iPod through your factory radio.

Use the [FOLDER/TYPE] buttons to navigate through the onscreen menus. To choose the item, press the [SCAN] button. To go back to a previous menu, simply wait for the onscreen title to time out and press the [FOLDER/TYPE] buttons to continue to navigate through the onscreen menus.

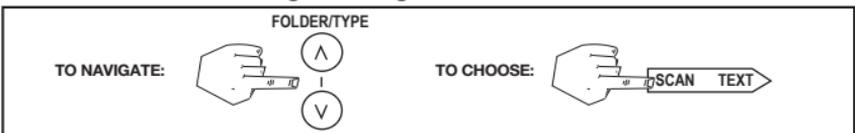


Being in the iPod's onscreen menus and ready to navigate through your iPod, scroll through your menu items by pressing the [FOLDER/TYPE] buttons until your menu item appears onscreen. Once you select a menu, it then breaks down all the information in that category (**Example:** When Artist is chosen from the menu, the onscreen menu then shows you the complete list of Artist obtained in the iPod). With a song selected and playing, you can now track up, track down, fast forward and rewind the song (**Note:** The iPod's Top Menu appears when the iPod times out).

INSTALLATION (STANDARD RADIO)


TRACK UP:

 To track up, press button [2].

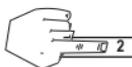


TRACK DOWN:

 To track down, press button [1].

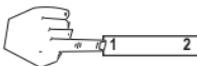


TO REWIND (RWD):

 With a song playing, to rewind press button [4]. The song will continue to rewind until you press the [SCAN] button, it will stop rewinding and resume play.

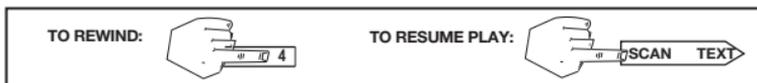

TO FAST FORWARD (FFWD):

 With a song playing, to fast forward press button [5]. The song will continue to fast forward until you press the [SCAN] button, it will stop fast forwarding and resume play.

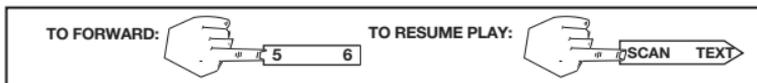

Manual Mode

To explore the second mode on this interface (Manual Mode) you must be in the Satellite Radio source. You will then notice your iPod's screen change back to its original view but continue charging. You now have full control of your iPod in a passengers hand.

Auto Play/Pause:

This interface offers the new Auto Play/Pause feature. This feature automatically pauses your iPod whenever you turn off your ignition or you switch off the iPod source. This feature keeps your iPod charged and ready to go. We don't recommend disconnecting the iPod during play, the best time for disconnecting would be when the ignition is off or out of the SAT source.

TROUBLESHOOTING

Symptom	Cause	Remedy
No Display/ The onscreen display goes blank	This may occur when the user presses the [FOLDER/TYPE] continuously and rapidly	Simply wait 5-10 seconds, allowing the interface to refresh itself
iPod freezes	This may occur when the iPod is disconnected while in play	iPod may need to be reset (Refer to the iPod's User Guide)
Loud pop noise at vehicle turn off	This may occur if the volume on the radio is set high at vehicle turn off	Before turning the vehicle off, make sure to lower the volume on the radio to low, or simply switch out of the Satellite source

BUTTON LAYOUT FOR BOTH NAVIGATION AND STANDARD RADIO

BUTTON NUMBER (PRESETS)	FUNCTION
1	On both radio's this button takes you to the previous track (◀)
2	On both radio's this button takes you to the next track (▶)
3	On both radio's switches between Manual Mode and Advanced Mode
4	On the navigation radio this button is used to browse the iPod. On the standard radio this button is used to Rewind. (◀◀) (SCAN button stops the Rewind)
5	On both the navigation and standard radio this button is used to Fast Forward. (▶▶) (SCAN button stops the Fast Forward)
6	On both radio's this button switches between satellite radio and the iPod interface
[SCAN] Button	On both radio's the scan button acts as your select button when choosing any Playlists, Artists, Album, Song, Genre or any item in those categories.
[SAT] Button	On the standard radio this button is used to switch between satellite source. Note: SAT 3 is the auxiliary input source

WARNING

This equipment may be reset by unintentional electrostatic discharge during operation. Exposure to direct sunlight or extreme heat may cause damage or malfunction.

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause interference, and 2) this device must accept any interference that may be received, including interference that may cause undesired operation. The manufacturer is not responsible for any radio or TV interference caused by unauthorized modification to this equipment. Such modification could void the user's authority to operate the equipment.

NOTES