

CUSTOMIZE PARAMETERS

1. CUSTOMIZING FUNCTION WITH TECHSTREAM

HINT:

The following items can be customized.

NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

Air Conditioner

Display (Item)	Default	Content	Setting
Set Temperature Shift	Normal	Function to control the shifted temperature against the displayed temperature.	-2C, -1C, Normal, +1C, +2C
Compressor Mode	Automatic	Function to automatically turn the A/C on by pressing the AUTO button when blower is on and the A/C is off.	Automatic or Manual
Air inlet Mode*2	Automatic	In case of turning the A/C ON to cool the cabin down quickly, this is the function to change the mode automatically to RECIRCULATION mode	Automatic or Manual
Foot/DEF Auto Mode	ON	Function to automatically turn the airflow from FOOT/DEF on when AUTO mode is on.	ON or OFF
Foot/DEF Automatic Blow Up Function	ON	Function to automatically increase the blower level when the defroster is on.	ON or OFF
Ambient Temperature Shift	Normal	Function to control the shifted ambient temperature in relation to the displayed ambient temperature.	-3C, -2C, -1C, Normal, +1C, +2C, +3C
ECO MODE Cancel	OFF	Function to cancel the ECO drive mode when item is on.	OFF or ON
Noise and Vibration Reduction	OFF	Function to change speed of the compressor when item is on.	OFF or ON

Display (Item)	Default	Content	Setting
Start Pre A/C*1	Long1	Function to set the activation operation method for the remote air conditioning system using the key (electrical transmitter).	1 tim ON, 2 tim ON, Long1 or Long2
Stop Pre A/C*1	2 tim ON	Function to set the stop operation method for the remote air conditioning system using the key (electrical transmitter).	1 tim ON, 2 tim ON, Long1 or Long2

- *1: w/ Remote Air Conditioning System
- *2: for Korea and Mexico