


Accessing the iPod audio source in CDC mode


Press the DISC button to access the DICE iPod interface and its features. On some radios this button may be labeled as CDC/AUX or CDC/SAT. Pressing this button repeatedly will cycle through sources present in your vehicle. When the DICE iPod interface is active, use DISC5 TRACK 1 to select the iPod audio source.

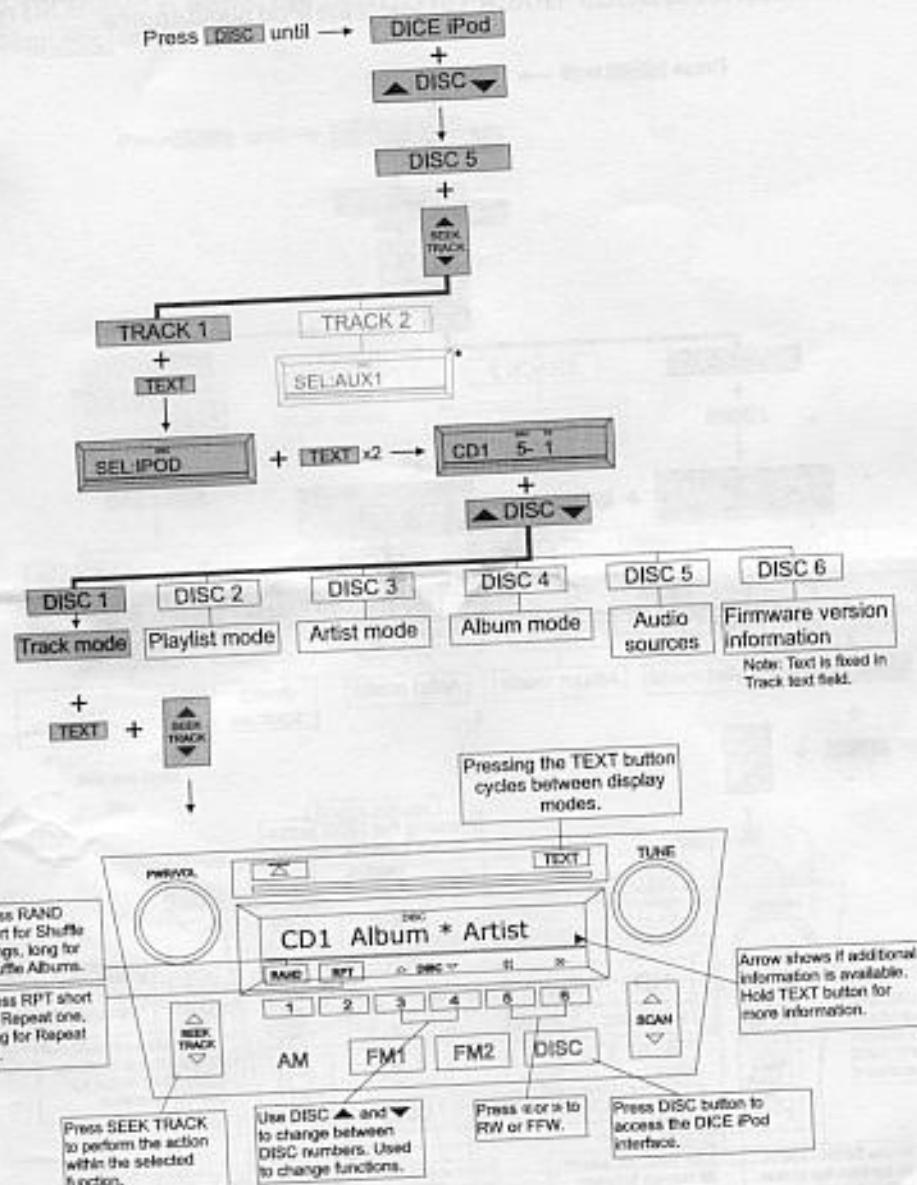

Note that the functions assigned to the buttons may differ.
* Refer to the section titled: Using the AUX audio input.

Accessing the iPod audio source in MP3 mode


Press the DISC button to access the DICE iPod interface and its features. Note that you may have to switch to another audio source and then press DISC again to access the DICE iPod module. On some radios this button may be labeled as CDC/AUX or CDC/SAT. Pressing this button repeatedly will cycle through sources. When DICE iPod is active, use DISC 5 and then select the iPod audio source by pressing  or .

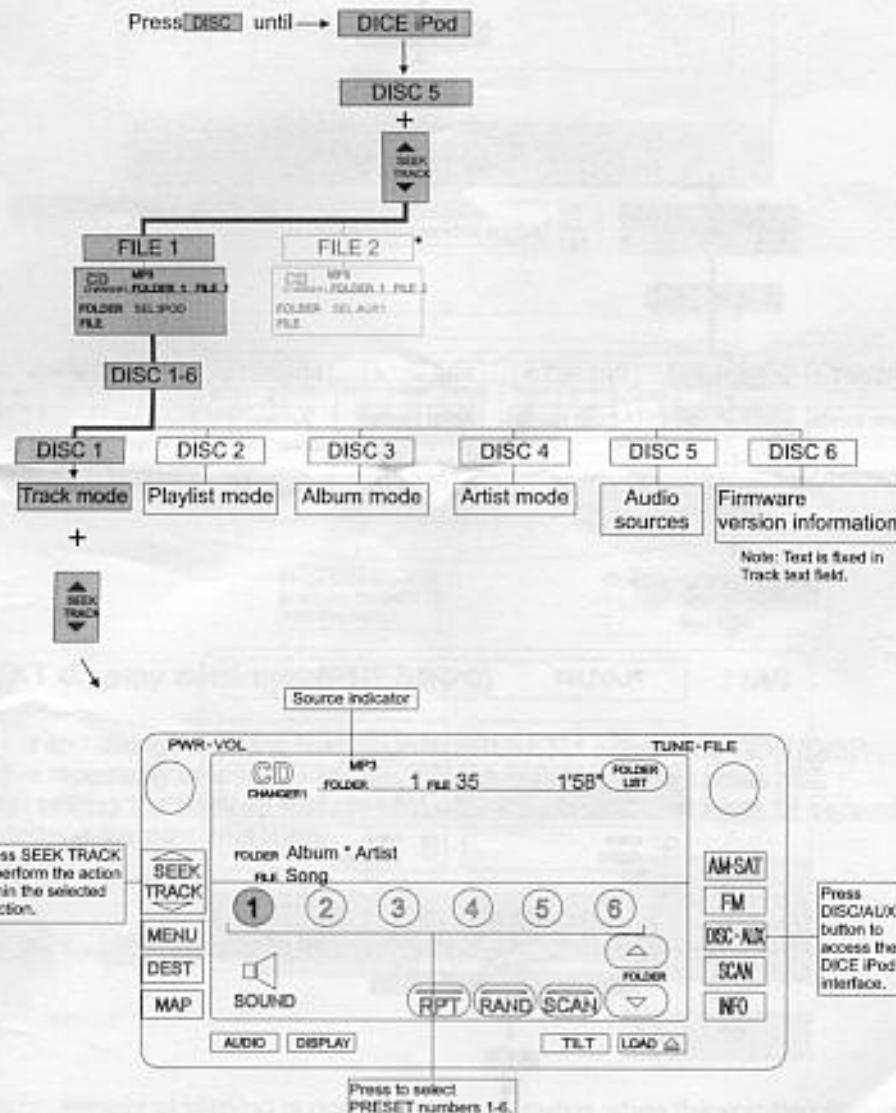

* Refer to the section titled: Using the AUX audio input.

Accessing the iPod audio source in SAT mode

Press the SAT button to access the DICE iPod interface and its features. On some radios this button may be labeled as AM/SAT or CDC/SAT. Pressing this button repeatedly will cycle through sources. When the DICE iPod interface is active, use PRESET 5 and then select iPod audio source by pressing .

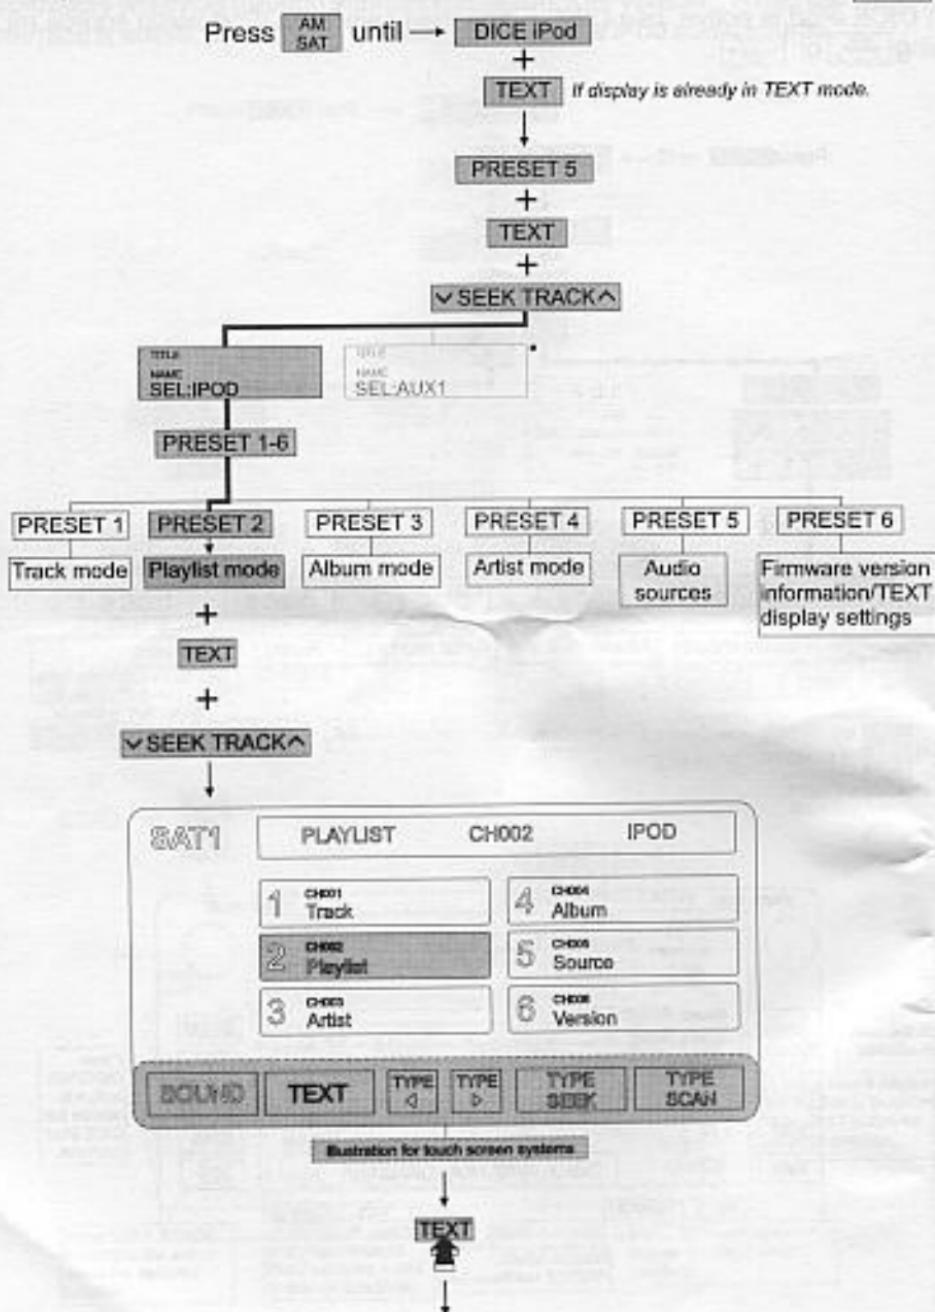

* Refer to the section titled: Using the AUX audio input.


TEXT



Illustration for touch screen systems.

Use the TYPE button to engage/disengage RW or FFW.

Press SEEK TRACK to perform the action within the selected function.

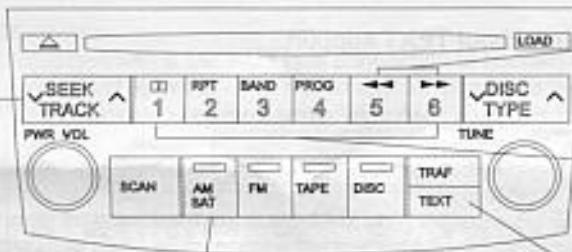

Press & or & to RW or FFW.

Press to select PRESET numbers 1-6.


Press AM/SAT button to access the DICE iPod interface.

Pressing the TEXT button cycles between available text field.

TEXT display settings. (PRESET 6)

To set and change scrolling feature go to PRESET 6, press the TEXT/DISP. button repeatedly until you reach the TITLE text field and then press SEEK TRACK ^.

After setting the desired feature turn off the ignition for at least 50 seconds to engage the new selection.

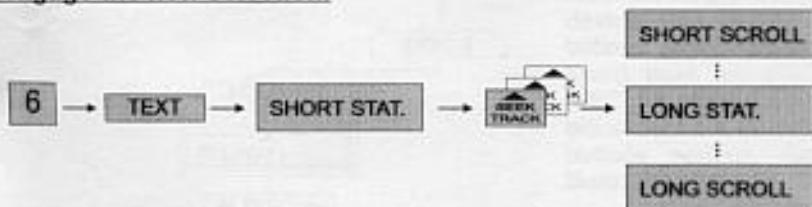

Certain amount of blinking is normal on certain radios when the scrolling feature is on.