


- (b) Pull the upper part of the garnish toward the inside of the cabin and disengage the 2 clips.

Text in Illustration

*1	Front Pillar Garnish Clip
----	---------------------------

HINT:

Make the front pillar garnish LH hang down from the front pillar garnish clip.

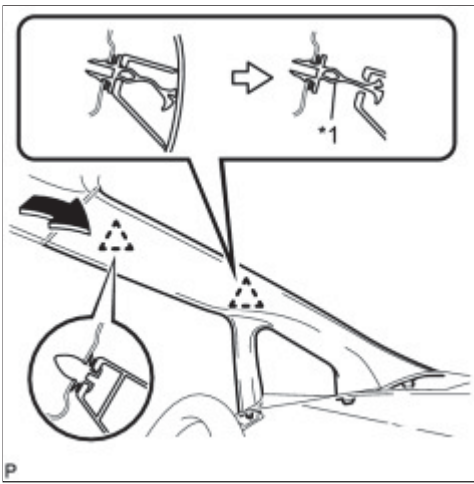

- (c) Turn the end of the front pillar garnish clip 90° with needle-nosed pliers and remove it from the front pillar garnish LH.

NOTICE:


- Front pillar garnish clips are reusable if they are not removed from the vehicle and have no damage.
- Replace the front pillar garnish clips with new ones if they are removed from the vehicle.

HINT:

Tape the needle-nosed pliers tip before use.

Text in Illustration

*1	Protective Tape
----	-----------------

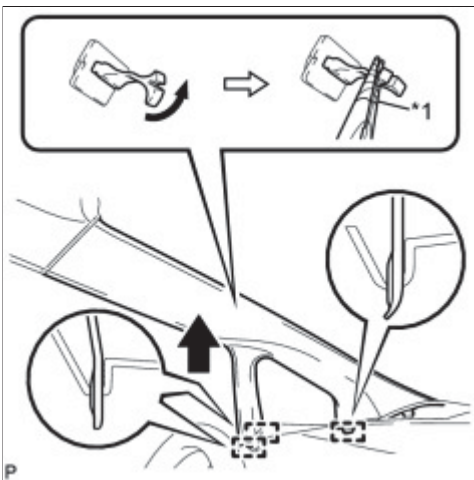

- (d) Disengage the 3 guides.

- (e) Disengage the claw while pressing the shaded part in the


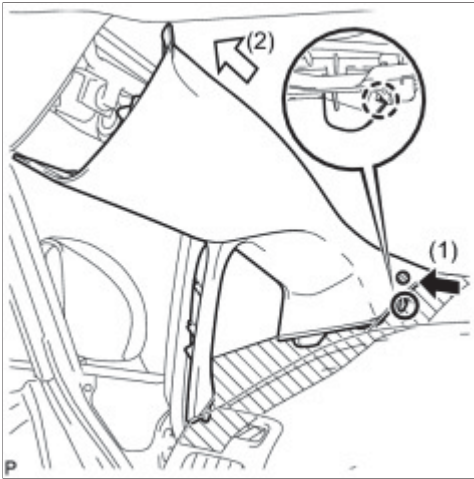


illustration in the direction indicated by the arrow (1).

(f) Remove the front pillar garnish LH by pulling it in the direction indicated by the arrow (2) in the illustration.

(g) Protect the curtain shield airbag assembly.

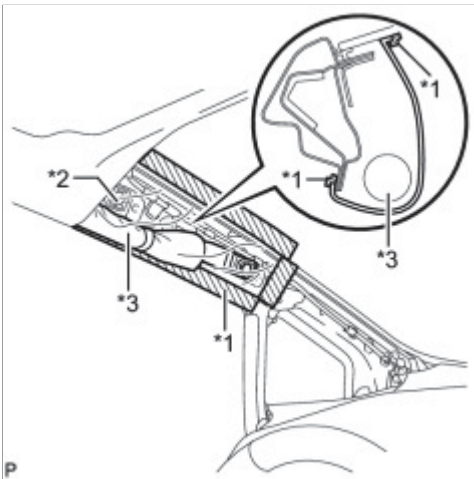

Text in Illustration

*1	Adhesive Tape
*2	Protective Cover
*3	Curtain Shield Airbag Assembly

(1) Cover the airbag with a cloth or piece of nylon and secure the ends of the cover with tape as shown in the illustration.

NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

9. REMOVE REAR DOOR SCUFF PLATE LH

(a) Disengage the 7 claws and remove the rear door scuff plate LH.