


REMOVAL

1. REMOVE ENGINE UNDER COVER RH

2. REMOVE NO. 1 AIR CLEANER INLET

- (a) Loosen the clamp, and disconnect the air cleaner inlet from the air cleaner case.

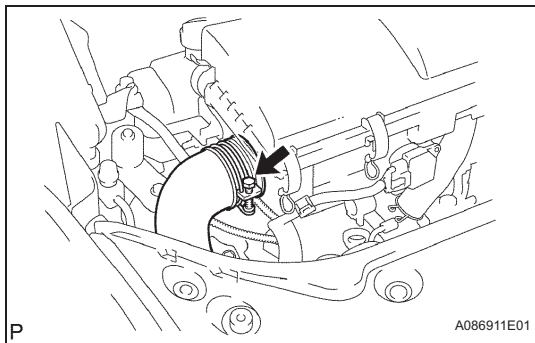

3. REMOVE DRIVE BELT

- (a) Loosen nut A.
- (b) Turn adjust bolt B, and then release the belt tension.
- (c) Remove the belt.

