


FRONT BRAKE COMPONENTS

3215C-02

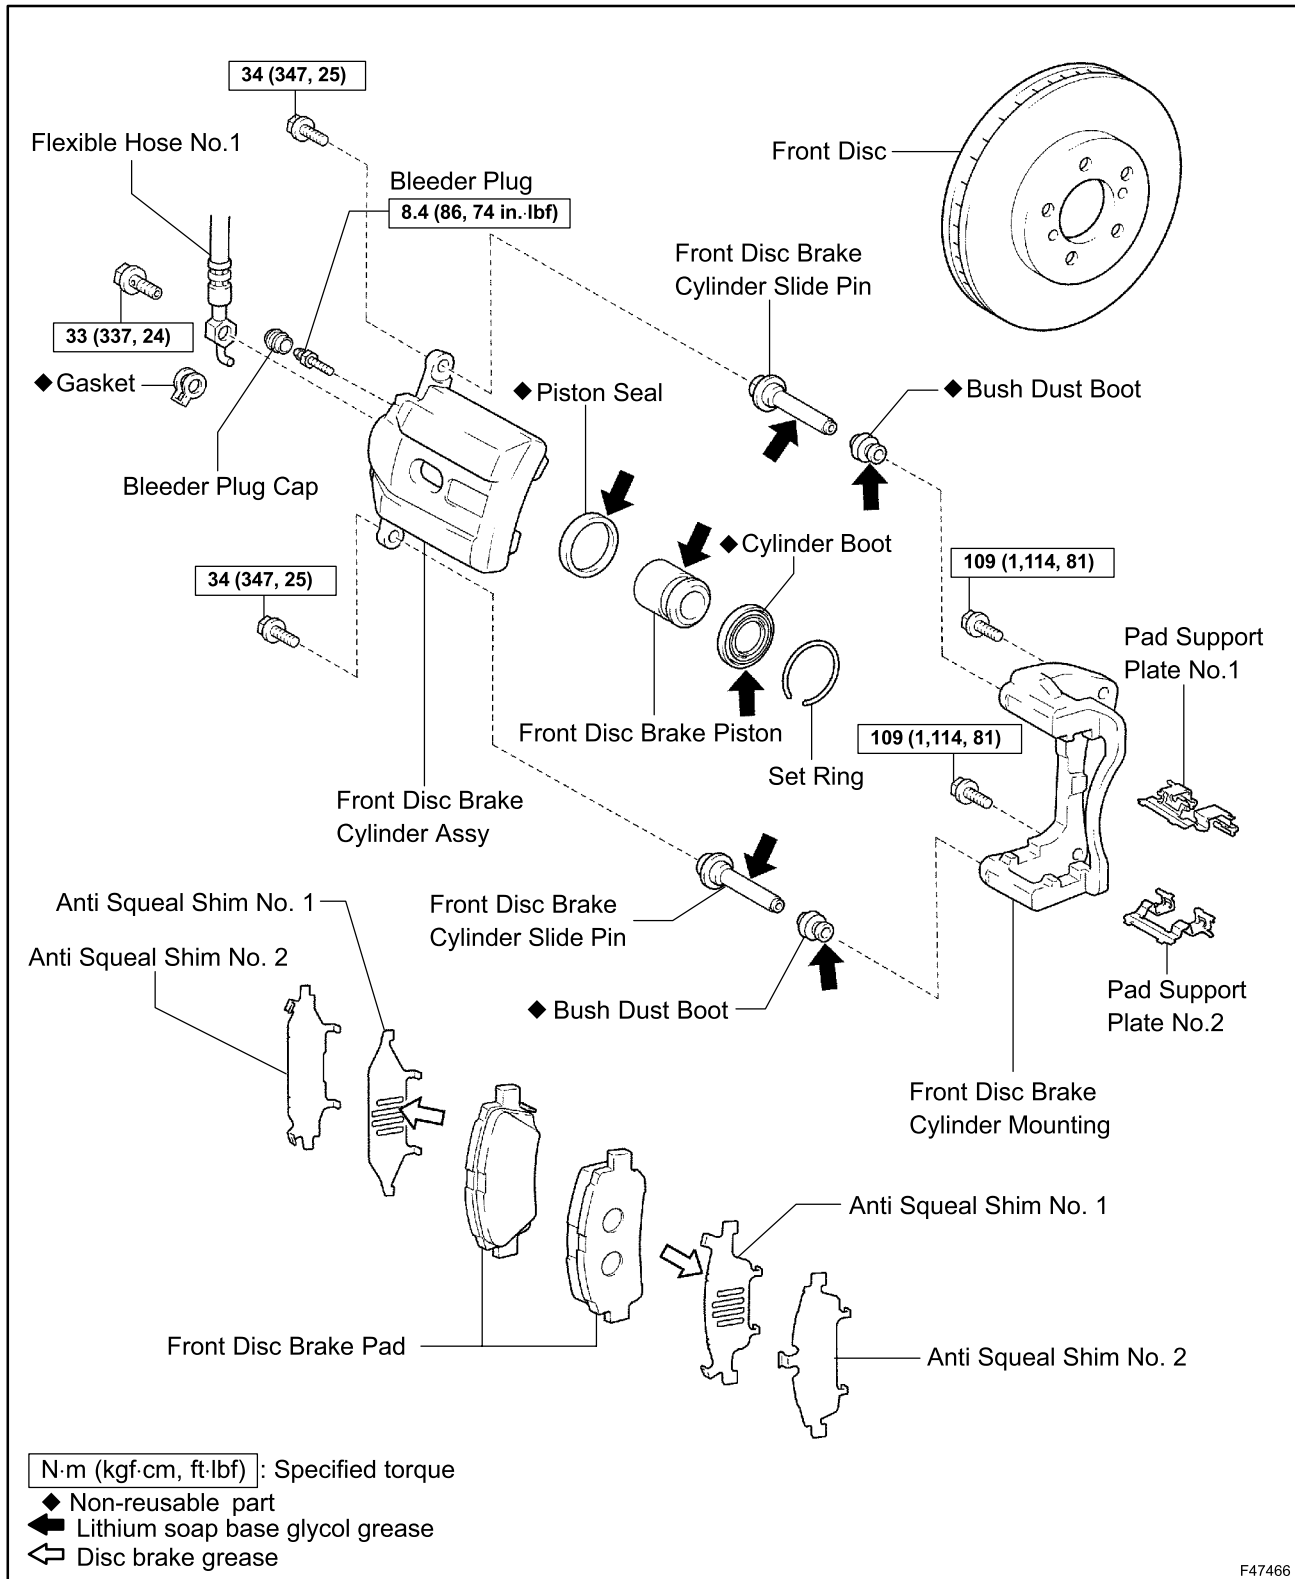

F47466

OVERHAUL

HINT:

If work that does not involve brake fluid bleeding, such as disc brake pad replacement, is started 2 minutes or more after the power switch is turned off, brake control (ECB) prohibition is not necessary.

1. **REMOVE FRONT WHEEL**
2. **BRAKE CONTROL (ECB) OFF (SEE PAGE 32-24)**


NOTICE:

Prohibit the brake control (ECB) certainly before bleeding the brake fluid.

3. **DRAIN BRAKE FLUID**

NOTICE:

Wash brake fluid off immediately if it adheres to any painted surface.

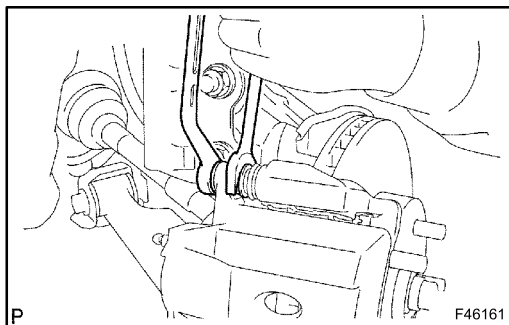

4. REMOVE FRONT DISC BRAKE CYLINDER SUB-ASSY

- (a) Remove the union bolt and gasket, and separate the flexible hose No.1 from the front disc brake cylinder assy.
- (b) Hold the front disc brake cylinder slide pin using a wrench. Remove the 2 bolts and separate the front disc brake cylinder.

5. REMOVE DISC BRAKE PAD KIT FRONT (PAD ONLY)

- (a) Remove the 2 front disc brake pads from the front disc brake cylinder mounting.

6. REMOVE ANTI SQUEAL SHIM KIT FRONT


- (a) Remove the 2 anti squeal shims No.1 and 2 anti squeal shims No.2 from the front disc brake pads.

7. REMOVE FRONT DISC BRAKE PAD SUPPORT PLATE NO.1

- (a) Remove the pad support plate No.1 from the front disc brake cylinder mounting.

8. REMOVE FRONT DISC BRAKE PAD SUPPORT PLATE NO.2

- (a) Remove the pad support plate No.2 from the front disc brake cylinder mounting.

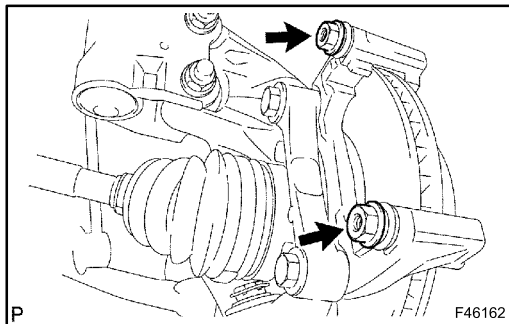

9. REMOVE FRONT DISC BRAKE CYLINDER SLIDE PIN

- (a) Pull off the 2 front disc brake cylinder slide pins from the front disc brake cylinder mounting.

10. REMOVE FRONT DISC BRAKE BUSH DUST BOOT

- (a) Remove the 2 bush dust boots from the front disc brake cylinder mounting.

This document was created with Win2PDF available at <http://www.win2pdf.com>.
The unregistered version of Win2PDF is for evaluation or non-commercial use only.
This page will not be added after purchasing Win2PDF.