

REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL**

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. **REMOVE FRONT FENDER LINER LH**

- (a) Using a clip remover, remove the clip.
- (b) Partially remove the fender liner.

HINT:

It is not necessary to fully remove the fender liner. Partially remove it so that the bumper cover can be removed in a later step.




3. **REMOVE FRONT FENDER LINER RH**

HINT:

Use the same procedure described for the LH side.


4. **REMOVE CENTER NO. 4 ENGINE UNDER COVER**

- (a) Remove the 5 screws, 4 bolts and under cover.

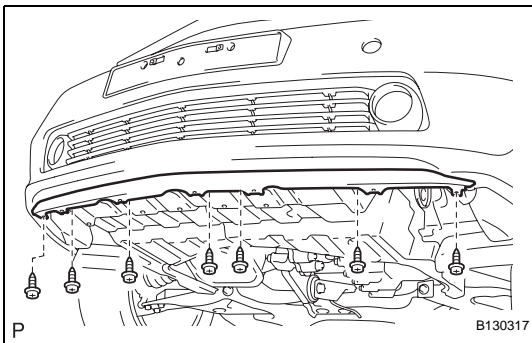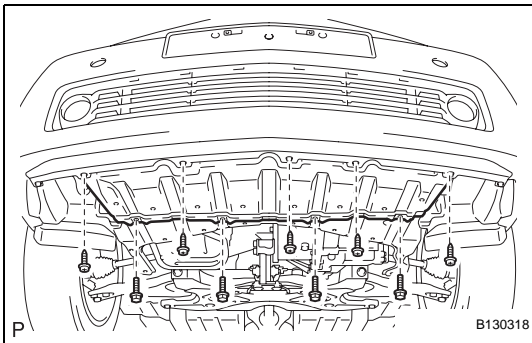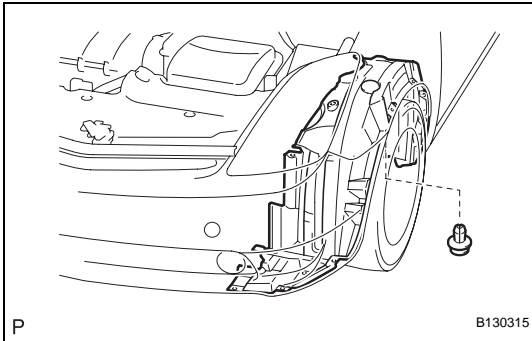


5. **REMOVE FRONT SPOILER COVER**

- (a) Remove the 7 screws and spoiler cover.

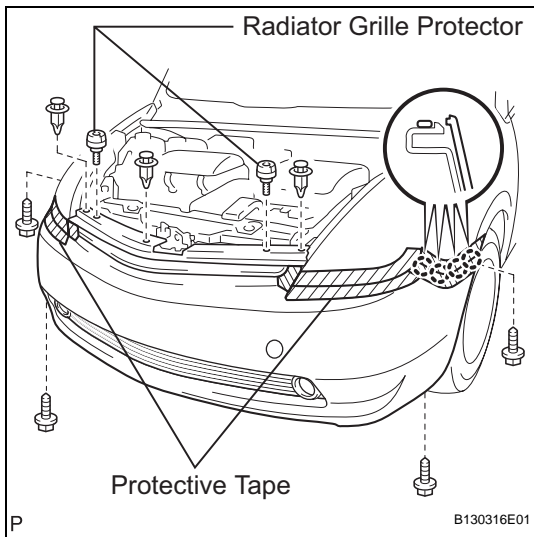

6. REMOVE FRONT BUMPER COVER

- Put protective tape under the front fender.
- Using a clip remover, remove the 3 clips.
- Remove the 2 radiator grille protectors and 4 screws.
- Detach the 8 claws.

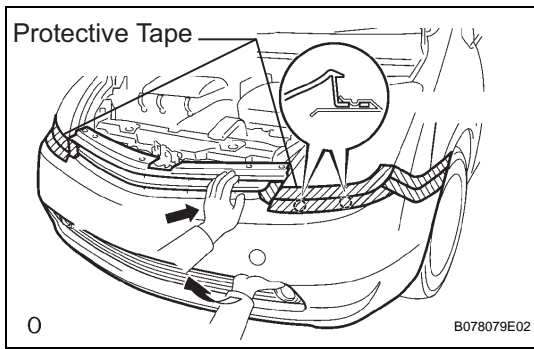

- Detach the 4 claws and remove the bumper cover.
 - Hold the front bumper cover on its upper and lower parts with your hands as shown in the illustration.
 - Pull up the front bumper cover's lower part while holding its upper part securely.

NOTICE:

- The claw will not disengage unless the front bumper cover's upper part is securely held.
- Do not forcibly pull up the front bumper. This will deform the claw.

- w/ Fog light:
Disconnect the 2 fog light connectors.

7. REMOVE FRONT BUMPER ENERGY ABSORBER

8. REMOVE FRONT BUMPER REINFORCEMENT

- Using a screwdriver, remove the 4 wire harness clamps.

HINT:

Tape the screwdriver tip before use.

- Remove the 4 nuts and reinforcement.

9. REMOVE FRONT BUMPER SIDE SUPPORT LH

- Remove the 2 screws and side support.

10. REMOVE FRONT BUMPER SIDE SUPPORT RH

- Remove the 2 screws and side support.


DISASSEMBLY


1. REMOVE FRONT BUMPER MOULDING

- Remove the 4 screws.
- Using a screwdriver, detach the 4 claws and remove the moulding.

HINT:

Tape the screwdriver tip before use.

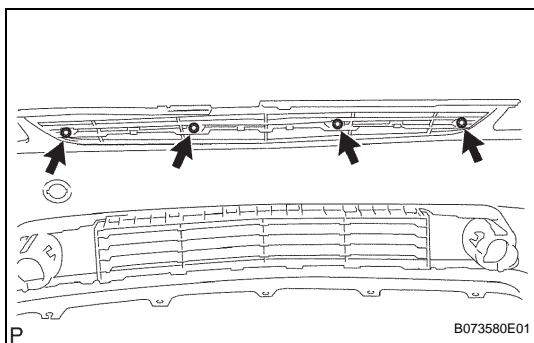

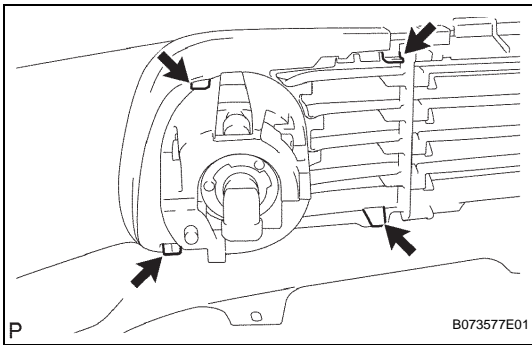**2. REMOVE LOWER RADIATOR GRILLE LH**

- (a) Using a screwdriver, detach the 4 claws and remove the grille.

HINT:

Tape the screwdriver tip before use.

3. REMOVE LOWER RADIATOR GRILLE RH

HINT:

Use the same procedure described for the LH side.

4. REMOVE FOG LIGHT UNIT LH (w/ Fog Light) (See page LI-87)**5. REMOVE FOG LIGHT UNIT RH (w/ Fog Light)**

HINT:

Use the same procedure described for the LH side.

6. REMOVE RADIATOR GRILLE

- (a) Using a screwdriver, detach the 12 claws and remove the grille.

HINT:

Tape the screwdriver tip before use.

7. REMOVE FRONT TURN SIGNAL LIGHT MOUNTING BRACKET RH

- (a) Using a screwdriver, detach the claws and remove the mounting bracket.

HINT:

Tape the screwdriver tip before use.

8. REMOVE FRONT BUMPER EXTENSION MOUNTING BRACKET

- (a) Remove the 2 screws and mounting bracket.

