

PARTS LOCATION

POWER WINDOW REGULATOR MASTER SWITCH
(DOOR CONTROL SWITCH)

FRONT DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR POSITION SWITCH
- DOOR LOCK AND UNLOCK SWITCH

REAR DOOR LOCK ASSEMBLY LH
- DOOR LOCK MOTOR
- DOOR POSITION SWITCH

POWER SWITCH

KEY SLOT
- HALFWAY SWITCH

DRIVER SIDE JUNCTION BLOCK
- BODY ECU
- DOOR FUSE

TRANSPONDER KEY ECU

DOOR CONTROL
SWITCH

FRONT DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR POSITION SWITCH

REAR DOOR LOCK ASSEMBLY RH
- DOOR LOCK MOTOR
- DOOR POSITION SWITCH

BACK DOOR OPENER SWITCH

BACK DOOR LOCK ASSEMBLY
- BACK DOOR COURTESY LIGHT SWITCH

FRONT DOOR COURTESY
LIGHT SWITCH ASSEMBLY LH

w/ Smart Key System



LUGGAGE ELECTRICAL KEY SWITCH