


HEADLIGHT LEVELING ECU

COMPONENTS

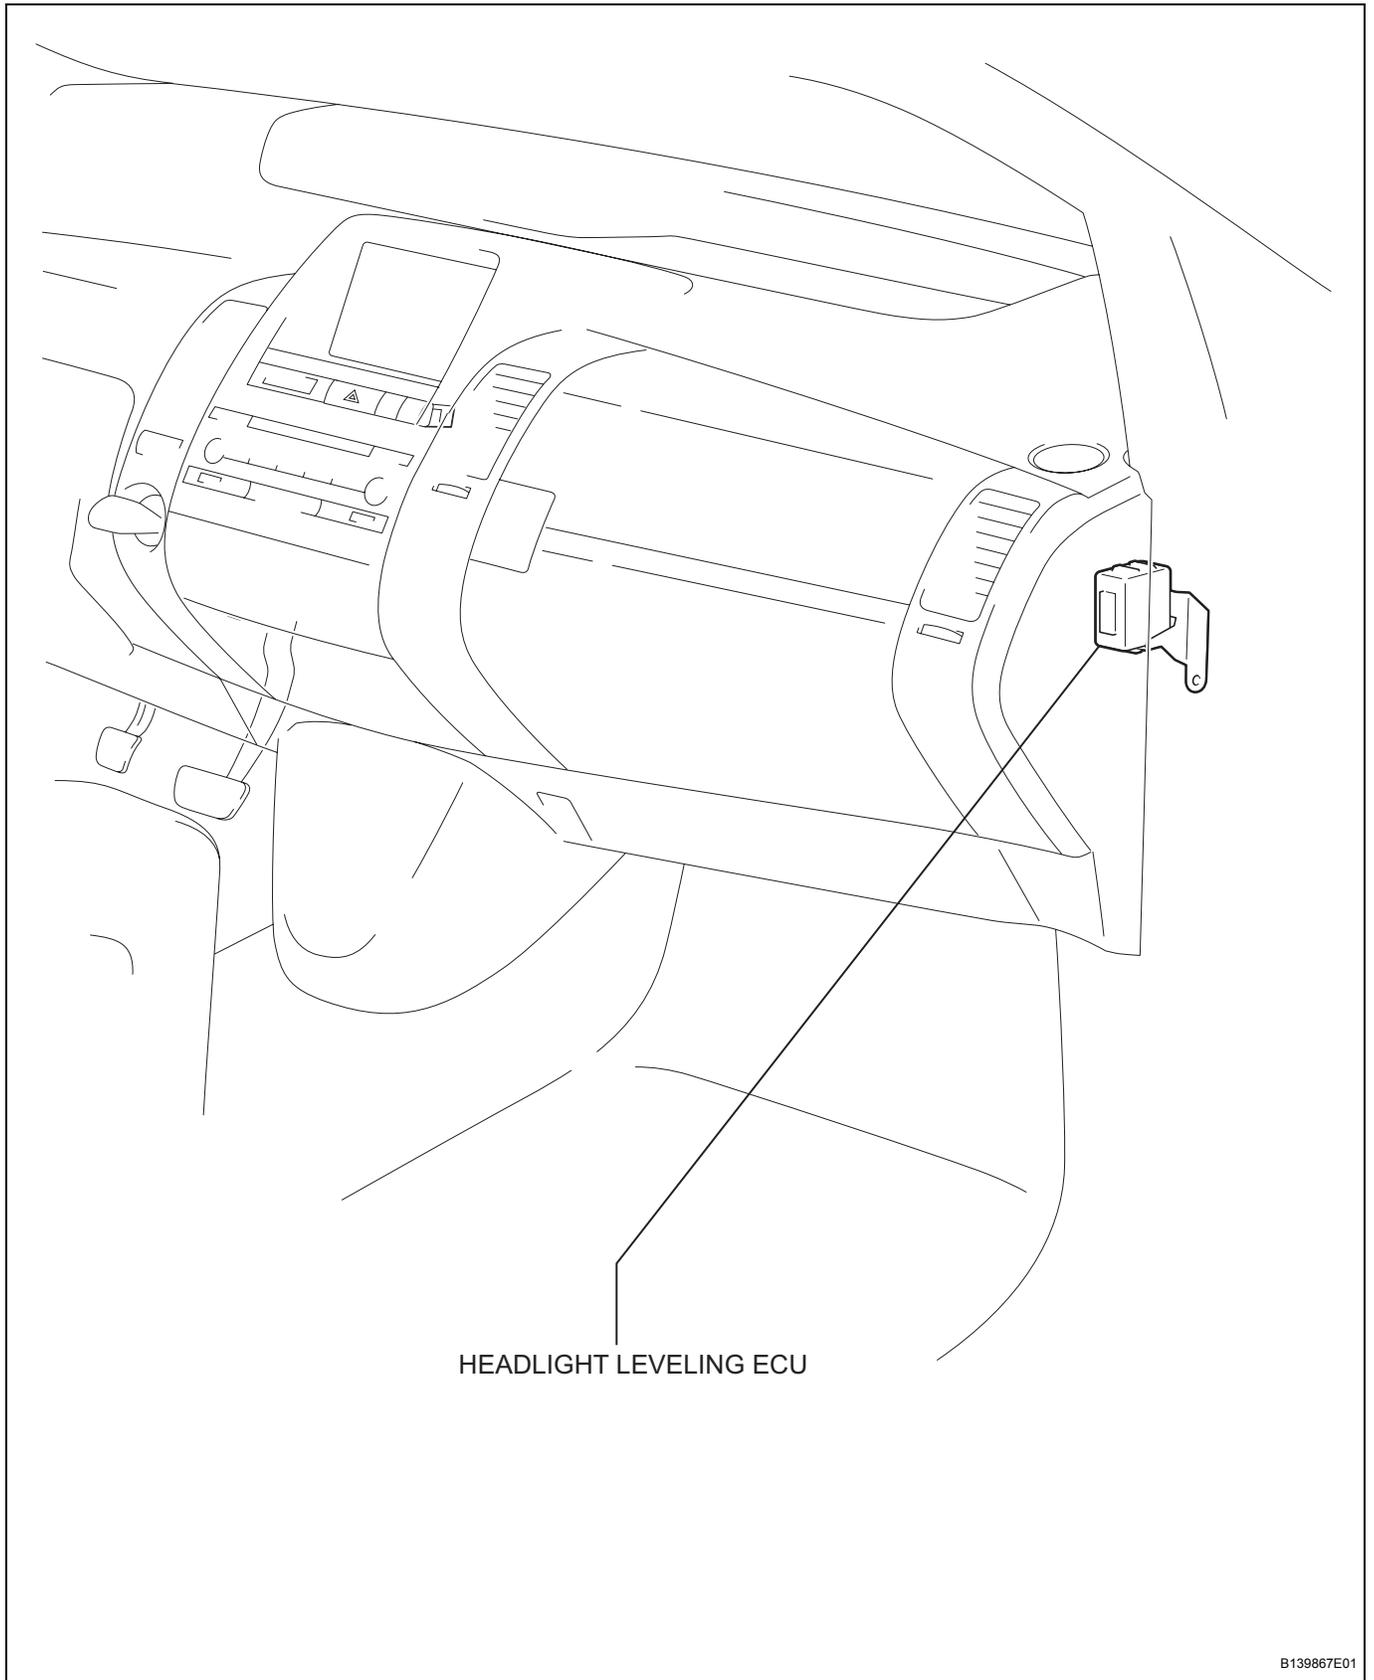



REMOVAL

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-7](#))
3. REMOVE ECM (See page [ES-491](#))
4. REMOVE HEADLIGHT LEVELING ECU
 - (a) Disconnect the ECU connector.
 - (b) Remove the bolt and ECU.

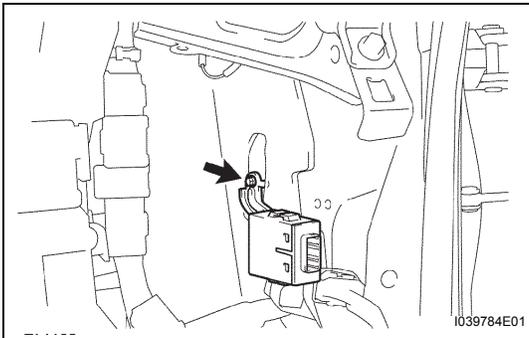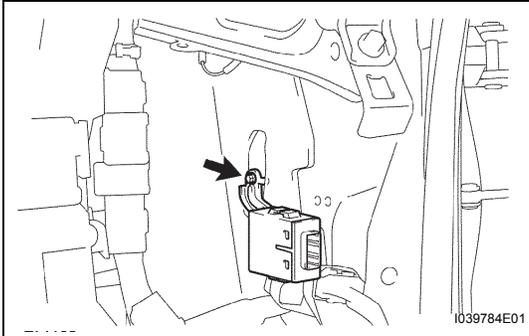

INSTALLATION

1. INSTALL HEADLIGHT LEVELING ECU
 - (a) Install the ECU with the bolt.
 - (b) Connect the connector.
2. INSTALL ECM (See page [ES-492](#))
3. INSTALL GLOVE COMPARTMENT DOOR ASSEMBLY (See page [IP-12](#))
4. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL
5. PERFORM INITIALIZATION
 - (a) Perform initialization (see page [IN-34](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.