

## FACTORY RECOMMENDED MAINTENANCE

This maintenance schedule is not applicable to pre-2001 Civic models.

### Regular Required Maintenance Services

#### Type A

Replace engine oil and filter.  
- use only Genuine Honda motor oil specific to your Civic model (please refer to Oil Type chart)

#### Type B

Replace engine oil\* and filter.  
Service front and rear brakes.  
Rotate tires\*\*, inspect for wear and adjust pressure.  
Lubricate all hinges, locks and latches with multipurpose grease.  
Inspect tie rod ends, steering gear box and boots.  
Inspect suspension components.  
Inspect driveshaft boots.

#### Type C

Replace engine oil\* and filter.  
Service front and rear brakes.  
Rotate tires\*\*, inspect for wear and adjust pressure.  
Lubricate all hinges, locks and latches with multipurpose grease.  
Inspect tie rod ends, steering gear box and boots.  
Inspect suspension components.  
Inspect driveshaft boots.  
Inspect parking brake adjustments.  
Inspect brake hoses and lines (including ABS).  
Check all fluid levels, condition of fluids and check for leaks.  
Inspect cooling system hoses and connections.  
Inspect exhaust system.  
Inspect fuel lines and connections.  
Check all lights.  
Inspect the underbody.

#### Type D

Replace engine oil\* and filter.  
Service front and rear brakes.  
Rotate tires\*\*, inspect for wear and adjust pressure.  
Lubricate all hinges, locks and latches with multipurpose grease.  
Inspect tie rod ends, steering gear box and boots.  
Inspect suspension components.  
Inspect driveshaft boots.  
Inspect and adjust drive belts.  
Replace air conditioning filter.  
Replace air cleaner element.

#### Type E

Replace engine oil\* and filter.  
Service front and rear brakes.  
Rotate tires\*\*, inspect for wear and adjust pressure.  
Lubricate all hinges, locks and latches with multipurpose grease.  
Inspect tie rod ends, steering gear box and boots.  
Inspect suspension components.  
Inspect driveshaft boots.  
Inspect parking brake adjustments.  
Inspect brake hoses and lines (including ABS).  
Check all fluid levels, condition of fluids and check for leaks.  
Inspect cooling system hoses and connections.  
Inspect exhaust system.  
Inspect fuel lines and connections.  
Check all lights.  
Inspect the underbody.  
Inspect and adjust drive belts.  
Replace air conditioning filter.  
Replace air cleaner element.

Note:

Check tire inflation and condition at least once per month.  
Check engine oil and coolant at each fuel stop.

\*Use only Genuine Honda motor oil specific to your Civic model (please refer to Oil Type chart).

\*\*Tires may require more frequent rotation depending on road conditions, alignment and driving habits.

## HONDA CIVIC CANADIAN MAINTENANCE SCHEDULE

Your scheduled maintenance is determined by the odometer reading or the time interval, whichever occurs first. However, most maintenance items are more dependent on distance driven than time.

Recommended Km	Mths	Regular Required Maintenance
8,000	4	Type A
16,000 <sup>†</sup>	8	Type B
24,000	12	Type A
32,000	16	Type C
40,000	20	Type A
48,000	24	Type D
56,000	28	Type A
64,000	32	Type C
72,000	36	Type A
80,000	40	Type B
88,000	44	Type A
96,000	48	Type E
104,000	52	Type A
112,000	56	Type B
120,000	60	Type A
128,000	64	Type C
136,000	68	Type A
144,000	72	Type D
152,000	76	Type A
160,000	80	Type C
168,000	84	Type A
176,000	88	Type B
184,000	92	Type A
192,000	96	Type E
200,000	100	Type A
208,000	104	Type B
216,000	108	Type A
224,000	112	Type C
232,000	116	Type A
240,000	120	Type D

<sup>†</sup>Depending on driving conditions, brakes may only require inspection at this interval.

### OIL TYPE

GENUINE HONDA  
0W-20 MOTOR OIL

Civic Hybrid

GENUINE HONDA  
5W-20 MOTOR OIL

Civic Sedan, Civic Coupe,  
Civic SiR



HONDA

## SPECIFIC ADDITIONAL REQUIRED MAINTENANCE

As part of your regularly scheduled maintenance program, having these additional services performed at the time and distance recommended is vital to keeping your Civic in maximum operating condition.

Recommended Km/Mths	Specific Additional Required Maintenance
Every 48,000 km <sup>†</sup> or 24 months	Replace Continuously Variable Transmission (CVT) fluid. - use only Genuine Honda ATF - Z1
96,000 km or 36 months	Replace automatic transmission fluid and every 48,000 km thereafter. - use only Genuine Honda ATF - Z1
Every 96,000 km or 36 months	Replace manual transmission fluid. - use only Genuine Honda MTF
96,000 km	Remove and inspect spark plugs, lubricate threads. Replace if necessary.
100,000 km <sup>**</sup>	Replace timing belt if vehicle is regularly driven in very low temperatures (under -29°C; -20°F).
176,000 km <sup>**</sup>	Inspect valve clearance, cold engine. Replace spark plugs. Replace timing belt, inspect water pump. Inspect idle speed.
192,000 km or 120 months	Replace engine coolant and every 96,000 km or 60 months thereafter. - use only Genuine Honda long life coolant
Every 36 months	Replace brake fluid. - use only Genuine Honda brake fluid
No specified interval	Adjust valve clearance if noisy.

<sup>†</sup>CVT fluid replacement is only required for Civic Hybrid.

<sup>\*\*</sup>Civic SiR equipped with timing chain. Timing belt replacement not required.

### Canadian Maintenance Schedule and Owner's Manual Cross Reference

Type A maintenance service is equivalent to A in the Owner's Manual.  
Type B maintenance service is equivalent to A and B in the Owner's Manual.  
Type C maintenance service is equivalent to A, B and C in the Owner's Manual.  
Type D maintenance service is equivalent to A, B, D and E in the Owner's Manual.  
Type E maintenance service is equivalent to A, B, C, D and E in the Owner's Manual.

