

# Iconic Prius (2004 – 2009)

## Extended Maintenance Schedule

(Up to 300,000 miles)

By USBseawolf2000

Updated: 10/19/2010

Disclaimer: I do not take any responsibility for any damage caused by the content of this document. It is written with the best of my ability based on the original document by Toyota and the group knowledge at PriusChat.

Iconic Prius (2004 – 2009) 5,000 Miles - 6 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 10,000 Miles - 12 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 15,000 Miles - 18 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See page 21 for details.

Iconic Prius (2004 – 2009) 20,000 Miles - 24 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 25,000 Miles - 30 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 30,000 Miles - 36 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 35,000 Miles - 42 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 40,000 Miles - 48 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 45,000 Miles - 54 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See page 21 for details.

Iconic Prius (2004 – 2009) 50,000 Miles - 60 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 55,000 Miles - 66 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 60,000 Miles - 72 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts<sup>5</sup>
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Replace automatic transmission fluid
- Replace differential oil
- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See page 21 for details.
- 4) Inspect thickness measurement and disc runout.
- 5) Initial inspection at 60,000 miles/72 months. Inspect every 15,000 miles/18 months thereafter.

Iconic Prius (2004 – 2009) 65,000 Miles - 78 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 70,000 Miles - 84 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

### Iconic Prius (2004 – 2009) 75,000 Miles - 90 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

#### **Additional Maintenance Items for Special Operating Conditions:**

##### **Driving While Towing**

- Tighten nuts and bolts on chassis

##### **Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

#### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 80,000 Miles - 96 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 85,000 Miles - 102 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

### Iconic Prius (2004 – 2009) 90,000 Miles - 108 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

#### **Additional Maintenance Items for Special Operating Conditions:**

##### **Driving While Towing**

- Tighten nuts and bolts on chassis

##### **Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

#### **Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 95,000 Miles - 114 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 100,000 Miles - 120 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace engine and inverter coolant<sup>6</sup>
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

6) Initial replacement at 100,000 miles/120 months. Replace every 50,000 miles/60 months thereafter. See Maintenance

Definitions (Engine Coolant) for details.

Iconic Prius (2004 – 2009) 105,000 Miles - 126 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 110,000 Miles - 132 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 115,000 Miles - 138 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 120,000 Miles - 144 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Replace spark plugs<sup>7</sup>
- Replace Automatic transmission fluid (hybrid transaxle)
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Replace automatic transmission fluid
- Replace differential oil
- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

7) Required under the terms of the Emission Control Warranty. Does not apply to PZEV Prius in California, New York,

Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles.

Iconic Prius (2004 – 2009) 125,000 Miles - 150 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 130,000 Miles - 156 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 135,000 Miles - 162 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 140,000 Miles - 168 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 145,000 Miles - 174 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 150,000 Miles - 180 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Replace engine and inverter coolant
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See page 21 for details.
- 4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 155,000 Miles - 186 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 160,000 Miles - 192 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 165,000 Miles - 198 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 170,000 Miles - 204 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 175,000 Miles - 210 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 180,000 Miles - 216 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Replace Automatic transmission fluid (hybrid transaxle)
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.
- 3) See page 21 for details.
- 4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 185,000 Miles - 222 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder (“MAINT REQD”) light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 190,000 Miles - 228 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 195,000 Miles - 234 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 200,000 Miles - 240 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace engine and inverter coolant
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 205,000 Miles - 246 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 210,000 Miles - 252 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 215,000 Miles - 258 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 220,000 Miles - 264 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 225,000 Miles - 270 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 230,000 Miles - 276 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 235,000 Miles - 282 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 240,000 Miles - 288 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Replace Automatic transmission fluid (hybrid transaxle)
- Replace spark plugs<sup>7</sup>
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Engine valve clearance
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Replace automatic transmission fluid
- Replace differential oil
- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

7) Required under the terms of the Emission Control Warranty. Does not apply to PZEV Prius in California, New York, Massachusetts, Maine and Vermont. For this model, replacement interval is 150,000 miles - see 300,000 miles.

Iconic Prius (2004 – 2009) 245,000 Miles - 294 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 250,000 Miles - 300 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace engine and inverter coolant
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 255,000 Miles - 306 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 260,000 Miles - 312 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 265,000 Miles - 318 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 270,000 Miles - 324 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace cabin air filter
- Replace engine air filter
- Inspect the following:
  - \_\_\_ Automatic transmission fluid
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Brake linings/drums and brake pads/discs<sup>4</sup>
  - \_\_\_ Differential oil
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Fuel lines and connections, fuel tank band and fuel tank vapor vent system hoses
  - \_\_\_ Fuel tank cap gasket
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

4) Inspect thickness measurement and disc runout.

Iconic Prius (2004 – 2009) 275,000 Miles - 330 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 280,000 Miles - 336 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 285,000 Miles - 342 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs
- Inspect the following:
  - \_\_\_ Ball joints and dust covers
  - \_\_\_ Brake lines and hoses
  - \_\_\_ Drive belts
  - \_\_\_ Drive shaft boots
  - \_\_\_ Engine and inverter coolant<sup>3</sup>
  - \_\_\_ Exhaust pipes and mountings
  - \_\_\_ Radiator, condenser and intercooler
  - \_\_\_ Steering gear box
  - \_\_\_ Steering linkage and boots

**Note:** Driving in heavy traffic, on dirt roads or in urban, dusty or desert areas may shorten the life of the cabin air filter. Replacement may be needed if you notice reduced airflow from the air conditioner and heater or if the windows fog easily when you use the "Fresh" mode. Consult your dealer if any of these conditions occur.

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect engine air filter
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

3) See page 21 for details.

Iconic Prius (2004 – 2009) 290,000 Miles - 348 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 295,000 Miles - 354 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

- 1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

Iconic Prius (2004 – 2009) 300,000 Miles - 360 Months

- Replace engine oil and oil filter<sup>1</sup>
- Rotate tires
- Replace engine and inverter coolant
- Replace Automatic transmission fluid (hybrid transaxle)
- Replace spark plugs<sup>8</sup>
- Visually inspect brake linings/drums and brake pads/discs

**Additional Maintenance Items for Special Operating Conditions:**

**Driving While Towing**

- Tighten nuts and bolts on chassis

**Driving in Desert or On Dirt Roads**

- Inspect ball joints and dust covers
- Inspect drive shaft boots
- Inspect engine air filter
- Inspect steering linkage and boots
- Tighten nuts and bolts on chassis

**Applicable Footnotes:**

1) Reset the oil replacement reminder ("MAINT REQD") light after replacing engine oil, if vehicle is equipped with this light.

8) Apply to PZEV Prius in California, New York, Massachusetts, Maine and Vermont.