

## CUSTOMIZE PARAMETERS

### HINT:

The following items can be customized.

### NOTICE:

- When the customer requests a change in a function, first make sure that the function can be customized.
- Be sure to make a note of the current settings before customizing.
- When troubleshooting a function, first make sure that the function is set to the default setting.

### 1. AIR CONDITIONING SYSTEM

#### AIR CONDITIONER:

DISPLAY (ITEM)	DEFAULT	CONTENTS	SETTING
SET TEMP SHIFT (Set Temperature Shift)	NORMAL	To shift the temperature against the displayed temperature	+2 C / +1 C / NORMAL / -1 C / -2 C
AIR INLET MODE (Air Inlet Mode)	AUTO	In case of turning the A/C ON when you desire to make the compartment cool down quickly, this is the function to change the mode automatically to RECIRCULATION mode	MANUAL / AUTO
COMPRESSOR MODE (Compressor Mode)	AUTO	Function to turn the A/C ON automatically by pressing the AUTO button when the blower is ON and the A/C is OFF	MANUAL / AUTO
COMPRS / DEF OPER (Compressor / Air Inlet DEF Operation)	LINK	Function to turn the A/C ON automatically linked with the FRONT DEF button when the A/C is OFF	NORMAL / LINK
EVAP CTRL (Evaporator Control)	AUTO	Function to set the evaporator control to the AUTOMATIC position (AUTO) to save power, or to the coldest position (MANUAL) to dehumidify the air and to prevent the windows from fogging up	MANUAL / AUTO
FOOT / DEF MODE (Foot / DEF Auto Mode)	ON	Function to turn the airflow from FOOT/DEF ON automatically when AUTO MODE is ON	OFF / ON
AUTO BLOW UP (Foot / DEF Automatic Blower Up Function)	ON	Function to change the blower level automatically when the defroster is ON	OFF / ON
AMBIENT TMP SFT (Ambient Temperature Shift)	NORMAL	Function to shift the ambient temperature against the displayed ambient temperature	+3 C / +2 C / +1 C / NORMAL / -1 C / -2 C / -3 C

### 2. LIGHTING SYSTEM

#### ILLUMINATED ENTRY:

Display	Default	Contents	Setting
LIGHTING TIME	15 s	Changes the lighting time of the interior light and power switch illumination.	7.5 s / 15 s / 30 s
I/L ON / UNLOCK	ON	Lights up the interior light and power switch illumination when a door is unlocked.	ON / OFF
I/L ON / ACC OFF	ON	Lights up the interior light and power switch illumination when the power switch is turned from on (ACC) to off	ON / OFF

#### LIGHT CONTROL:


Display	Default	Contents	Setting
LIGHT OFF DELAY	30 s	Keeps the headlights on for a certain period of time after turning the power switch off and closing all the doors with the headlights on.	OFF / 30 s / 60 s / 90 s

Display	Default	Contents	Setting
SENSITIVITY	NORMAL	Adjusts the sensitivity of the automatic light control system. *1	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2
DISP EX ON SEN	NORMAL	Changes the ambient brightness level required to dim the lights such as the indicator lights of the combination meter, A/C indicator light, and clock. *1	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2
DISP EX OFF SEN	NORMAL	Changes the ambient brightness level required to cancel the dimming of the lights such as the indicator lights of the combination meter, A/C indicator light, and clock.	LIGHT 2 / LIGHT 1 / NORMAL / DARK 1 / DARK 2

**HINT:**

Sensitivity adjustment can hardly be confirmed. Check by driving the customer's vehicle.

**Illustration \*1**

Ambient Brightness Level					
Setting	DARK2	DARK1	NORMAL	LIGHT1	LIGHT2

**3. POWER DOOR LOCK CONTROL SYSTEM****DOOR LOCK:**

Display (Item)	Default	Contents	Setting
UNLOCK/PARK (Unlock, power switch on (IG), shift P, speed 0 km/h (0 mph))	ON	Function that unlocks doors when the shift lever is moved to the P position from any other position while the power switch is on (IG)	ON/OFF
ALL UNLK/OPN-CL (All unlock, D door open-close)	OFF	Function that unlocks all other doors when opening driver side door within 10 seconds after turning the power switch off from on (IG)	ON/OFF
UNLK/KEY TWICE (Unlock, 2 times D key operation)	ON	<ul style="list-style-type: none"> <li>Function that unlocks only the driver side door when the driver side door key cylinder is turned to unlock once and unlocks all the doors when it is turned to unlock twice</li> <li>In the OFF setting, turning it once unlocks all doors</li> </ul>	ON/OFF
AUTO LOCK/SHIFT (Auto lock/shift not P)	ON	Function that locks doors when the shift lever is moved from the P position to any other position	ON/OFF
AUTO LOCK	OFF	Function that locks doors when vehicle reaches a vehicle speed 20 km/h (13 mph)	ON/OFF

**WIRELESS D LOCK**

Display (Item)	Default	Contents	Setting
AUTO LOCK DELAY	60s	Function that selects AUTO LOCK time (30 sec. or 60 sec.)	30s/60s

## 4. WIRELESS DOOR LOCK CONTROL SYSTEM

## WIRELESS DOOR LOCK CONTROL SYSTEM

Display (item)	Default	Function	Setting
TRUNK LID OPER (Wireless trunk opener function setting)	0.8 s PR ON	This function changes operation method of transmitter to open luggage compartment door. <ul style="list-style-type: none"> <li>1 TIME: Push once</li> <li>2 TIMES: Push twice</li> <li>0.8 s PR: Push and hold for 0.8 seconds</li> <li>OFF: Does not operate</li> </ul>	1 TIME/2 TIMES/0.8 s PR/OFF
WIRELESS OPER (Wireless door lock control function)	ON	Function that turns wireless door lock function ON/OFF	ON/OFF
HAZARD ANS BACK (Hazard answer-back for wireless door lock control)	ON	<ul style="list-style-type: none"> <li>When the doors are locked by wireless operation, the hazard warning lights flash once.</li> <li>When the doors are unlocked by wireless operation, the hazard warning lights flash twice.</li> </ul>	ON/OFF
OPEN DOOR WARN (Door ajar warning)	ON	The buzzer sounds when LOCK is pressed when any of the doors are ajar.	ON/OFF
AUTO LOCK DELAY (Auto lock time)	60 s	This function regulates the interval between unlocking and automatic relocking of doors.	30 s/60 s
UNLOCK /2OPER (Wireless unlock operated twice)	ON	This function unlocks the driver's door when the UNLOCK switch is pressed once, and unlocks all doors when pressed twice within 3 seconds. If set to OFF, pressing UNLOCK once unlocks all doors.	ON/OFF
ALARM FUNCTION (Panic function)	ON	This function operates the theft deterrent system when PANIC is pressed and held for 0.8 seconds.	ON/OFF
WIRLS BUZZ RESP (Wireless buzzer answer-back)	ON	Wireless door lock buzzer response/ON or OFF	ON/OFF

## 5. SMART KEY SYSTEM (DOOR LOCK)

## SMART:

Display (Item)	Default	Contents	Setting
PARK WAIT TIME (Wait time to permit opening door after locking)	2.5s	Function that sets waiting time to permit opening door after door is locked with entry lock function.	0.5s / 1.5s / 2.5s / 5.0s
SMART UNLOCK	D_DOOR	Function that switches the entry unlock detection area.	ALL / D_DOOR
IGNITION AREA (SMART ignition available area)	ALL	Function to choose the available area for electrical key to start HV control system and cancel the steering lock.	FRONT / ALL
SMART TRUNK (Luggage compartment opening operation)	ON	Function to open a luggage compartment when the driver has the electrical key and presses the luggage open button.	ON / OFF

## WIRELESS DOOR LOCK:

Display (Item)	Default	Contents	Setting
ALARM FUNCTION (Panic function)	ON	Function to operate the theft deterrent system by keeping pressing the lock button of the transmitter for 2.5 seconds. If there is a panic button, press the panic button instead of the lock button.	ON / OFF

## WARNING:

Display (Item)	Default	Contents	Setting
KEY LOW-BATT WRN	ON	Function to set a warning function for the time when a key battery becomes weak.	ON / OFF

## 6. METER / GAUGE SYSTEM

### METER:

Display (Item)	Default	Contents	Setting
KEY REMND VOLUM	LARGE	Function to change the volume of the key reminder warning buzzer	LARGE, MEDIUM, SMALL
KEY REMND SOUND	NORMAL	Function to change the cycle of the key reminder warning buzzer	FAST, NORMAL, SLOW
SEAT-BELT WARN	D/P ON	Function to change the setting of the seat belt buzzer	D/P ON, D ON, P ON, D/P OFF

#### HINT:

This setting is only valid for the buzzer which sounds at 5 km/h (3 mph) or more.

## 7. SLIDING ROOF SYSTEM

### Sliding roof ECU

Display (Item)	Default	Contents	Setting
OPEN/DOOR KEY	ON	Function to manually open sliding roof linked with power window if holding driver's side and passenger's side door key for 1.5 seconds or more to unlock position when power switch is off	ON/OFF
CLOSE/DOOR KEY	ON	Function to manually close sliding roof linked with power window if holding driver's side and passenger's side door key for 1.5 seconds or more to lock position when power switch is off	ON/OFF
OPEN/WIRELESS	ON	Function to manually open sliding roof linked with power window if pressing transmitter UNLOCK switch for 2.4 seconds or more when power switch is off	ON/OFF
CLOSE/WIRELESS	ON	Function to manually close sliding roof linked with power window if pressing transmitter LOCK switch for 2.4 seconds or more when power switch is off	ON/OFF
DOOR KEY OPER	SLIDE	Function to select tilt up or slide open of manual sliding roof operation linked with power window Activated by holding driver's side door key for 1.5 seconds or more to unlock position when power switch is off	TILT/SLIDE
WIRELESS OPER	SLIDE	Function to select tilt up or slide open of manual sliding roof operation linked with power window Activated by pressing transmitter UNLOCK switch for 2.4 seconds or more when power switch is off	TILT/SLIDE