

INITIALIZATION

NOTICE:

When disconnecting the negative (-) battery terminal, initialize the following system(s) after the terminal is reconnected.



System Name	See Step No.
Power Window Control System	1

1. RESET (INITIALIZE) POWER WINDOW REGULATOR MOTOR (for Driver Side)

NOTICE:

Resetting the power window regulator motor (initializing the pulse sensor) is necessary if: 1) the battery terminal cable is disconnected; 2) the power window regulator master switch assembly, wire harness, power window regulator switch, power window regulator assembly and power window regulator motor are replaced or removed / installed; or 3) the PWR H-fuse, FR DOOR fuse, GAUGE fuse and ECU-IG fuse are replaced. If resetting is not performed, the master switch assembly will not be able to operate the AUTO operation function, jam protection function and remote UP / DOWN function.

- (a) *1: Turn the power switch ON (IG).
- (b) *2: Open the power window halfway by pressing the power window switch.
- (c) *3: Fully pull up on the switch until the power window is fully closed and continue to hold the switch for at least 1 second.
- (d) *4: Check that the AUTO UP / DOWN function operates normally.
If the AUTO UP / DOWN function operates normally, reset operations are complete. If abnormal, follow steps below.
- (e) Disconnect the negative (-) battery terminal cable for 10 seconds.
- (f) Connect the battery terminal cable.
- (g) Perform steps *1 to *4 again.