


- (b) Take the following precautions when removing and installing the fuel injector.
- (1) Do not reuse the O-ring.
 - (2) Do not damage a new O-ring when installing it to the fuel injector.
 - (3) Before installing a new O-ring, apply spindle oil or gasoline.

NOTICE:

Do not use engine oil, gear oil or brake oil.

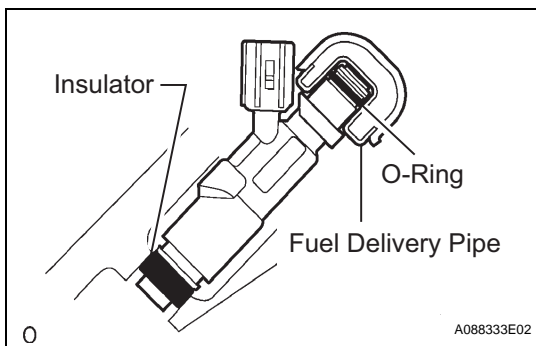

- (c) Install the fuel injector to the fuel delivery pipe and cylinder head as illustrated.

NOTICE:

Apply spindle oil or gasoline to the contact surface of the fuel delivery pipe and fuel injector before installing the fuel injector.