


<b>Last Modified:</b> 4-24-2009	5.7 A	<b>From:</b> 200904
<b>Model Year:</b> 2010	<b>Model:</b> Prius	<b>Doc ID:</b> RM00000225E004X
<b>Title:</b> INTERIOR PANELS / TRIM: ROOF HEADLINING: REMOVAL (2010 Prius)		

## REMOVAL

### 1. REMOVE REAR NO. 2 FLOOR BOARD (for Separate Type)

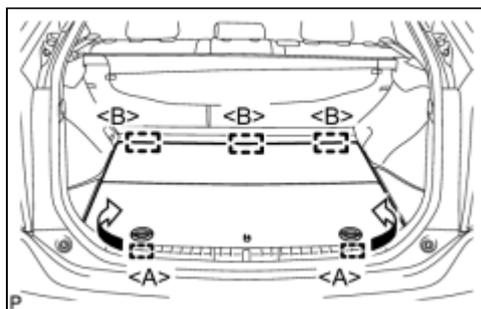

(a) Disengage the 2 guides <A> as shown in the illustration.

(b) Disengage the 3 guides <B> and remove the rear No. 2 floor board.

### 2. REMOVE REAR DECK FLOOR BOX

(a) Remove the rear deck floor box.

### 3. REMOVE REAR NO. 3 FLOOR BOARD



(a) Disengage the 2 guides and remove the rear No. 3 floor board.


### 4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

#### NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected




### 5. REMOVE FRONT DOOR SCUFF PLATE LH

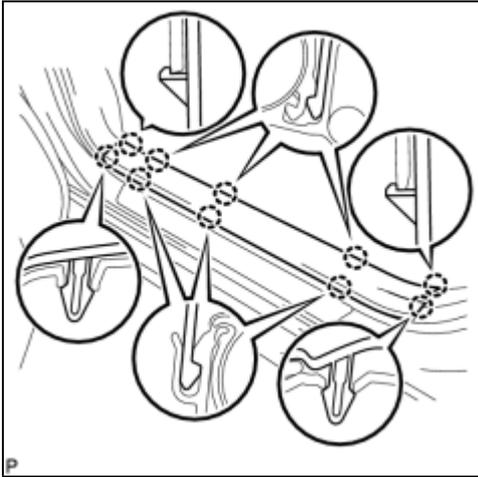

(a) Disengage the 10 claws and remove the front door scuff plate LH.


## 6. REMOVE COWL SIDE TRIM SUB-ASSEMBLY LH

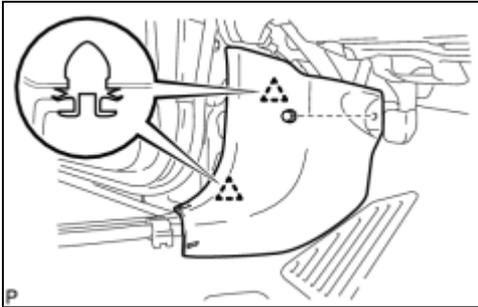

(a) Remove the clip.


(b) Disengage the 2 clips and remove the cowl side trim sub-assembly LH.

## 7. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP LH

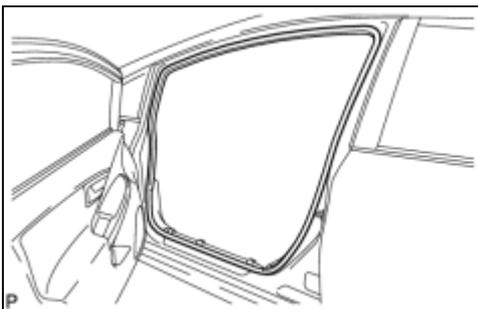

(a) Remove the front door opening trim weatherstrip LH.

## 8. REMOVE FRONT PILLAR GARNISH LH

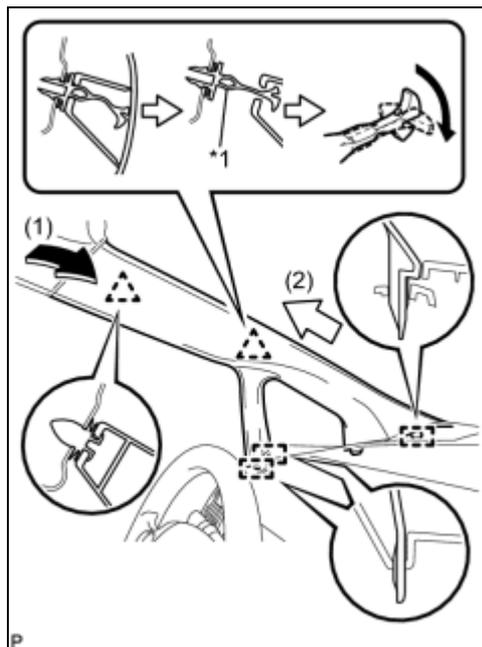

(a) Pull the upper part of the garnish toward the inside of the cabin and disengage the 2 clips.

### Text in Illustration

*1	Front Pillar Garnish Clip
----	---------------------------

### HINT:

Make the front pillar garnish RH hang down from the front pillar garnish clip.

(b) Turn the end of the front pillar garnish clip 90° with needle-nosed pliers and remove it from the front pillar garnish RH.

### NOTICE:


- Front pillar garnish clips are reusable if they are not removed from the vehicle and have no damage.
- Replace the front pillar garnish clips with new ones if they are removed from the vehicle.

### HINT:

Tape the needle-nosed pliers tip before use.

(c) Disengage the 3 guides and remove the front pillar garnish LH.

(d) Protect the curtain shield airbag assembly.

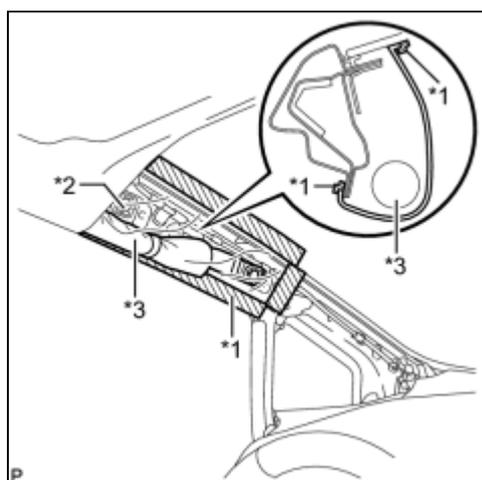

### Text in Illustration


*1	Adhesive Tape
*2	Protective Cover
*3	Curtain Shield Airbag Assembly

(1) Cover the airbag with a cloth or piece of nylon and secure the ends of the cover with tape as shown in the illustration.

### NOTICE:

Cover the curtain shield airbag with a protective cover as soon as the front pillar garnish is removed.

## 9. REMOVE REAR DOOR SCUFF PLATE LH

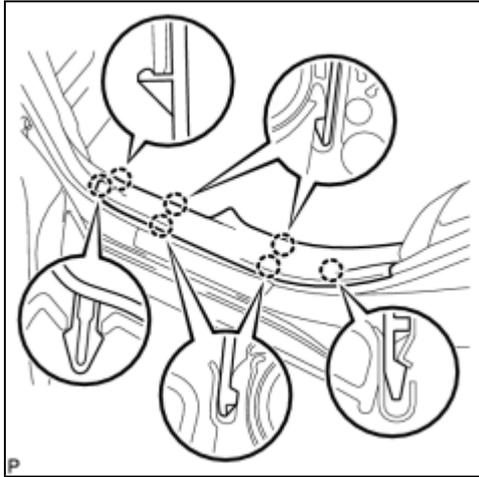

(a) Disengage the 7 claws and remove the rear door scuff plate LH.

### 10. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP LH



(a) Remove the rear door opening trim weatherstrip LH.


### 11. REMOVE LAP BELT OUTER ANCHOR COVER (for LH Side)



### 12. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY LH




### 13. REMOVE CENTER PILLAR LOWER GARNISH LH

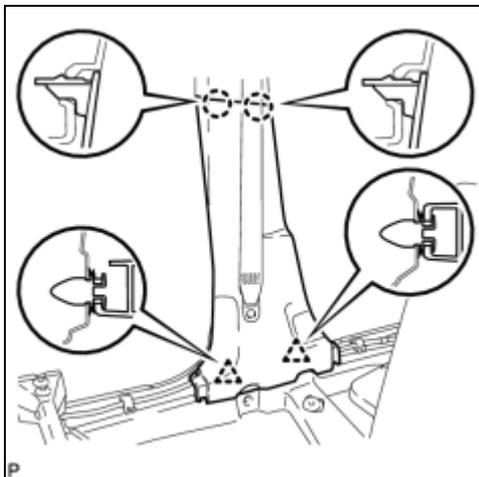

(a) Disengage the 2 claws and 2 clips, and remove the center pillar lower garnish LH.

#### 14. REMOVE CENTER PILLAR GARNISH LH

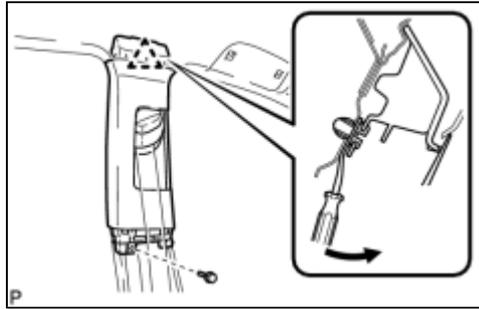

(a) Remove the screw.

(b) Using a clip remover, disengage the clip.

(c) Pass the floor anchor of the front seat outer seat belt assembly LH through the center pillar garnish LH and remove the center pillar garnish LH.

#### 15. REMOVE FRONT DOOR SCUFF PLATE RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 16. REMOVE COWL SIDE TRIM SUB-ASSEMBLY RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 17. REMOVE FRONT DOOR OPENING TRIM WEATHERSTRIP RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 18. REMOVE FRONT PILLAR GARNISH RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 19. REMOVE REAR DOOR SCUFF PLATE RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 20. REMOVE REAR DOOR OPENING TRIM WEATHERSTRIP RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 21. REMOVE LAP BELT OUTER ANCHOR COVER (for RH Side)

##### **HINT:**

Use the same procedure described for the LH side.

#### 22. DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY RH

**HINT:**

Use the same procedure described for the LH side.

**23. REMOVE CENTER PILLAR LOWER GARNISH RH****HINT:**

Use the same procedure described for the LH side.

**24. REMOVE CENTER PILLAR GARNISH RH****HINT:**


Use the same procedure described for the LH side.

**25. REMOVE REAR SEAT CUSHION ASSEMBLY****INFO****26. REMOVE REAR SIDE SEATBACK ASSEMBLY LH****INFO****27. REMOVE REAR SIDE SEATBACK ASSEMBLY RH****INFO****28. REMOVE UPPER INSTRUMENT PANEL ASSEMBLY**

- (a) Remove the upper instrument panel assembly


**INFO****29. REMOVE TONNEAU COVER ASSEMBLY (w/ Tonneau Cover)**

- (a) Remove the tonneau cover assembly.

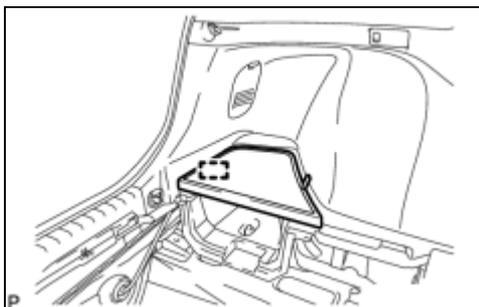**30. REMOVE REAR NO. 4 FLOOR BOARD**

- (a) Disengage the guide and remove the rear No. 4 floor board.


**31. REMOVE DECK FLOOR BOX LH**

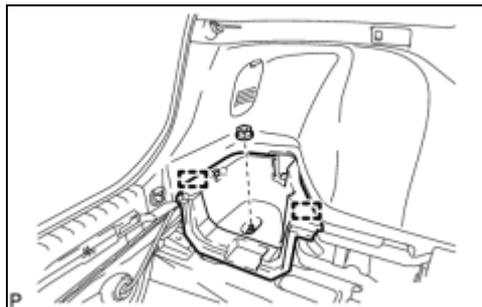

(a) Remove the clip.


(b) Disengage the 2 guides and remove the deck floor box LH.

### 32. REMOVE REAR NO. 1 FLOOR BOARD SUB-ASSEMBLY

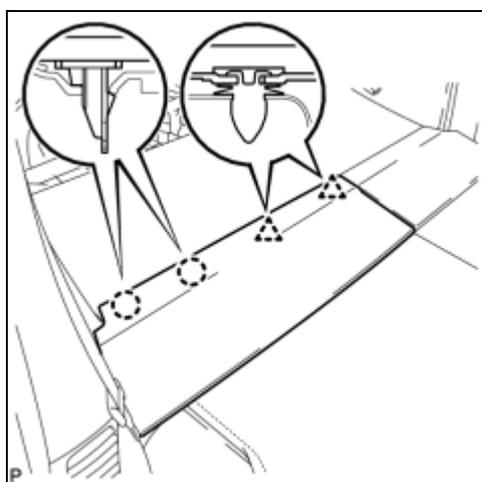


(a) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board sub-assembly.

### 33. REMOVE REAR NO. 2 FLOOR BOARD SUB-ASSEMBLY

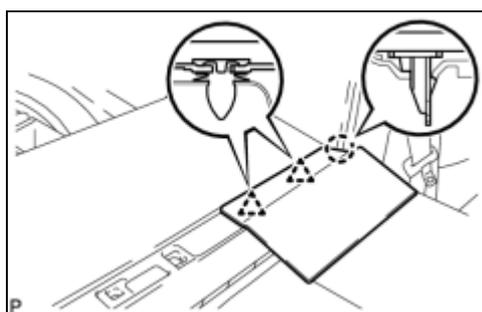

(a) Disengage the claw and 2 clips, and remove the rear No. 2 floor board sub-assembly.


### 34. REMOVE REAR NO. 1 FLOOR BOARD

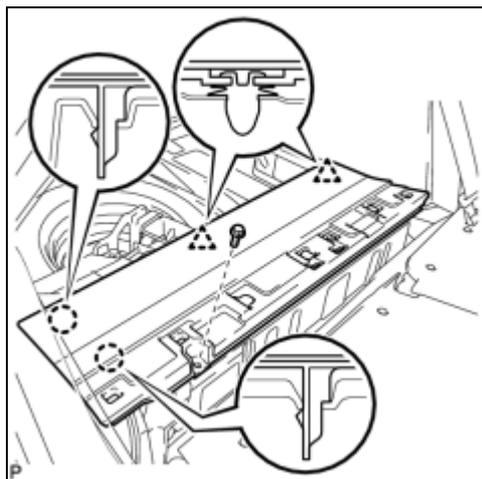

(a) Remove the bolt.


(b) Disengage the 2 claws and 2 clips, and remove the rear No. 1 floor board.

### 35. REMOVE DECK TRIM SERVICE HOLE COVER

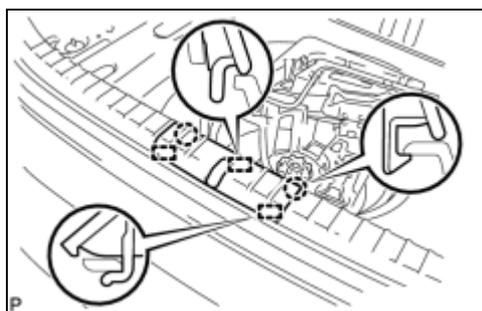


(a) Disengage the 2 claws and 3 guides, and remove the deck trim service hole cover.

### 36. REMOVE REAR DECK TRIM COVER

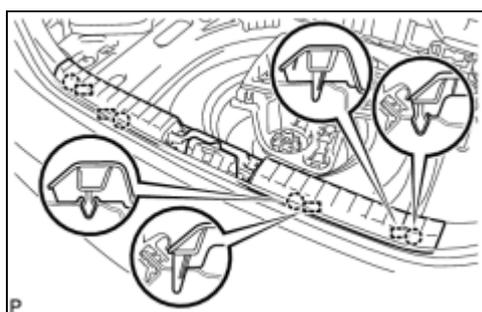

(a) Disengage the 4 claws and 4 guides, and remove the rear deck trim cover.

### 37. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for LH Side)

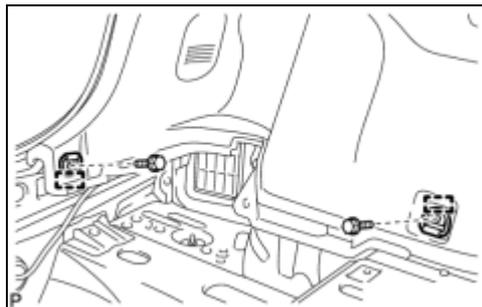


(a) Remove the 2 bolts.

(b) Disengage each guide and remove the 2 luggage hold belt striker assemblies.

**38. REMOVE TONNEAU COVER HOLDER CAP (for LH Side)**

(a) Using a screwdriver, disengage the claw and remove the tonneau cover holder cap.

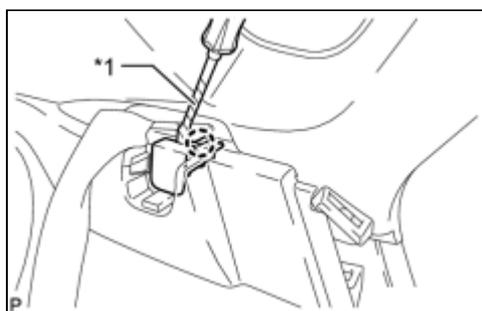

**Text in Illustration**


*1	Protective Tape
----	-----------------

**HINT:**

**Tape the screwdriver tip before use.**


**39. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

- (a) Remove the screw.
- (b) Disengage the 7 claws and 2 clips.
- (c) Disconnect the connector and remove the deck trim side panel assembly LH.

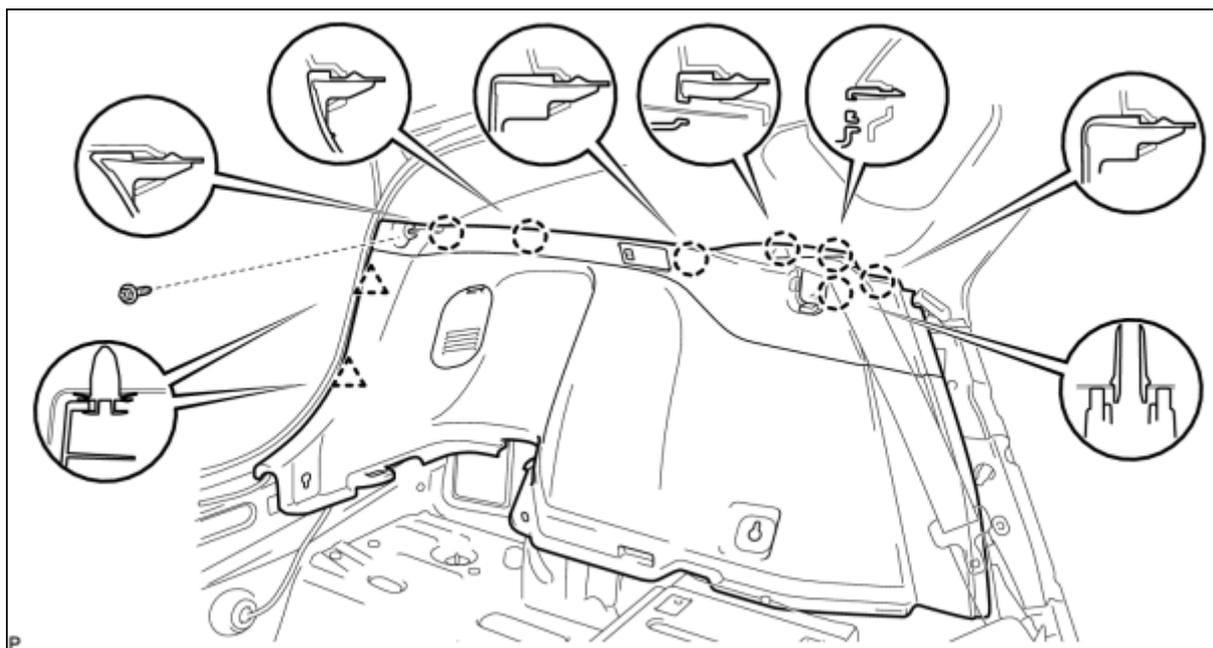

**40. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH**

- (a) Disengage the 9 clips and remove the roof side inner garnish assembly LH.

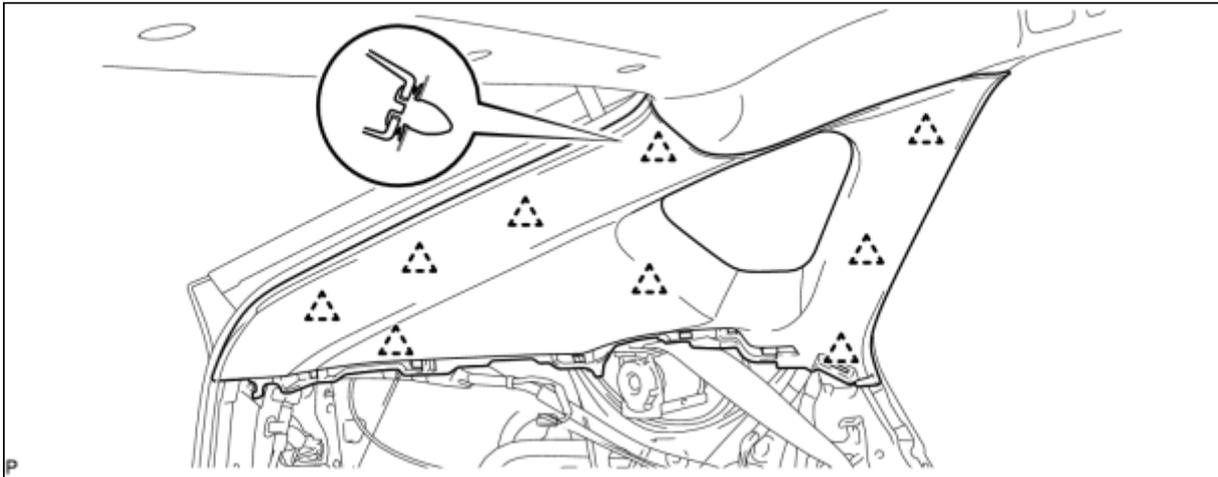

#### 41. REMOVE LUGGAGE HOLD BELT STRIKER ASSEMBLY (for RH Side)

##### **HINT:**

Use the same procedure described for the LH side.


#### 42. REMOVE TONNEAU COVER HOLDER CAP (for RH Side)

##### **HINT:**

Use the same procedure described for the LH side.

#### 43. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH


- (a) Remove the screw.  
 (b) Disengage the 7 claws and 2 clips, and remove the deck trim side panel assembly RH.

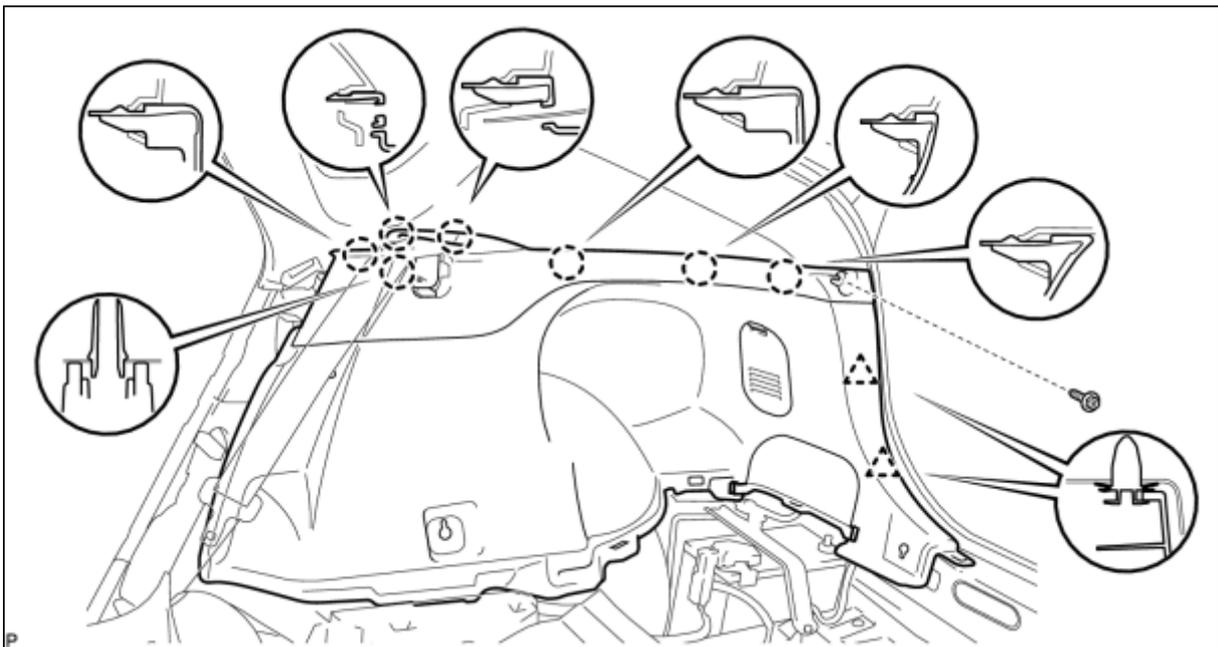


#### 44. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH

**HINT:**

Use the same procedure described for the LH side.

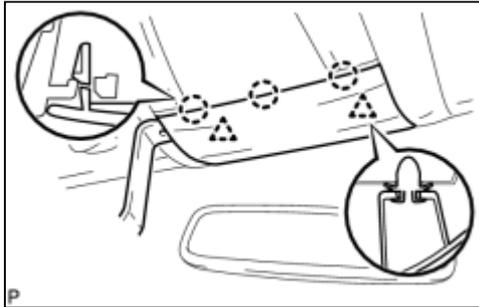
**45. REMOVE INNER REAR VIEW MIRROR COVER (w/ EC Mirror)****46. REMOVE ROOF TOP MOULDING (w/o Lane Keeping Assist System)**

(a) Using a moulding remover, disengage the 3 claws and 2 clips, and remove the roof top moulding.

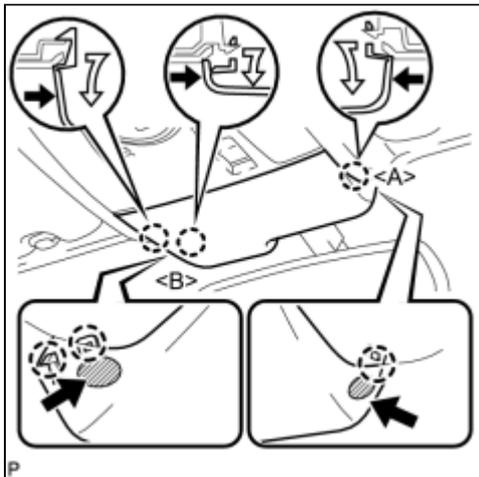**47. REMOVE ROOF TOP MOULDING (w/ Lane Keeping Assist System)**

(a) Disengage the claw <A> as shown in the illustration.

(b) Disengage the 2 claws <B> as shown in the illustration.

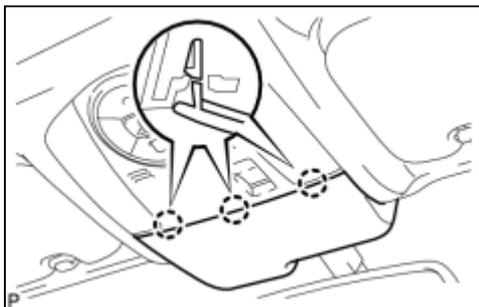

(c) Disengage the 3 claws and remove the roof top moulding.

**48. REMOVE LANE RECOGNITION CAMERA SENSOR ASSEMBLY (w/ Lane Keeping Assist System)**

INFO

**49. REMOVE MAP LIGHT ASSEMBLY (w/o Sliding Roof)**

INFO

**50. REMOVE MAP LIGHT ASSEMBLY (w/ Sliding Roof)**

INFO

**51. REMOVE NO. 1 ROOM LIGHT ASSEMBLY**

INFO

**52. REMOVE FRONT ASSIST GRIP ASSEMBLY**


(a) Using a clip remover, disengage the 4 claws.

**NOTICE:**

**Do not forcibly pry the assist grip covers to prevent them from being deformed.**

- Gently pry on the assist grip covers as shown in the illustration to remove them.
- Tape the clip remover tip before use.

(b) Pull off the 2 assist grip covers by hand.

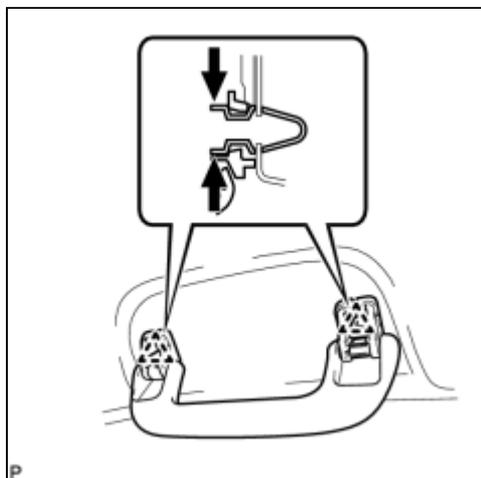

(c) Disengage the 2 clips and remove the front assist grip assembly.

(d) Remove the 2 clips from the vehicle body.

**HINT:**

Use the same procedure for the other front assist grip.

**53. REMOVE REAR ASSIST GRIP ASSEMBLY**


(a) Using a clip remover, disengage the 4 claws.

**NOTICE:**

**Do not forcibly pry the assist grip covers to prevent them from being deformed.**

- Gently pry on the assist grip covers as shown in the illustration to remove them.
- Tape the clip remover tip before use.

(b) Pull off the 2 assist grip covers by hand.

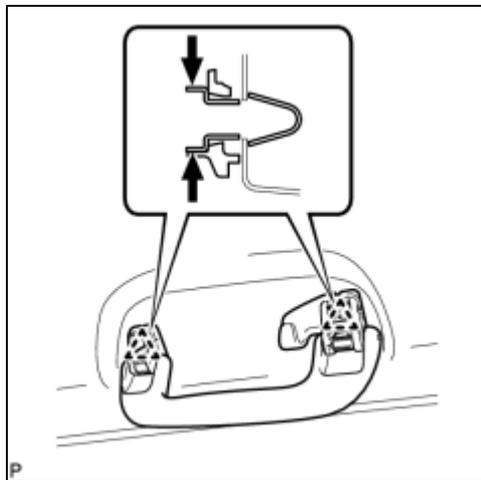


(c) Disengage the 2 clips and remove the rear assist grip assembly.

(d) Remove the 2 clips from the vehicle body.

**HINT:**


Use the same procedure for the other rear assist grip.

**54. REMOVE VISOR BRACKET COVER LH**

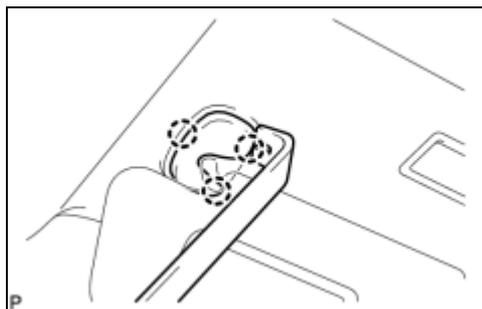

- (a) Using a moulding remover, disengage the 3 claws and remove the visor bracket cover LH.

#### 55. REMOVE VISOR ASSEMBLY LH

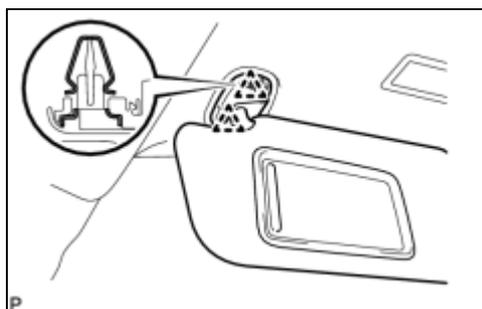

- (a) Disengage the 2 clips and remove the visor assembly LH.

#### 56. REMOVE VISOR BRACKET COVER RH

##### **HINT:**


Use the same procedure described for the LH side.

#### 57. REMOVE VISOR ASSEMBLY RH

##### **HINT:**

Use the same procedure described for the LH side.

#### 58. REMOVE VISOR HOLDER

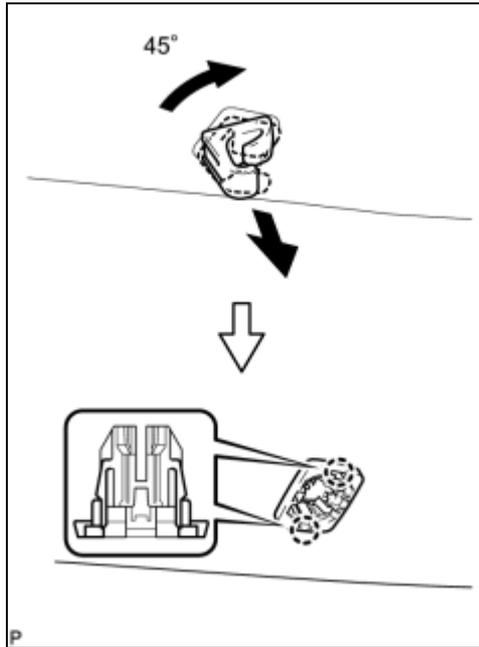

(a) Turn the visor holder approximately 45° and pull it out as shown in the illustration.

(b) Disengage the 2 claws and remove the visor holder.

**HINT:**

Use the same procedure for the other visor holder.

**59. REMOVE ROOF HEADLINING ASSEMBLY (w/o Sliding Roof)**

(a) w/ EC Mirror:

(1) Disengage the 2 clamps and disconnect the inner rear view mirror connector.

(b) w/ Lane Keeping Assist System:

(1) Disengage the clamp and disconnect the inner rear view mirror connector.



(c) Disengage the 3 clamps and disconnect the connector from the front pillar RH.

(d) Disengage the clamp and disconnect the connector from the rear pillar RH.

(e) Disengage the 4 clamps from the front pillar LH.

(f) Disconnect the 2 No. 1 roof wire connectors from the connector holder.

(g) Remove the 5 clips.

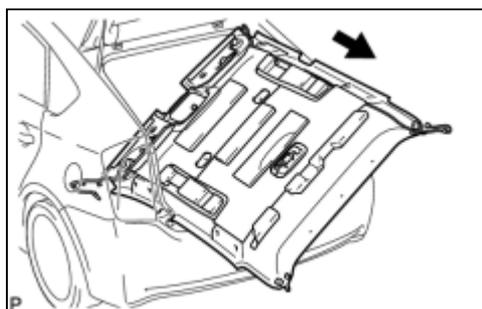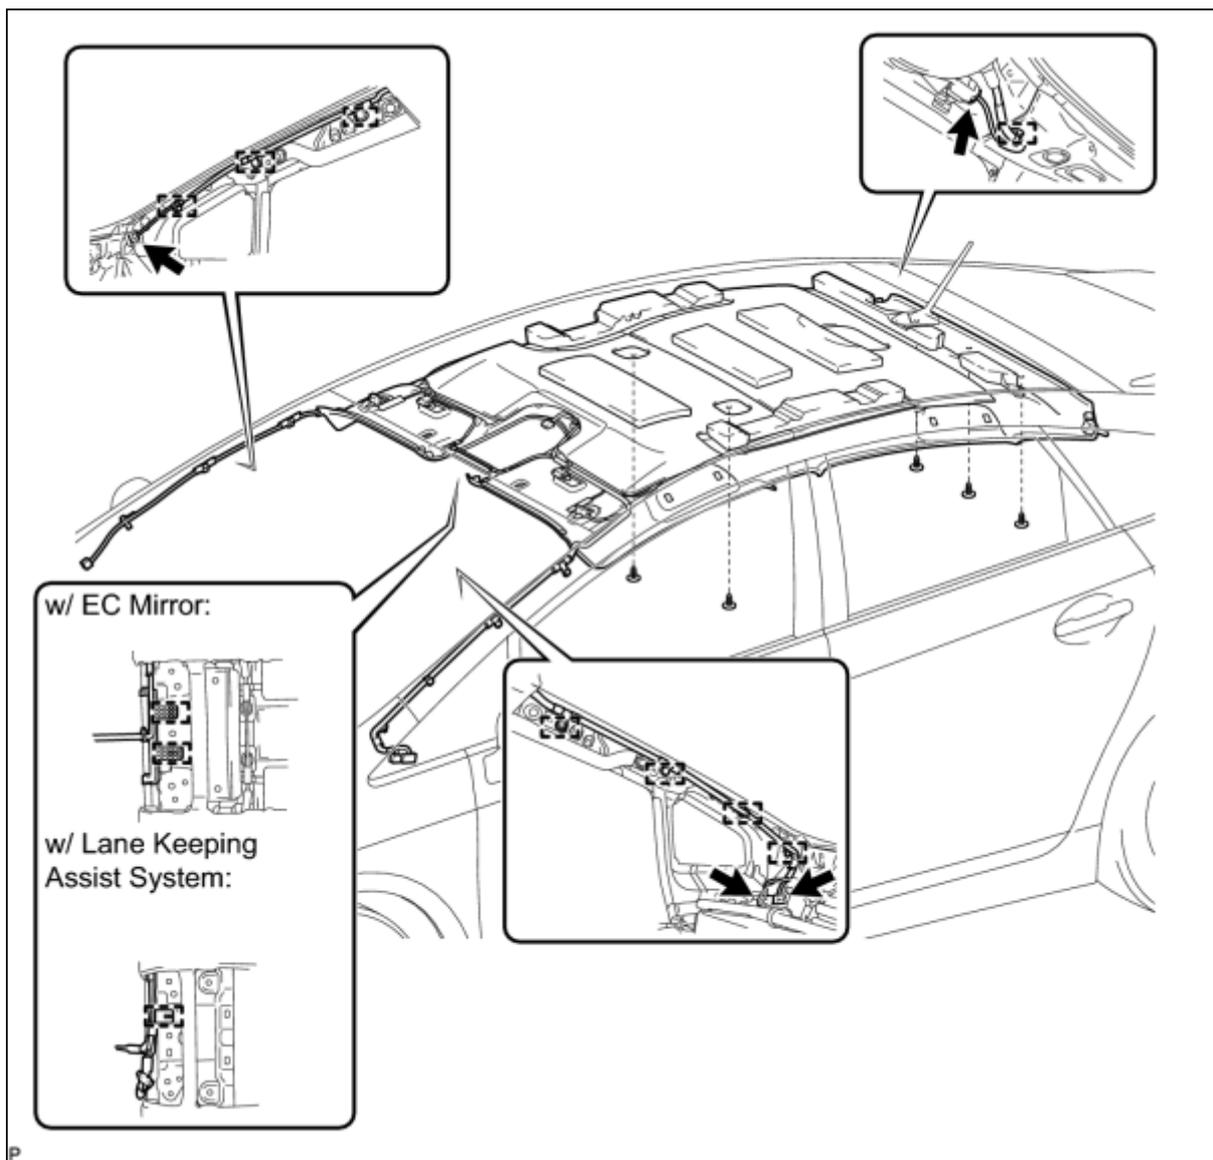

(h) Remove the roof headlining assembly from the vehicle through the back door.

**NOTICE:**


**Do not damage the roof headlining assembly or body interior.**

**60. REMOVE ROOF HEADLINING ASSEMBLY (w/ Sliding Roof)**


(a) w/ EC Mirror:


- (1) Disengage the 2 clamps and disconnect the inner rear view mirror connector.
- (b) Disengage the 3 clamps and disconnect the connector from the front pillar RH.
- (c) Disengage the clamp and disconnect the connector from the rear pillar RH.
- (d) Disengage the 4 clamps from the front pillar LH.

- (e) Disconnect the 2 No. 1 roof wire connectors from the connector holder.
- (f) Remove the 3 clips.

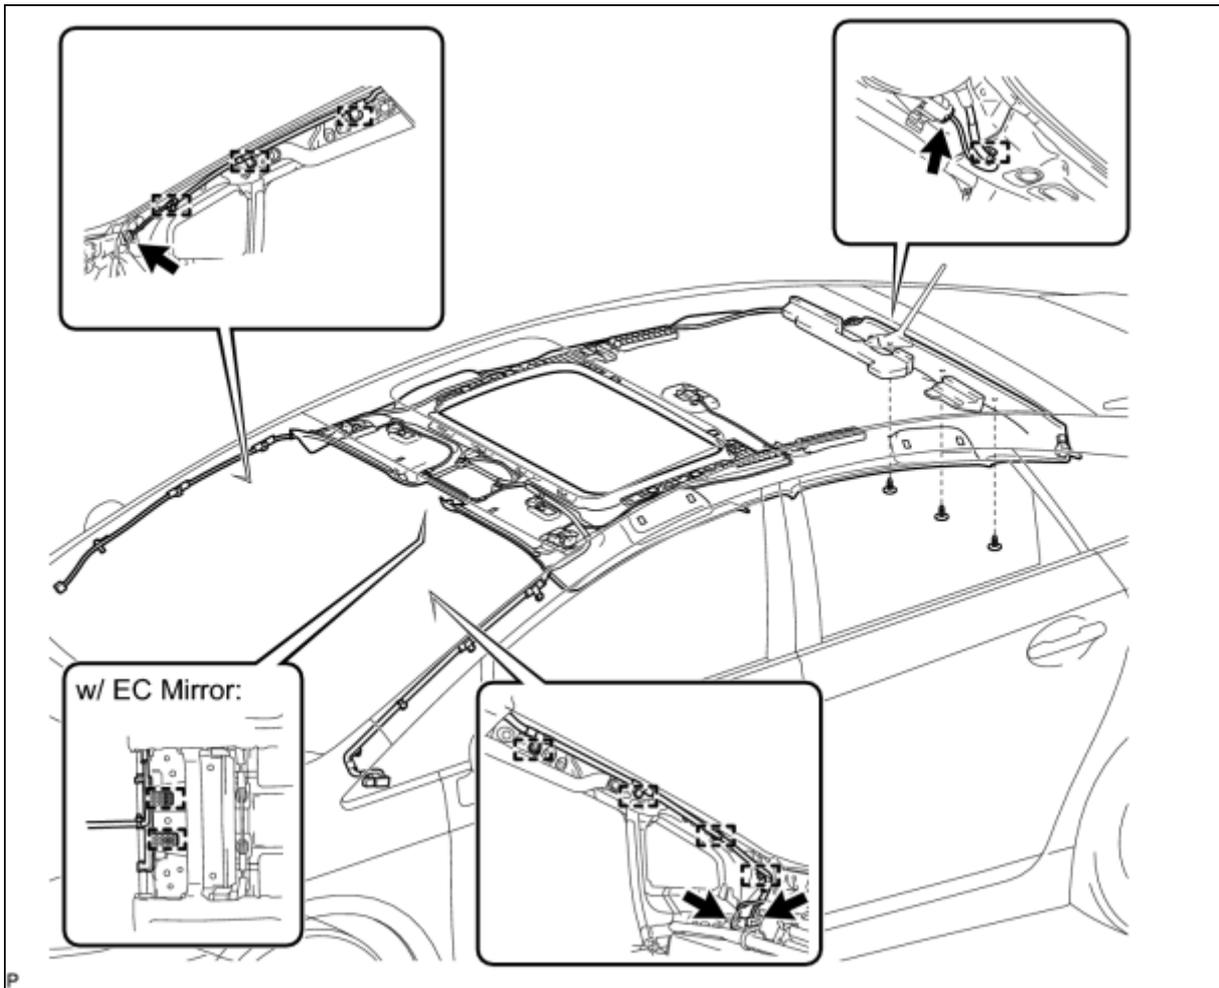

- (g) Disengage the 6 fasteners.

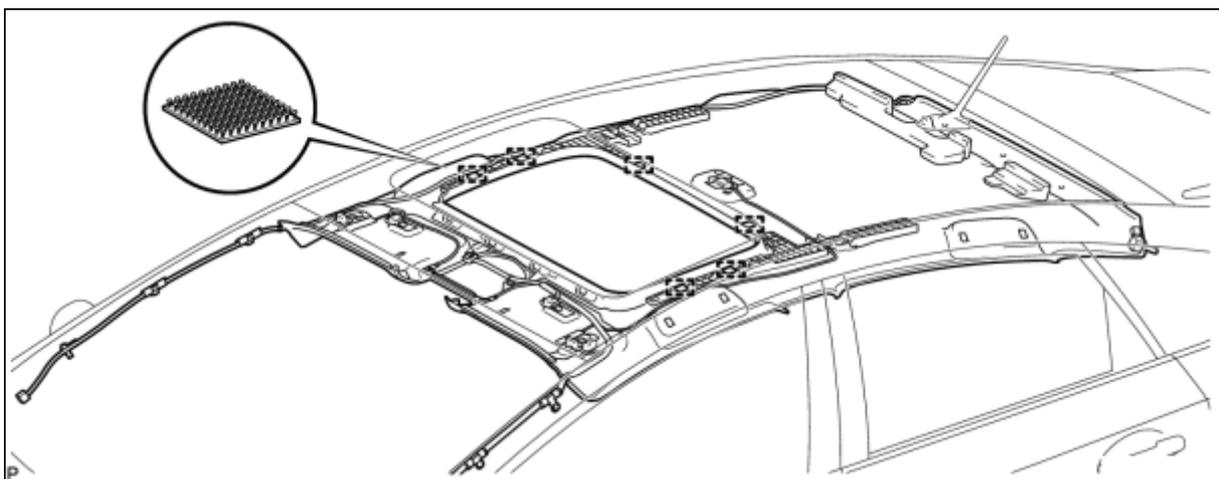

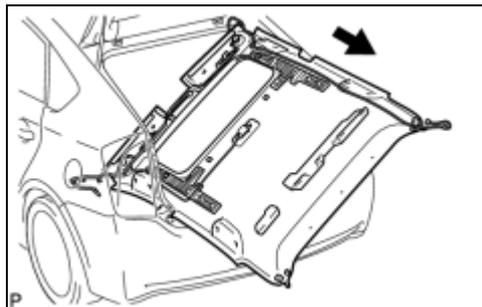

(h) Remove the roof headlining assembly from the vehicle through the back door.

**NOTICE:**

**Do not damage the roof headlining assembly or body interior.**

