



Technical Service BULLETIN

August 16, 2006

Title: **DOME FUSE INSTALLATION DURING PDS**

Models: '07 Prius



PRE-DELIVERY SERVICE
REVISED
PD090-06

TSB REVISION NOTICE:

- **October 27, 2006:** The "Introduction" section has been updated, and the "DTC Clearing Procedure" section has been added.
- Previous versions of this TSB should be discarded.

Introduction The DOME fuse has been removed on the Prius at the assembly plant to reduce parasitic current draw in transit and storage. Reinstall the DOME fuse and confirm all related DTCs are cleared during Pre-Delivery Service (PDS).

- Applicable Vehicles**
- 2007 model year **Prius** vehicles.

Required SSTs

ITEM NO.	SPECIAL SERVICE TOOLS (SSTs)	PART NUMBER	QTY	DRW**
1	Toyota Diagnostic Tester Kit* NOTE: <ul style="list-style-type: none"> • All components from this kit/set are required. • 12 Megabyte Diagnostic Tester Program Card (P/N 01002593-005) with version 13.4a Software (or later) is required. 	TOY220036	1	9
2	CAN Interface Module Kit* NOTE: <ul style="list-style-type: none"> • All components from this kit/set are required. 	01002744	1	9

* Essential SSTs.
 ** Drawer number in SST Storage System.

NOTE:


Additional Diagnostic Tester Kits, CAN Interface Modules, Program Cards, or other SSTs may be ordered by calling SPX/OTC at 1-800-933-8335.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-



Installation Procedure The DOME fuse (15A) is stored in the blank space of the Relay Block in the engine compartment. Reinstall the DOME fuse to the original location as shown below.

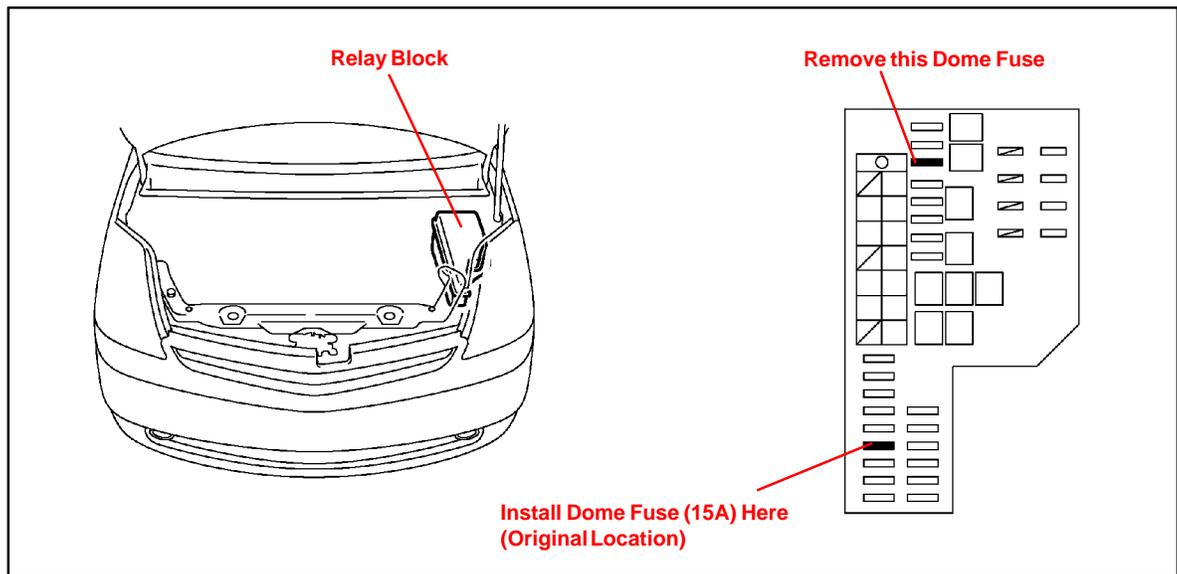

NOTE:

If the vehicle is stored in the dealership for a long period of time after PDS, disconnect the negative (-) battery terminal to prevent battery discharge. Refer to TSB No. PD091-06, "Maintenance for HV & Auxiliary Batteries," for additional information.

DTC Clearing Procedure With the DOME fuse removed, the occupant classification ECU and Center Airbag Sensor Assembly (airbag ECU) may detect the interruption in battery voltage (B+) and store a DTC. Clear DTC B1650 and B1794 after installing the DOME fuse.

1. Connect the Diagnostic Tester to the DLC3.
2. Turn the ignition switch to the "IG-ON" position.
3. Using the Diagnostic Tester, check any codes being output.

HINT:

If any DTCs besides DTC B1650 and B1794 remain, repair the applicable system according to the Repair Manual.

4. Erase DTC (B1650 and B1794) and Freeze Frame Data.

