

## REMOVAL

### HINT:


When replacing the spoiler, heat the bumper cover and spoiler using a heat light.

### Standard heating temperature

Item	Specified Condition
Spoiler	40 to 60°C (104 to 140°F)
Bumper cover	20 to 30°C (68 to 86°F)

### NOTICE:

Do not heat the bumper cover and spoiler excessively.

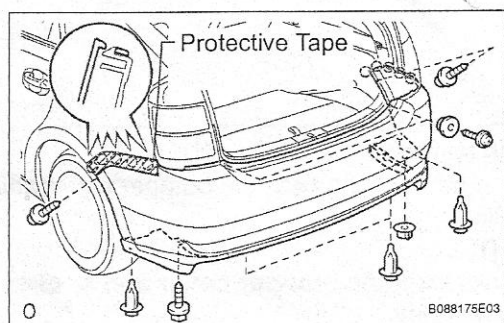


### 1. REMOVE REAR BUMPER COVER

- Put protective tape under the quarter panel.
- Remove the 5 screws, nut and 2 stoppers.
- Using a clip remover, remove the 4 clips.
- Using a screwdriver, detach the 10 claws.

### HINT:

Tape the screwdriver tip before use.

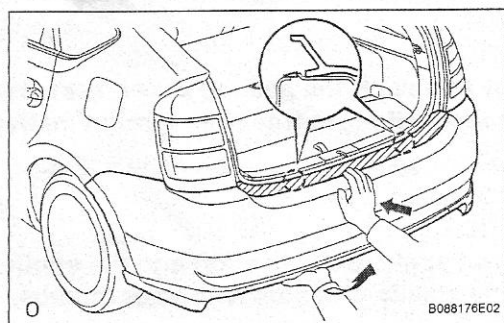

- Detach the 2 claws and remove the bumper cover.
  - Hold the rear bumper cover on its upper and lower parts with your hands as shown in the illustration.
  - Pull up the rear bumper cover's lower part while holding its upper part securely.

### NOTICE:

- The claw will not detach unless the rear bumper cover's upper part is securely held.
- Do not forcibly pull up the rear bumper. This will deform the claw.

### 2. REMOVE REAR SIDE SPOILER LH

- Using a screwdriver, remove the 2 retainers.

### HINT:

Tape the screwdriver tip before use.

- Remove the 2 clips and 3 screws.

