

DTC	P0A7A/325	GENERATOR INVERTER PERFORMANCE
------------	------------------	---------------------------------------

DTC	P0A7A/517	GENERATOR INVERTER PERFORMANCE
------------	------------------	---------------------------------------

DTC	P0A7A/518	GENERATOR INVERTER PERFORMANCE
------------	------------------	---------------------------------------

CIRCUIT DESCRIPTION

See the description of the inverter on page [05-562](#).

If the generator inverter has a circuit malfunction, internal short, or overheats, the inverter transmits that information to the GFIV terminal of HV control ECU via the generator inverter fail signal line.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A7A	325	Generator inverter fail (GFIV) signal detection (over current by inverter assembly malfunction)	<ul style="list-style-type: none"> • Wire harness or connector • HV transaxle assembly • Hybrid vehicle generator • HV control ECU • w/ converter inverter assembly
P0A7A	517	Generator inverter fail (GFIV) signal detection (over current by HV control ECU malfunction)	<ul style="list-style-type: none"> • Wire harness or connector • HV transaxle assembly • Hybrid vehicle generator • HV control ECU • w/ converter inverter assembly
P0A7A	518	Generator inverter fail (GFIV) signal detection (over current by HV transaxle assembly malfunction)	<ul style="list-style-type: none"> • Wire harness or connector • HV transaxle assembly • Hybrid vehicle generator • HV control ECU • w/ converter inverter assembly

MONITOR DESCRIPTION

If over-amperage flows through the generator inverter due to an internal short, the generator inverter transmits an inverter fail signal to the HV control ECU. Upon receiving this signal, the HV control ECU illuminates the MIL and sets a DTC.

MONITOR STRATEGY

Related DTCs	P0A7A (INF 325/517/518): Generator inverter/GFIV detection over current
Required sensor/components	Generator inverter
Frequency of operation	Continuous
Duration	TOYOTA's intellectual property
MIL operation	Immediately
Sequence of operation	None

TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not present	TOYOTA's intellectual property
No other condition	–

TYPICAL MALFUNCTION THRESHOLDS

Generator inverter	Over current (internal short)
--------------------	-------------------------------

COMPONENT OPERATING RANGE

Generator inverter	DTC P0A7A (INF 325/517/518) is not detected
--------------------	---

WIRING DIAGRAM

Refer to DTC P0A78 (INF 279) on page 05-577.

INSPECTION PROCEDURE

CAUTION:

- Before inspecting the high-voltage system, take safety precautions to prevent electrical shocks, such as wearing insulated gloves and removing the service plug grip. After removing the service plug grip, put it in your pocket to prevent other technicians from reconnecting it while you are servicing the high-voltage system.
- After disconnecting the service plug grip, wait at least for 5 minutes before touching any of the high-voltage connectors or terminals.

HINT:

At least 5 minutes is required to discharge the high-voltage condenser inside the inverter.

1	READ OUTPUT DTC(HV ECU)
----------	--------------------------------

- Connect the hand-held tester to the DLC3.
- Turn the power switch ON (IG).
- Turn the hand-held tester ON.
- On the hand-held tester, enter the following menus: DIAGNOSIS / ENHANCED OBD II / HV ECU / DTC INFO / TROUBLE CODES.
- Read DTCs.


Result: DTCs listed in the table below are output

DTC No.	Relevant Diagnosis
P0A1D	Hybrid Powertrain Control Module
P0A2B, P0A2C or P0A2D	Drive Motor "A" Temperature Sensor Circuit System
P0A37, P0A38 or P0A39	Generator Temperature Sensor Circuit System
P0A3F, P0A40 or P0A41	Drive Motor "A" Position Sensor Circuit System
P0A4B, P0A4C or P0A4D	Generator Position Sensor Circuit System
P0A60 or P0A63	Drive Motor "A" Current Sensor Circuit System
P0A72 or P0A75	Generator Current Sensor Circuit System
P0A78	Drive Motor "A" Inverter Performance
P0A7A	Generator Inverter Performance
P0A90	Drive Motor "A" Performance
P0A92	Hybrid Generator Performance
P0A93	Inverter Cooling System Malfunction
P0A94	DC/DC Converter Malfunction
P0AA1, P0AA2, P0AA4 or P0AA5	System Main Relay Circuit System
P3000, P3004, P3009 or P3110	High Voltage System
P3211	Drive Motor "A" Inverter Temperature Sensor Circuit System
P3221	Generator Inverter Temperature Sensor Circuit System
P3226	DC/DC Converter Temperature Sensor Circuit System

YES	GO TO DTC CHART (See page 05-440). FIND A PAGE NUMBER TO PROCEED TO ITS DIAGNOSTIC TROUBLESHOOTING FLOWCHART
------------	---

NO

2 CHECK CONNECTION CONDITION OF HYBRID VEHICLE CONTROL ECU CONNECTOR(LOOSENESS AND POOR CONTACT)

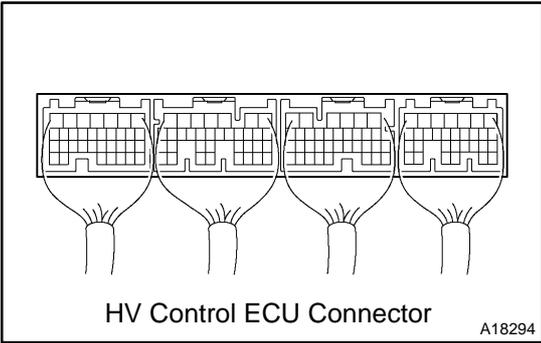

(a) Check the connection condition of all the connectors at the HV control ECU.

OK: Connectors have been connected securely and there is no poor connection.

OK


NG **CONNECT SECURELY**

3 CHECK CONNECTION CONDITION OF INVERTER CONNECTOR(LOOSENESS AND POOR CONTACT)

CAUTION:
Wear insulated gloves before performing the following operation.

- (a) Turn the power switch OFF.
- (b) Remove the service plug grip (see page 21-116).

NOTICE:
Turning the power switch ON (READY) with the service plug grip removed could cause malfunction. Therefore, never turn the power switch ON (READY) in this state.

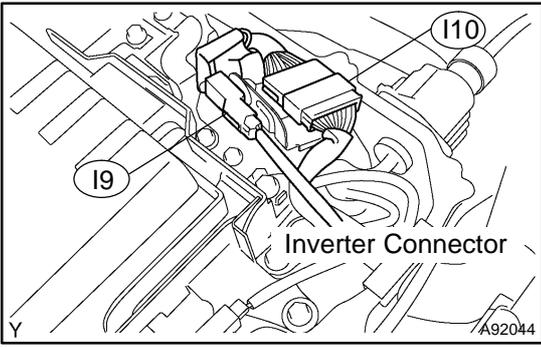

- (c) Remove the inverter cover (see page 21-23).
- (d) Check the connection condition of the I9 and I10 inverter connectors.

OK: Connectors have been connected securely and there is no poor connection.

OK

NG **CONNECT SECURELY**

4 CHECK HYBRID VEHICLE GENERATOR ASSY


CAUTION:

Wear insulated gloves before performing the following operation.

- (a) Check that the service plug grip and inverter cover have been removed.
- (b) Check if the three-phase alternating current cable installation bolts on the hybrid vehicle generator are tightened to the specified torque.

Torque: 8.0 N·m (82 kgf·cm 71in.-lbf)

- (c) Reinstall the inverter cover (see page 21-23).
- (d) Reinstall the service plug grip (see page 21-116).

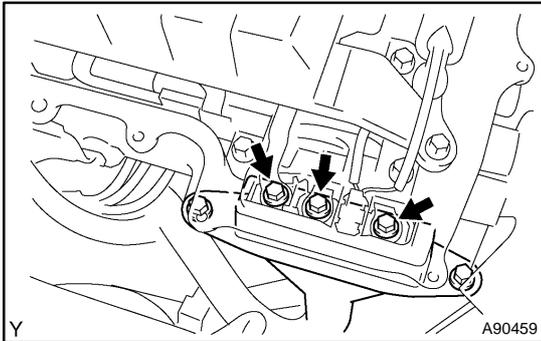

NG TIGHTEN THEM TO SPECIFIED TORQUE

OK

5 CONFIRM INFORMATION(EXCLUSIVE INFO 4)

- (a) Connect the hand-held tester to the DLC3.
 - (b) Turn the power switch ON (IG).
- HINT:**
DTCs for the interlock switch system are output when turning the power switch ON (IG) with both service plug grip and inverter cover removed.
- (c) Turn the hand-held tester ON.
 - (d) On the hand-held tester, enter the following menus: DIAGNOSIS / ENHANCED OBD II / HV ECU / DTC INFO / TROUBLE CODES.
 - (e) Select DTC P0A7A to display its freeze frame data.
 - (f) Select the item that has INF code 325, 517, or 518 from among INFORMATION 1 to 5, and press ENTER.
 - (g) Read EXCLUSIVE INFO 4.

Result:

Displayed in Exclusive Information 4	Proceed to
-127 to -120, -95 to -88, -63 to -56, -31 to -24, 1 to 8, 33 to 40, 65 to 72, 97 to 104	A
-119 to -112, -87 to -80, -55 to -48, -23 to -16, 9 to 16, 41 to 48, 73 to 80, 105 to 112	B
-111 to -104, -79 to -72, -47 to -40, -15 to -8, 17 to 24, 49 to 56, 81 to 88, 113 to 120	C
-103 to -96, -71 to -64, -39 to -32, -7 to 0, 25 to 32, 57 to 64, 89 to 96, 121 to 127	D

B REPLACE HYBRID VEHICLE CONTROL ECU (See page 21-124)

C REPLACE W/CONVERTER INVERTER ASSY (See page 21-23)

D REPLACE HYBRID VEHICLE TRANSAXLE ASSY (See page 22-11)

A

6	INSPECT HYBRID VEHICLE GENERATOR ASSY
----------	--

CAUTION:

Wear insulated gloves before performing the following operation.

- (a) Turn the power switch OFF.
- (b) Remove the service plug grip (see page 21-116).

NOTICE:

Turning the power switch ON (READY) with the service plug grip removed could cause malfunction. Therefore, never turn the power switch ON (READY) in this state.

- (c) Remove the inverter cover (see page 21-23).
- (d) Disconnect the three-phase alternating current cable for the hybrid vehicle generator from the inverter.
- (e) Using a milliohm meter, measure the resistance between the three-phase alternating current cable terminals of the hybrid vehicle generator.

NOTICE:

If the generator temperature is too high, the resistance varies considerably, which hinders determining malfunction. Therefore, measure the resistance at a minimum 8 hours after the vehicle has been stopped.

Standard:

Tester Connection	Specified Condition*
U (I15-1) - V (I15-2)	Below 109 mΩ at 20°C
V (I15-2) - W (I15-3)	Below 109 mΩ at 20°C
W (I15-3) - U (I15-1)	Below 109 mΩ at 20°C

*: Apply the formula given below to correct the resistance.

$$R_{20} = R_t \div (1 + 0.00393 \times (T - 20))$$

R₂₀: Resistance converted to 20 °C (mΩ)

R_t: Resistance between measured lines (mΩ)

T: Ambient air temperature during measurement (°C)

- (f) Calculate the difference between the maximum and minimum resistance between terminals U - V, V - W, and W - U.


Standard: Below 2 mΩ

- (g) Using a megohmmeter, check the insulation resistance between the three-phase alternating current cable terminals of the hybrid vehicle generator and the body ground.

Standard:

Tester Connection	Specified Condition
U (I15-1) - Body ground	10 MΩ or higher
V (I15-2) - Body ground	10 MΩ or higher
W (I15-3) - Body ground	10 MΩ or higher

- (h) Reconnect the three-phase alternating current cable for the hybrid vehicle generator.

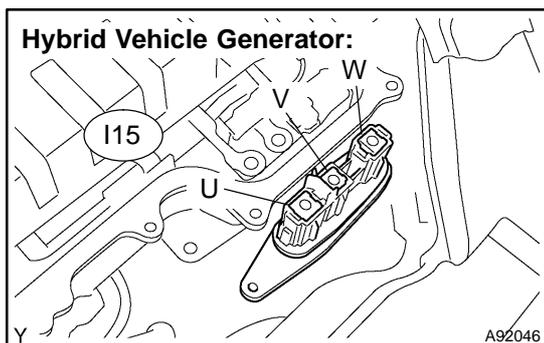

NG REPLACE HYBRID VEHICLE GENERATOR ASSY

OK

7 PERFORM ACTIVE TEST BY HAND-HELD TESTER(INVERTER STOP)

CAUTION:

Wear insulated gloves before performing the following operation.

- (a) Check that the service plug grip and inverter cover have been removed.
- (b) Connect the hand-held tester to the DLC3.
- (c) Turn the power switch ON (IG).

HINT:


DTCs for the interlock switch system are output when turning the power switch ON (IG) with both service plug grip and inverter cover removed.

- (d) Turn the hand-held tester ON.
- (e) On the hand-held tester, enter the following menus: DIAGNOSIS / ENHANCED OBD II / HV ECU / ACTIVE TEST.
- (f) Measure the voltage between the terminals of the inverter connector while effecting INVERTER STOP.

Standard:

Tester Connection	Specified Condition
GUU (I10-4) - GINV (I10-16)	12 to 16 V
GVU (I10-5) - GINV (I10-16)	12 to 16 V
GWU (I10-6) - GINV (I10-16)	12 to 16 V

- (g) Turn the power switch OFF.

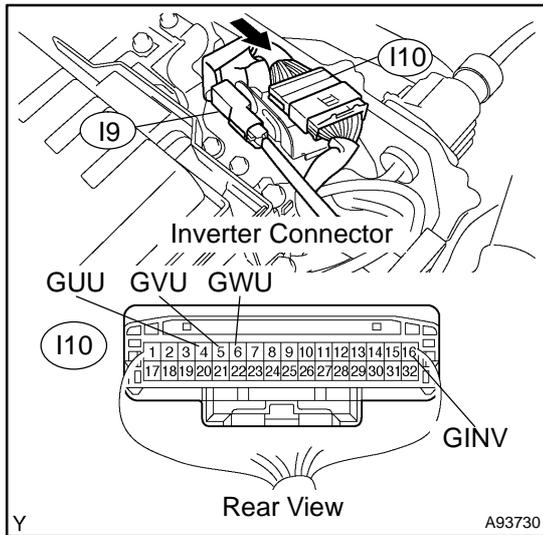

NG Go to step 8

OK

REPLACE W/CONVERTER INVERTER ASSY (See page 21-23)

8 PERFORM ACTIVE TEST BY HAND-HELD TESTER(INVERTER STOP)

CAUTION:

Wear insulated gloves before performing the following operation.

- (a) Check that the service plug grip and inverter cover have been removed.
- (b) Disconnect the I10 inverter connector.
- (c) Connect the hand-held tester to the DLC3.
- (d) Turn the power switch ON (IG).

HINT:


DTCs for the interlock switch system are output when turning the power switch ON (IG) with both service plug grip and inverter cover removed.

- (e) Turn the hand-held tester ON.
- (f) On the hand-held tester, enter the following menus: DIAGNOSIS / ENHANCED OBD II / HV ECU / ACTIVE TEST.
- (g) Measure the voltage between the terminals of the inverter connector while effecting INVERTER STOP.

Standard:

Tester Connection	Specified Condition
GUU (I10-4) - GINV (I10-16)	14 to 16 V
GVU (I10-5) - GINV (I10-16)	14 to 16 V
GWU (I10-6) - GINV (I10-16)	14 to 16 V

- (h) Turn the power switch OFF.
- (i) Reconnect the inverter connector.
- (j) Reinstall the inverter cover (see page 21-23).
- (k) Reinstall the service plug grip (see page 21-116).

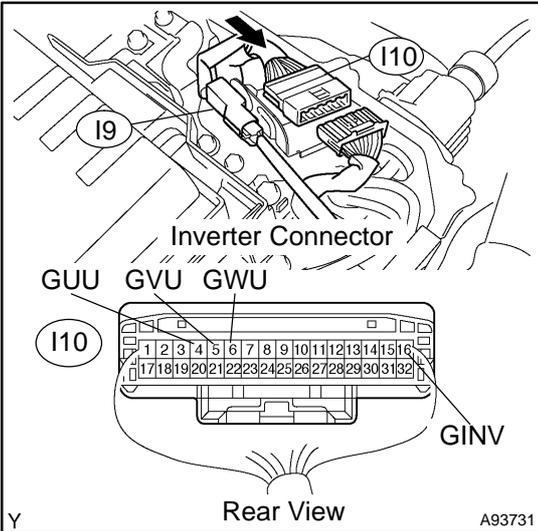

NG → **REPLACE W/CONVERTER INVERTER ASSY (See page 21-23)**

OK

REPLACE HYBRID VEHICLE CONTROL ECU (See page 21-124)