

Vehicle: 2010 Toyota Prius L4-1.8L (2ZR-FXE) Hybrid

Vehicle » Restraints and Safety Systems » Seat Belt Systems » Seat Belt » Service and Repair » Front Seat Outer Belt Assembly » Removal

SEAT BELT: FRONT SEAT OUTER BELT ASSEMBLY: REMOVAL

- REMOVE REAR NO. 2 FLOOR BOARD See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE REAR DECK FLOOR BOX See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE REAR NO. 3 FLOOR BOARD See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL

CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to disable the SRS system.

NOTICE:

When disconnecting the cable, some systems need to be initialized after the cable is reconnected See: [Testing and Inspection\Programming and Relearning\Repair Instruction - Initialization](#).

- REMOVE FRONT DOOR SCUFF PLATE See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE REAR DOOR SCUFF PLATE See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE LAP BELT OUTER ANCHOR COVER
 - (a) Disengage the 3 claws and remove the lap belt outer anchor cover.
- DISCONNECT FRONT SEAT OUTER BELT ASSEMBLY
 - (a) Remove the bolt and disconnect the floor end of the front seat outer belt assembly.
- DISCONNECT FRONT DOOR OPENING TRIM WEATHERSTRIP LH See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- DISCONNECT REAR DOOR OPENING TRIM WEATHERSTRIP LH See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)

- REMOVE CENTER PILLAR LOWER GARNISH See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE CENTER PILLAR GARNISH See: [Body and Frame\Interior Moulding / Trim\Headliner\Service and Repair\Removal and Replacement\Removal](#)
- REMOVE FRONT SEAT OUTER BELT ASSEMBLY

(a) Remove the nut and disconnect the shoulder anchor of the front seat outer belt assembly.

(b) Using a screwdriver, pull out the locking button in the direction shown by the arrow in the illustration to release the lock, and disconnect the pretensioner connector as shown in the illustration. HINT Tape the screwdriver tip before use.

(c) Disconnect each connector.

(d) Remove the 2 bolts and front seat outer belt assembly.

REMOVE FRONT SHOULDER BELT ANCHOR ADJUSTER ASSEMBLY

(a) Remove the 2 bolts.

(b) Disengage the guide and remove the front shoulder belt anchor adjuster assembly.