

**Tester Display****Default****Content****Setting**

Buzzer

buzzer

OFF

HINT:

This setting is only valid when the vehicle is driven at 20 km/h (12 mph) or more.

**11. AIR CONDITIONING SYSTEM**

<b>Display (Item)</b>	<b>Default</b>	<b>Content</b>	<b>Setting</b>
Set Temperature Shift	Normal	Function to control with the shifted temperature against the displayed temperature.	+2 C, +1 C, Normal, -1 C or -2 C
Compressor Mode	Automatic	Function to automatically turn the A/C on by pressing the AUTO button when blower is on and the A/C is off.	Manual or Automatic
Air Inlet Mode	Automatic	Function to shift from INLET mode to RECIRCULATION mode when the A/C is turned on.	Manual or Automatic
Foot/DEF Auto Mode	ON	Function to automatically turn the airflow from FOOT/DEF on when AUTO mode is on.	OFF or ON
Foot/DEF Automatic Blow Up Function	ON	Function to automatically increase the blower level when the defroster is on.	OFF or ON
Ambient Temperature Shift	Normal	Function to control the shifted ambient temperature in relation to the displayed ambient temperature.	+3 C, +2 C, +1 C, Normal, -1 C, -2 C or -3 C
ECO MODE Cancel	OFF	Function to cancel the ECO mode drive when item is on.	OFF or ON
Noise and Vibration Reduction	OFF	Function to change speed of the compressor when item is on.	OFF or ON
Start Pre A/C*1	Long1	Function to set the activation operation method for the remote air conditioning system using the key (electrical transmitter).	1 tim ON, 2 tim ON, Long1 or Long2
Stop Pre A/C*1	2 tim ON	Function to set the stop operation method for the remote air conditioning system using the key (electrical transmitter).	1 tim ON, 2 tim ON, Long1 or Long2

• \*1: w/ Remote Air Conditioning System

**12. LIGHTING SYSTEM (LIGHTING EXT)**

<b>Display</b>	<b>Default</b>	<b>Content</b>	<b>Setting</b>
Disp Ex ON Sen	Normal	Changes the ambient brightness level required to dim the lights such as the indicator lights of the combination meter, A/C indicator light and clock.	Light2, Light1, Normal, Dark1 or Dark2
Disp Ex OFF Sen	Normal	Changes the ambient brightness level required to cancel the dimming of the lights such as the indicator lights of the	Light2, Light1, Normal, Dark1 or

2010 Toyota Prius

Repair Manual

Item	Function	Default setting	Customized setting
Reverse warning buzzer (→P. 175)	Operation signals (Buzzer) when shifting into "R"	<del>Beeps repeatedly</del>	Beeps once
Seat belt reminder (→P. 491)	Vehicle speed linked seat belt reminder buzzer	ON	OFF

**Multi-information display (→P. 188)**

Available languages	English, French and Spanish
---------------------	-----------------------------

The following items must be initialized in case such as after the maintenance is performed on the vehicle.

Item
Engine oil maintenance data
Tire pressure warning system