

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**Includes updates from **MARCH until JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor Change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS, SC running change; iQ new model; Avenis Full Model Change

Fill operation added; Fuel Injection system maintenance added (Lexus IS250, GS300 and LS460 for Croatia only)

GASOLINE ENGINE		MAINTENANCE OPERATIONS											Prius				
SERVICE INTERVALS:		R: Replace or change or lubricate. F: Fill											1NZ-FXE (1.5 + Hyb)				
Odometer reading or months, whichever comes first		ODOMETER READING											NHW20				
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	03/08 05/02	
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	05/12(MC) 06/08 07/08 08/08	
Timing Belt		Replace every 150,000 km (90,000 miles)											—				
Valve Clearance (Sensory Inspection)*1													*1 (Every 72 months)				
Drive belt		Inspect 105,000 km (63,000 miles), after 105,000 km Inspect every 15,000 km (9,000 miles)											Initial: 72 and then every 12 months				
V-ribbed belt																	
Engine oil (API: SH, SJ) (ILSAC)		Normal	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SJ, SL) (ILSAC)		Normal	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil (API: SL, SM) (ILSAC)		Normal	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Engine oil filter		Normal	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 12 months	
		Severe	R	R	R	R	R	R	R	R	R	R	R	R	R	Every 6 months	
Cooling and heater system *2		I											I				
Engine coolant		LLC (red/green) *3												R			
		S-LLC (pink) *4	I											I			
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)															
Inverter coolant		S-LLC (pink) *4	I											I			
		First replace at 150,000 km (90,000 miles); after, every 90,000 km (54,000 miles)															
Exhaust pipes and mountings		I											I				
Spark plugs		Platinum or Iridium Tipped type	R											R			
		Others	I											I			
		I: Every 24 months R: Every 48 months															
Battery		No maintenance											—				
Fuel filter (Aygo only)		Replace every 180,000 km (108,000 miles)											15 years				
Fuel injection system		F											F				
Air cleaner filter (from October 2002, applicable to all models in production)		Normal	I	I	I	R	I	I	I	I	I	I	I	I	I	I: Every 24 months R: Every 48 months	
		Dusty road	I	I	I	I	I	I	R	I	I	I	I	I	I	I: Every 12 months R: Every 48 months	
Air cleaner filter		Normal	I	I	R	I	I	I	R	I	I	I	I	I	I	I: Every 24 months R: Every 48 months	
		Dusty road	Inspect every 2,500 km (1,500 miles) and replace every 45,000 km (27,000 miles) or 48 months.											—			
Fuel tank cap, fuel lines, connections and fuel vapor control valve		I											I				
		*5												I			
Charcoal canister		Others	I											I			
		Aygo only												I			
		Normal												I			
		Severe	I											I			
Charcoal canister filter		Aygo only												R			
		Normal												R			
		Severe	R											R			

\*1: Check for tappet noise and engine vibration and adjust if necessary.

\*2: Check that the radiator and condenser are not blocked with leaves, dirt or insects; check radiator fins; check hoses and connections for correct installation, corrosion etc.; clean if necessary

\*3: After 60,000 km (36,000 miles) or 36 months, replace every 30,000 km (18,000 miles) or 24 months.

\*4: Only use "Toyota Super-Long Life Coolant" or similar high quality ethylene glycol based non-silicate, non-amine, non-nitrate and non-borate coolant with long-life hybrid organic acid technology (coolant with long-life hybrid organic acid technology is a combination of low phosphates and organic acids)

\*5: For Sweden, Norway and Finland only.

\*6: Use Toyota Genuine Fuel Injector Cleaner (08813-00820) or equivalent

Option for Sweden specification vehicles

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

Includes updates from **MARCH** until **JUNE '08**

New information: Manual transmission oil "API Gear oil GL-5" added; TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change

Aygo 1.0p Clutch mechanism: Inspection interval shortened; Clutch fluid Replacement added for new MMT's; Toyota Genuine CVTF maintenance added for new CVT's

Transfer oil "Toyota Genuine ATF WS" added for LS460(L) 4WD.

**MAINTENANCE OPERATIONS**

Correction: Lexus IS Manual transmission oil changed to "API Gear oil GL-5" only  
 I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
 R: Replace or change or lubricate. L: Lubricate

**CHASSIS AND BODY 1/2**

SERVICE INTERVALS:		ODOMETER READING										Months	Prius NHW20						
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60		67.5	75	82.5	90	03/08 05/12	06/08 07/08 08/08	
<b>MAINTENANCE ITEMS</b>		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54				
Clutch pedal, return spring and damper - Mechanical type			I	I	I	I	I	I	I	I	I	I	I	I	I				
Brake pedal and parking brake																Every 24 months	● ●		
Brake linings and drums (Include brake linings of parking brake)		Normal														Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
Brake pads and discs		Normal														Every 12 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months	● ●		
Clutch fluid		SAE J1703 or FMVSS No. 116 DOT3														Every 24 months			
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R										Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4														Every 24 months			
Clutch fluid for auto clutch system						R										Every 24 months			
Sequential M/T system fluid																Every 24 months			
Brake fluid		SAE J1703 or FMVSS No. 116 DOT3				R										Every 24 months	● ●		
		SAE J1703, J1704 or FMVSS No. 116 DOT3, DOT4				R										Every 24 months			
		SAE J1704 or FMVSS No. 116 DOT4				R										Every 24 months			
Brake pipes and hoses																Every 24 months	● ●		
Vacuum pump for brake booster (Diesel engines only)		Ixetic (Luk-AT) or Pierburg Others	Replace every 195,000 km (121,000 miles) or 120 months Inspect every 195,000 km (121,000 miles) or 120 months																
Power steering fluid		AT fluid DEXRON® II or III TOYOTA P.S. fluid EH or equivalent														Every 24 months			
																Every 24 months			
Steering wheel, linkage and steering gear box		Normal														Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
SRS airbag *1			Initial inspect at first 120 months from the vehicle registration date.																
Propeller shaft		NLGI No. 1 or No. 2														Every 24 months			
		Normal	L	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
		Severe	L	L	L	L	L	L	L	L	L	L	L	L	L	Every 12 months			
Propeller shaft bolts		Normal			T											Every 24 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
Drive shaft boots		Normal														Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
		Normal														Every 12 months			
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			
Drive shaft bolts		Normal			T											Every 24 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 12 months			
		Normal			T											Every 12 months			
		Severe	T	T	T	T	T	T	T	T	T	T	T	T	T	Every 6 months			
Suspension ball joints and dust covers		Normal														Every 24 months	● ●		
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 12 months	● ●		
		Normal														Every 12 months			
		Severe	I	I	I	I	I	I	I	I	I	I	I	I	I	Every 6 months			
Shift lever of 6-speed manual transmission																-			
Automatic transmission fluid		Vehicles produced before July, '99	Normal													I: Every 12 months R: Every 48 months			
			Severe	I	R	I	R	I	R	I	R	I	R	I	R	I: Every 12 months R: Every 24 months			
		Vehicles produced after August, '99	Toyota Genuine ATF type T-IV	Normal													I: Every 36 months R: Every 48 months		
				Severe													R	I: Every 36 months R: Every 72 months	
			Toyota Genuine ATF WS	Normal													I	Every 36 months	● ●
				Severe													R	I: Every 36 months R: Every 72 months	● ●
			Toyota Genuine CVTF TC	Normal													I	Every 48 months	
				Severe													R	I: Every 36 months R: Every 72 months	
			Other	Normal													R	I: Every 36 months R: Every 72 months	
				Severe													R	I: Every 18 months R: Every 36 months	
Manual transmission oil and transfer oil if so equipped (Including auto clutch system)		API Gear oil GL-5	Normal												I	Every 48 months			
		API Gear oil GL-4 or GL-5	Normal												I	Every 48 months			
		API Gear oil GL-4 or GL-5	Severe												R	Every 48 months			
		LV Gear oil API GL-4	Normal												I	Every 48 months			
		Other (GL-4 or GL-5)	Normal												I	Every 48 months			
		API Gear oil GL-4 or GL-5	Severe												R	Every 48 months			
Transfer oil		API Gear oil GL-4 or GL-5	Normal												I	Every 48 months			
		API Gear oil GL-5	Severe												R	Every 48 months			
		API Gear oil GL-5	Normal												I	Every 48 months			
		API Gear oil GL-5	Severe												R	Every 48 months			
		Toyota Genuine Differential Oil LX85 (APF: GL-5)	Normal												I	Every 48 months			
		Toyota Genuine ATF WS	Normal												I	Every 48 months			
		Toyota Genuine ATF WS	Severe												R	I: Every 36 months R: Every 72 months			

\*1: After 120 months from the vehicle registration date, inspect every 24 months.

**MAINTENANCE SCHEDULE - EUROPE 15,000 km/9,000 miles**

Includes updates from **MARCH** until **JUNE '08**

New information: TMC Yaris and Lexus IS Minor Change 08/08; TMMF Yaris Minor change 08/11; Addition of LS460(L) 4WD (USF45,46); Prius, LC120, LC V8, Lexus GS, LS and SC running change; iQ new model; Avensis Full Model Change  
 Toyota Genuine CVTF maintenance added for new CVT's

**MAINTENANCE OPERATIONS**

I: Inspect and correct or replace as necessary. T: Tighten to specified torque.  
 R: Replace or change or lubricate. C: Clean

**CHASSIS AND BODY 2/2**

SERVICE INTERVALS:		ODOMETER READING												Months		Prius NHW20				
		× 1,000 km	1	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90					
MAINTENANCE ITEMS		× 1,000 miles	1	4.5	9	13.5	18	22.5	27	31.5	36	40.5	45	49.5	54	03/08 05/12	06/08 07/08 08/08			
Front Differential oil	Differential integrated with transmission	M/T model	API Gear oil GL-4 or GL-5	Normal								I					Every 48 months			
			Severe											R				Every 48 months		
		A/T model	LV Gear oil API GL-4	Normal										I					Every 48 months	
			Severe												R				Every 48 months	
		Differential separated from transmission (API Gear oil GL-5)	M/T model	Toyota Genuine ATF type T-IV	Normal									I				I	Every 36 months	
				Severe														R	Every 48 months I: Every 36 months R: Every 72 months	
	A/T model		Toyota Genuine ATF WS	Normal										I				I	Every 36 months	●
			Severe														R	Every 48 months I: Every 36 months R: Every 72 months	● ●	
	Toyota Genuine CVTF TC		Normal											I					Every 48 months	
			Severe														R	I: Every 36 months R: Every 72 months		
	Rear differential oil		API Gear oil GL-5														R	Every 48 months		
			A/T fluid WS	Normal									I				I	Every 36 months		
		Severe													R	I: Every 36 months R: Every 72 months				
Wheel bearing grease (tapered roller type wheel bearing only) and ball joint grease		NLGI No. 2	Normal				R			R					R	Every 24 months				
		Severe			R		R		R		R		R		R	Every 12 months				
Front and rear suspension		Normal				I				I					I	Every 24 months	● ●			
		Severe			I		I		I		I		I		I	Every 12 months	● ●			
Active height control suspension fluid - Suspension fluid AHC or equivalent															R	—				
Active height control gas chamber										I		I		I	I	I: initial 48 months; then every 12 months				
Bolts and nuts on chassis and body		Severe only			T		T		T		T		T		T	Every 12 months	● ●			
Tires and inflation pressure		Normal				I				I					I	Every 24 months	● ●			
		Severe			I		I		I		I		I		I	Every 12 months	● ●			
Air conditioning filter		Normal								I					I	Every 24 months				
		Dusty road			I		I		I		I		I		I	Every 12 months				
		Normal								R					R	Every 24 months				
		Dusty road			R		R		R		R		R		R	Every 12 months				
		Normal & Dusty road								R					R	Every 24 months				
Particle filter		Foldable type				I		R		I		R		I	R	"Clean" replaced by "Inspect"				
		Pollen removal type				I		R		I		R		I	R	Refer to TME letter of October 2007 on "Potential Health Risk From Cleaning of Cabin Air Filter Elements"				
		Standard type & high efficiency type				I		R		I		R		I	R					
		Normal								R				R		● ●				
		Dusty road			R		R		R		R		R		R		● ●			
Combination filter		Combination filter (high efficiency type)								R		R		R	R					
		Dusty road			R		R		R		R		R		R					
		Replace when the service indicator light illuminates																		
Corrosion Inspection															I	Every 24 months	● ●			