


SECTION 1-1

FEATURES ON NEW TOYOTA VEHICLE


Overview of instruments and controls

Instrument panel overvieww	2
Instrument cluster and multi-information display overview	5
Indicator symbols on the instrument cluster and multi-information display	6

Instrument panel overview

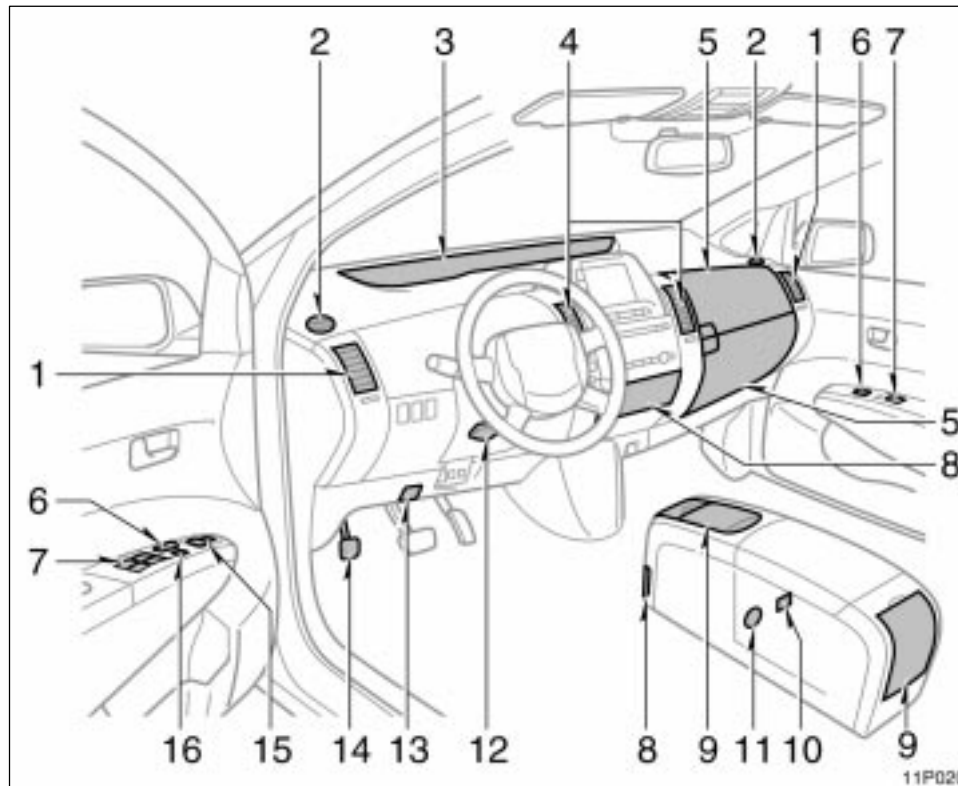


1. Side vents	297
2. Side defroster outlets	
3. Instrument cluster	5
4. Center vents	297
5. Glove boxes	307
6. Power door lock switches	40
7. Power window switches	43
8. Auxiliary boxes	311
9. Cup holders	312
10. AUX adapter	306
11. Power outlet	305
12. Tilt steering lock release lever	104
13. Hood lock release lever	45
14. Parking brake pedal	155
15. Power rear view mirror control switch	105
16. Window lock switch	44

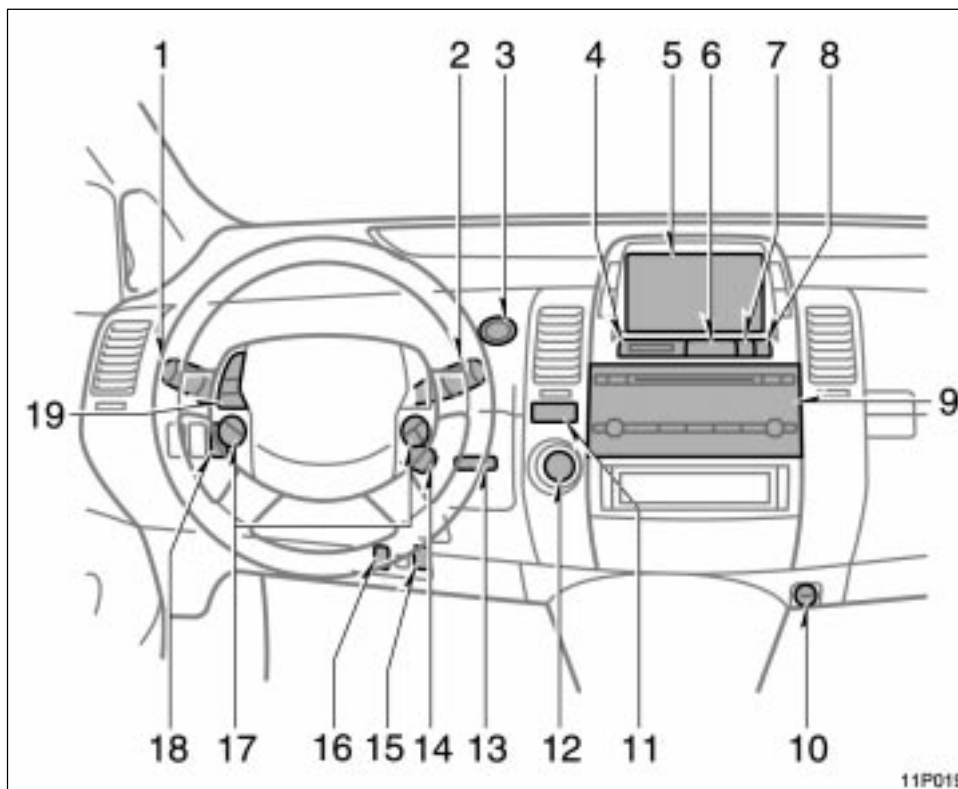

1. Headlight and turn signal switches	110
2. Wiper and washer switches	117
3. "POWER" switch	139
4. Clock	302
5. Multi-information display or navigation system including multi-information display (For the navigation system, see the separate "Navigation System Owner's Manual".)	160
6. Emergency flasher switch	114
7. Trip meter reset button	123
8. Km/h or MPH button	124
9. Audio system	242
10. Power outlet	305
11. "P" position switch	144
12. Electronic shift lever (R, N, D, B)	144
13. Key slot	138
14. Cruise control switch	156
15. Tire pressure warning reset switch	150
16. Smart entry and start system cancel switch	34





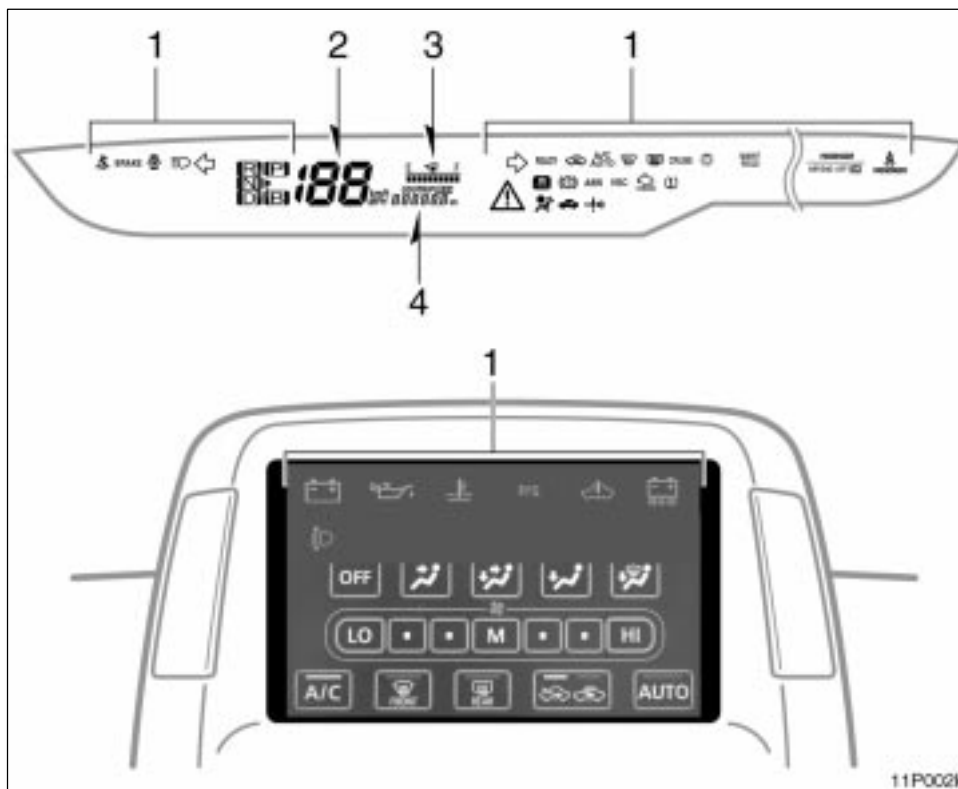









17. Climate remote control switches	297
18. Instrument panel light control dial	114
19. Audio remote control switches	277



 









 





 
Instrument cluster and multi-information display overview



- 1. Service reminder indicators and indicator lights 125, 132
- 2. Speedometer
- 3. Fuel gauge 122
- 4. Odometer and trip meter 123

Indicator symbols on the instrument cluster and multi-information display

BRAKE and  (U.S.A.)	Brake system warning lights* ¹	ABS or 	Anti-lock brake system warning light* ¹
 (Canada)			SRS warning light* ¹
	Driver's seat belt reminder light* ¹	MAINT REQD	Engine oil replacement reminder light* ¹ (for vehicles sold in U.S.A.)
 PASSENGER	Front passenger's seat belt reminder light* ¹	VSC	Vehicle stability control system warning light* ¹
	Low fuel level indicator light* ¹		Tire pressure warning light* ¹
 CHECK	Malfunction indicator lamp* ¹		Charging system warning light* ²
	Master warning light* ¹		High coolant temperature warning light* ²
	Open door warning light* ¹		Low engine oil pressure warning light* ²

	Hybrid battery warning light*2		Tail light indicator light
	Electric power steering system warning light*2		Driving ready light
	Automatic head light leveling system warning light*2		Automatic air conditioner indicator light
	Hybrid system warning light*2		Recirculate mode indicator light
	Cruise control indicator light*3		Windshield air flow indicator light
	Shift position indicator light*4		Rear window and outside rear view mirror defoggers indicator light
	Smart entry and start system warning light*5		Hybrid vehicle immobilizer / Theft deterrent system indicator light
	Turn signal indicator lights		Slip indicator light
	Headlight high beam indicator light		
	Headlight indicator light		

- *1: For details, see “Service reminder indicators and warning buzzers— —Instrument cluster” on page 125.
- *2: For details, see “Service reminder indicators and warning buzzers— —Multi-information display” on page 132.
- *3: If this light flashes, see “Cruise control” on page 156.
- *4: For details, see “Hybrid transaxle” on page 144.
- *5: For details, see “Smart entry and start system” on page 24.