


REMOVAL


1. REMOVE NO. 2 REAR FLOOR BOARD
2. REMOVE REAR DECK FLOOR BOX
3. REMOVE NO. 3 REAR FLOOR BOARD ASSEMBLY
4. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL
CAUTION:
Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.
5. PLACE FRONT WHEELS FACING STRAIGHT AHEAD
6. REMOVE NO. 2 STEERING WHEEL COVER LOWER
7. REMOVE NO. 3 STEERING WHEEL COVER LOWER
8. REMOVE STEERING PAD ASSEMBLY (See page [RS-272](#))



9. REMOVE STEERING WHEEL ASSEMBLY
 - (a) Remove the nut and put matchmarks on the steering wheel and steering main shaft.
 - (b) Using SST, remove the steering wheel.
SST 09950-50013 (09951-05010, 09952-05010, 09953-05020, 09954-05021)

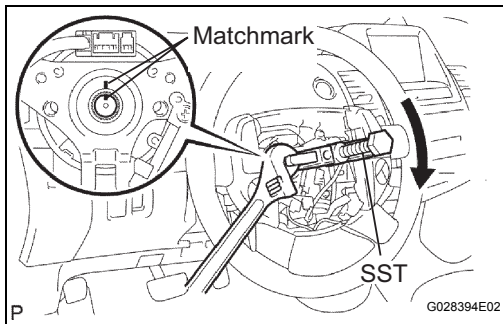

10. REMOVE TILT LEVER BRACKET
 - (a) Remove the 2 screws and tilt lever bracket.

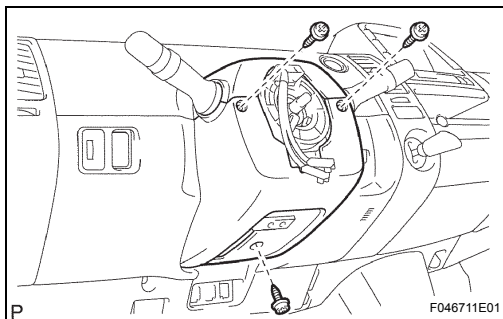

11. REMOVE STEERING COLUMN COVER
 - (a) Detach the 4 claws and remove the 3 screws. Then remove the steering column lower cover and the steering column upper cover.
12. REMOVE TURN SIGNAL SWITCH ASSEMBLY
 - (a) Remove the clamp and remove the turn signal switch from the steering column.
13. REMOVE SPIRAL CABLE SUB-ASSEMBLY (See page [RS-282](#))
14. REMOVE FRONT DOOR INSIDE SCUFF PLATE LH (See page [IR-7](#))

32. INSPECT STEERING WHEEL CENTER POINT**HINT:**

When the steering wheel is not properly centered, remove and refit to center.

33. INSTALL STEERING WHEEL ASSEMBLY

(a) Align the matchmarks on the steering wheel and steering main shaft.

(b) Install the steering wheel with the set nut.

Torque: 50 N*m (510 kgf*cm, 37 ft.*lbf)

34. INSTALL STEERING PAD ASSEMBLY (See page [RS-273](#))**35. CONNECT CABLE TO BATTERY NEGATIVE TERMINAL****36. INSPECT STEERING PAD ASSEMBLY**

(a) Inspect the steering pad (see page [RS-271](#)).

37. INSTALL NO. 3 STEERING WHEEL LOWER COVER**38. INSTALL NO. 2 STEERING WHEEL LOWER COVER****39. INSTALL REAR NO. 3 FLOOR BOARD ASSEMBLY****40. INSTALL REAR DECK FLOOR BOX****41. INSTALL REAR NO. 2 FLOOR BOARD****42. INSPECT SRS WARNING LIGHT**

(a) Inspect SRS warning light (see page [RS-31](#)).

43. PERFORM CALIBRATION

(a) Perform calibration (see page [PS-13](#)).

44. PERFORM INITIALIZATION

(a) Perform initialization (see page [IN-34](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.