

HV Battery Cooling Fan Maintenance for Severe Usage Vehicles

Service Category Engine/Hybrid System

Section Hybrid/Battery Control System

Market USA

Toyota Supports
ASE Certification 

Applicability

| YEAR(S) | MODEL(S) | ADDITIONAL INFORMATION |
|-------------|----------|------------------------|
| 2010 – 2012 | Prius | |

Introduction

For vehicles that are used under certain severe operating conditions, the HV Battery Cooling Fan may experience an excessive buildup of dust, lint, or other debris that can reduce the efficiency of the HV Battery Cooling System. HV Battery Cooling Fan maintenance and cleaning should be performed to address this condition.

NOTE

The following procedure should be completed every 25,000 miles OR any time the HV Battery Assembly is replaced.

Warranty Information

| OP CODE | DESCRIPTION | TIME | OFP | T1 | T2 |
|---------|----------------------------|------|-----|----|----|
| N/A | Not Applicable to Warranty | — | — | — | — |

Repair Procedure

1. Is the vehicle subject to all of the operating conditions detailed below?

- (1) The vehicle is used for over 15 hours per day.
- (2) The vehicle is used over 6 days per week.
- (3) The right rear seat is used over 50 times per day.

YES — Go to step 2.

NO — This TSB does NOT apply.

HV Battery Cooling Fan Maintenance for Severe Usage Vehicles

Repair Procedure (Continued)

2. Remove the HV Battery Cooling Fan Assembly.

Refer to the Technical Information System (TIS), applicable model year Prius Repair Manual:

- [2010](#) / [2011](#) / [2012](#) Prius:
Engine/Hybrid System – Hybrid/Battery Control System – “Hybrid/Battery Control: Battery Blower: Removal”
3. Using compressed air, clean any dust, lint, or debris buildup from the HV Battery Cooling Fan blades. At this time, secure the fan blades to prevent turning while cleaning.

Figure 1. HV Battery Cooling Fan BEFORE Cleaning



Figure 2. HV Battery Cooling Fan AFTER Cleaning



NOTICE

- Do NOT attempt to clean the HV Battery Cooling Fan while it is installed in the vehicle. Doing so may cause dust or debris to enter the HV Battery Case.
- Failure to secure the fan blades while cleaning can result in electronic circuit failure due to overturning.

4. Re-install the HV Battery Cooling Fan Assembly and verify normal operation.

Refer to TIS, applicable model year Prius Repair Manual:

- [2010](#) / [2011](#) / [2012](#) Prius:
Engine/Hybrid System – Hybrid/Battery Control System – “Hybrid/Battery Control: Battery Blower: Installation”
5. Repeat this procedure as normal maintenance every 25,000 miles.