


REAR COMBINATION LIGHT ASSEMBLY

COMPONENTS

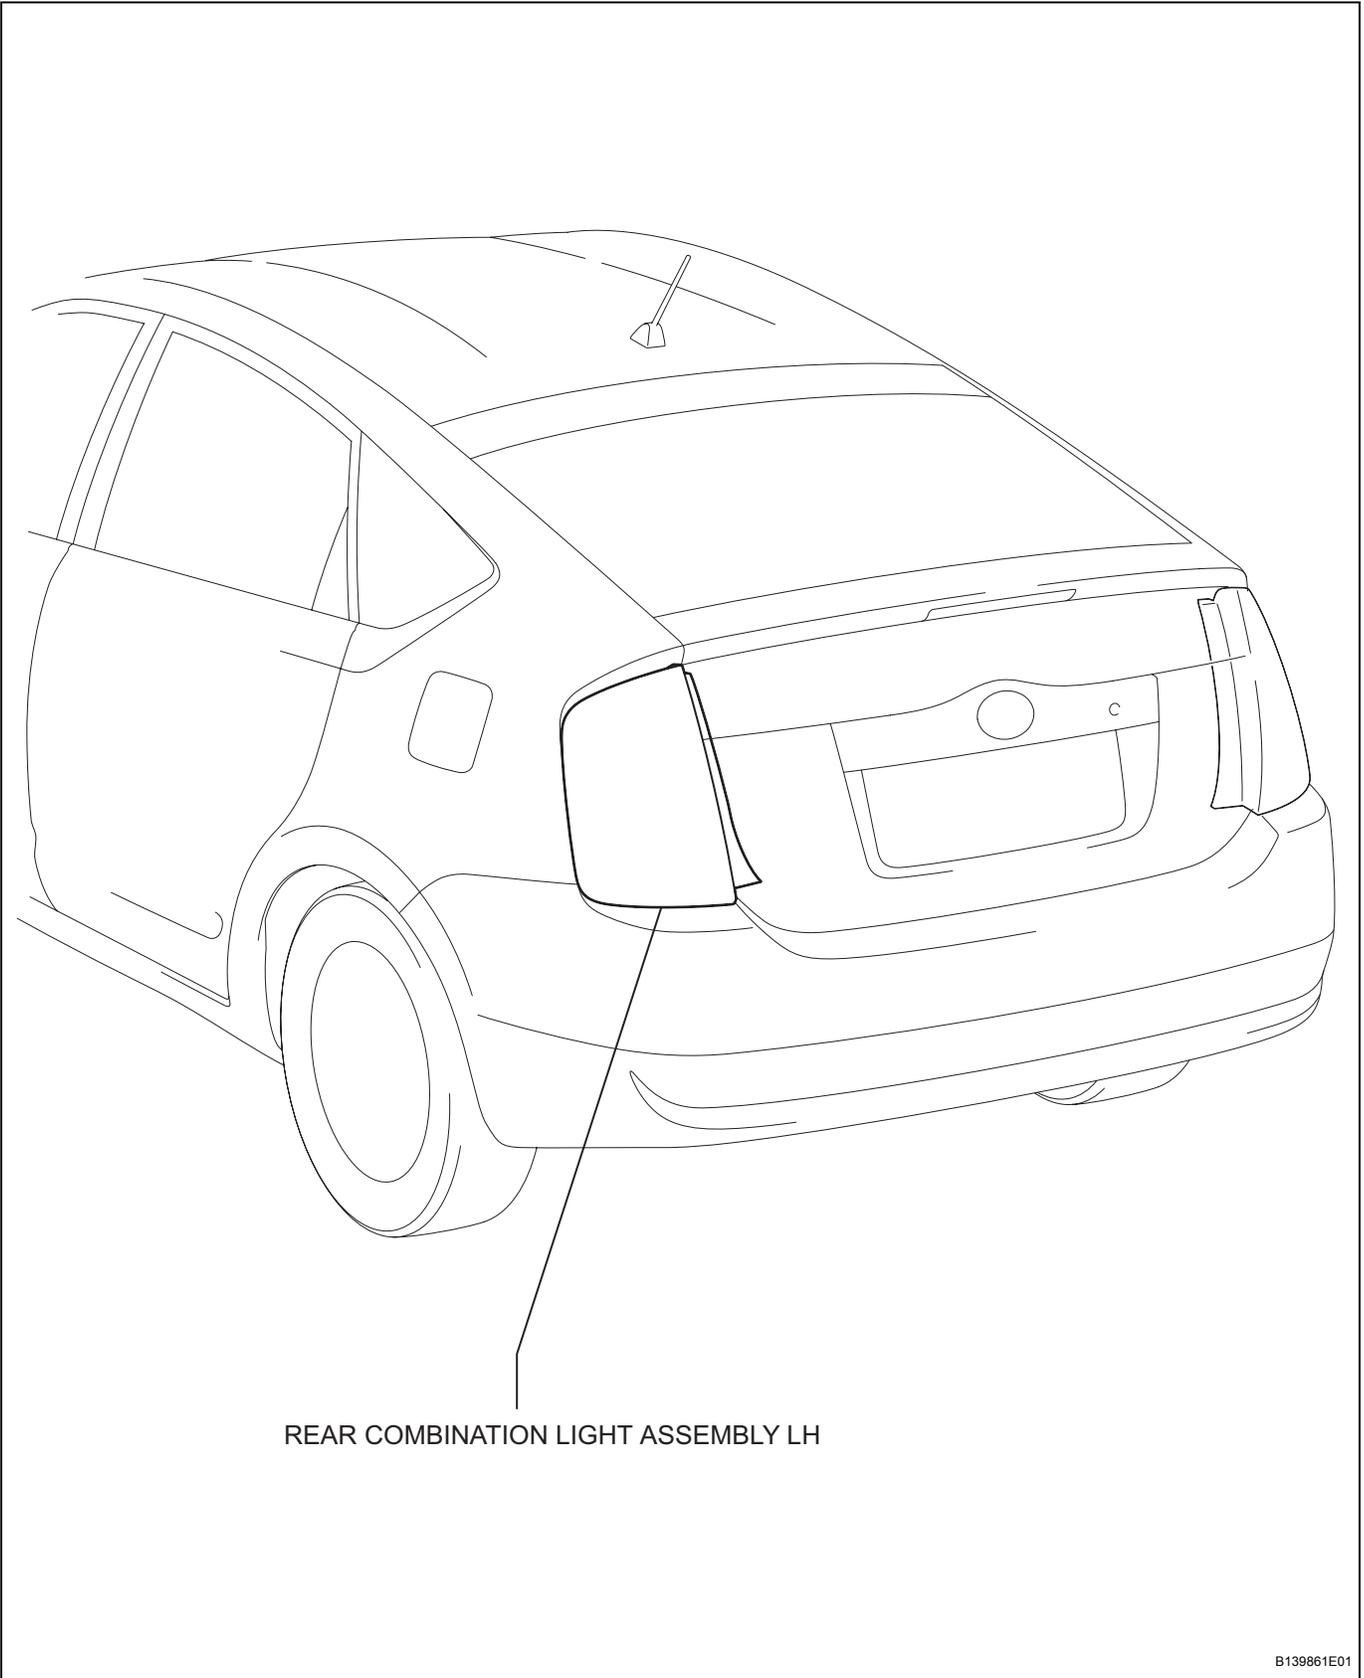

REAR COMBINATION LIGHT ASSEMBLY LH



REMOVAL

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

1. DISCONNECT CABLE FROM NEGATIVE BATTERY TERMINAL


CAUTION:

Wait at least 90 seconds after disconnecting the cable from the negative (-) battery terminal to prevent airbag and seat belt pretensioner activation.

2. REMOVE REAR COMBINATION LIGHT SERVICE COVER LH

3. REMOVE REAR COMBINATION LIGHT ASSEMBLY LH

- (a) Remove the 2 nuts.
- (b) Slide the 2 pins towards the back of the vehicle to remove them.
- (c) Disconnect the connector and remove the rear combination light.
- (d) Remove the 3 bulb sockets and 3 bulbs from the rear combination light.

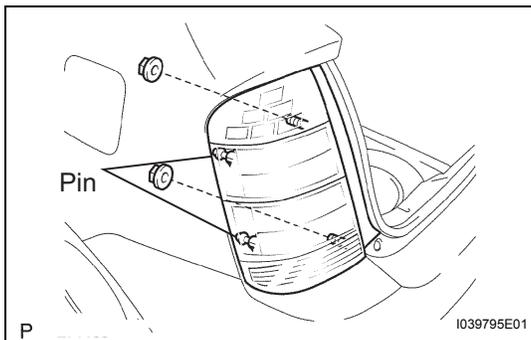


I039795E01

INSTALLATION

HINT:

- Use the same procedures for the RH and LH sides.
- The procedures listed below are for the LH side.

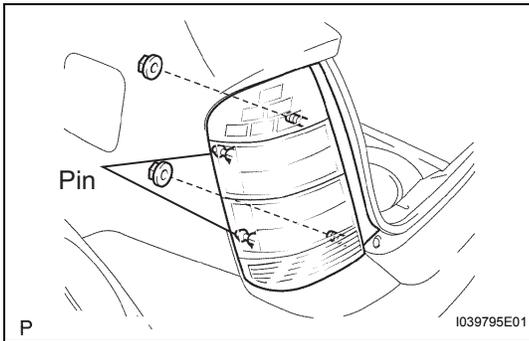

1. INSTALL REAR COMBINATION LIGHT ASSEMBLY LH

- (a) Install the 3 bulbs and bulb sockets to the rear combination light.
- (b) Connect the connector and install the rear combination light.
- (c) Slide the 2 pins towards the back of the vehicle to install them.
- (d) Install the 2 nuts.

2. INSTALL REAR COMBINATION LIGHT SERVICE COVER LH

3. CONNECT CABLE TO NEGATIVE BATTERY TERMINAL

4. PERFORM INITIALIZATION

- (a) Perform initialization (see page [IN-34](#)).

NOTICE:

Certain systems need to be initialized after disconnecting and reconnecting the cable from the negative (-) battery terminal.

