


(b) Using a screwdriver, detach the 4 claws and remove the room light.

HINT:

Tape the screwdriver tip before use.

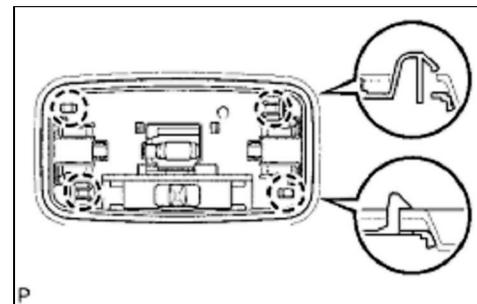


(c) Disconnect the room light connector.

43. REMOVE ASSIST GRIP COVER

(a) Using a screwdriver, detach the 4 claws and remove the 2 covers.

HINT:

Tape the screwdriver tip before use.

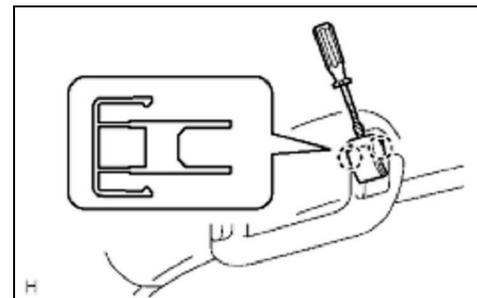


44. REMOVE ASSIST GRIP SUB-ASSEMBLY

(a) Using a screwdriver, detach the 4 claws and remove the assist grip.


HINT:

Tape the screwdriver tip before use.

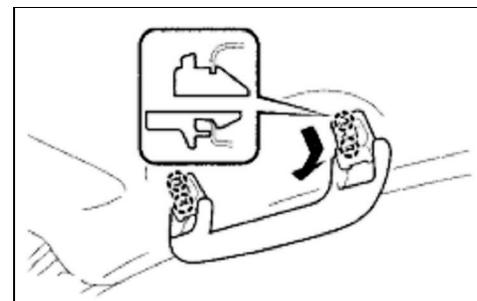

45. REMOVE VISOR ASSEMBLY LH

(a) Remove the 2 screws.

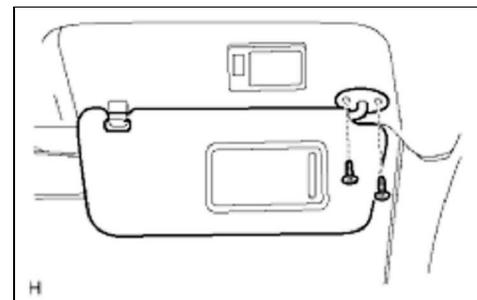

(b) Disconnect the connector and remove the visor.

46. REMOVE VISOR ASSEMBLY RH

HINT: