


HYBRID TRANSAXLE SYSTEM

ON-VEHICLE INSPECTION

1. CHECK TRANSAXLE FLUID LEVEL

NOTICE:

- Insufficient or excessive amounts of transaxle oil may be the cause of some trouble.
- Place the vehicle on level surface.
- Use genuine ATF WS.

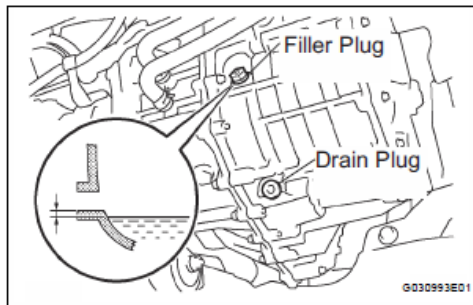

- (a) Remove the filler plug.
- (b) Ensure that the transaxle oil level is within 0 to 5 mm (0 to 0.20 in.) of the filler plug hole.

NOTICE:

Recheck the transaxle oil level after driving the vehicle when exchanging oil.

HINT:

Transaxle fluid quantity: 3.8 liters (4.0 US qts, 3.3 Imp. qts.)

- (c) Check for leaks if the quantity of oil is low.
- (d) Install the filler plug with a new gasket.

Torque: 39 N*m (400 kgf*cm, 29 ft.*lbf)