




**TOOLS NEEDED:** Simple hand tools, depending on if you need to remove lights.

**READ FIRST:** Most 9006 kits are relatively easy to install. Usually removal of the headlight isn't necessary. However for the purpose of this install guide we chose to remove the headlight assembly. Note: We are using a 2007 Chevy Silverado for our install. Depending on vehicle, removal of your headlight may differ.


**DIFFICULTY:** Easy     Professional Install

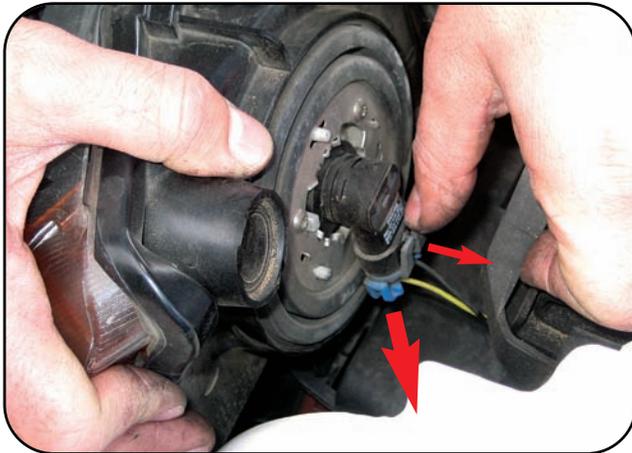


Open hood. Looking down from above into the engine bay and locate the low beam bulb. Remove retaining clip on 9006 low beam by simultaneously unclipping and pulling the connector away from the bulb. **1**



Removal of headlight housing (if required). Please refer to your car's owners manual for instruction on headlight removal. **2**

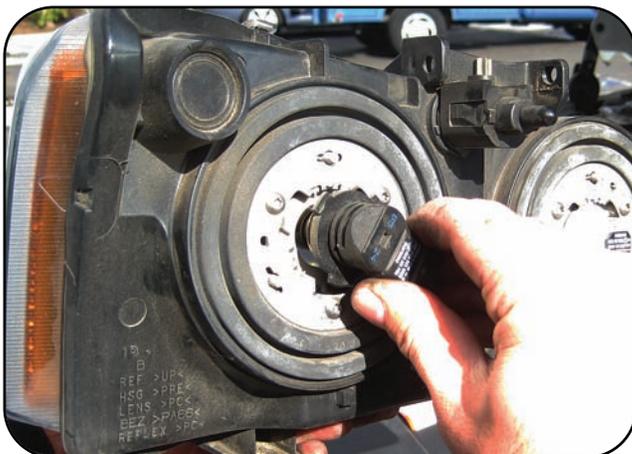


Twist OEM bulb counter clockwise to unlock the bulb from headlight housing. Once the bulb is unlocked remove gently from housing. **3**

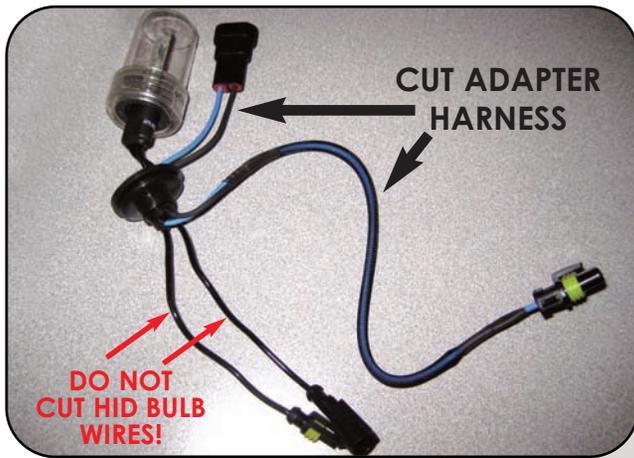

Adapter harnesses are not necessary for the 9006 HID kit installation. If desired you can cut and remove the adapter harnesses as pictured to left.

**DDM Tip:** Be very careful **NOT** to cut the HID bulb wires (bulb wires are picture to left WITH RED ARROWS). Your bulb warranty will be void if you cut the HID bulb wires.

4

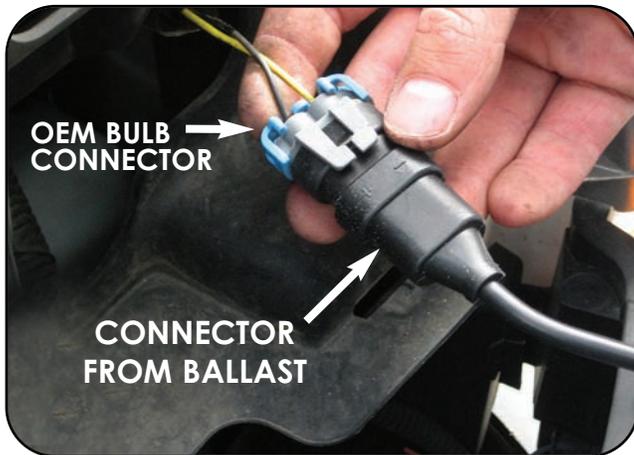


Insert the male 9006 connector (the connector that comes out of your OEM 9006 bulb) into the female 9006 connector coming out of the ballast. Mount ballast with the double sided tape provided to a clean flat surface in the engine bay.

5



Remove the HID bulb from the protective plastic casing and screw cap. Do not touch the bulb with your bare hands. If you do, be sure to clean the bulb with rubbing alcohol prior to installation.

6

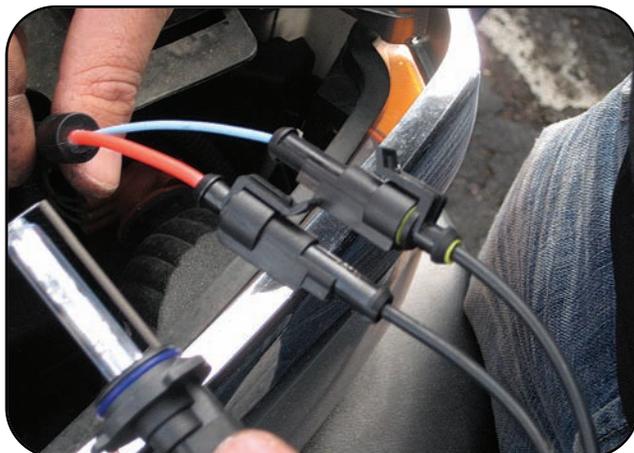

Connect corresponding AMP connectors from the ballast to bulb.

7



Twist bulb clockwise into place locking it securely into the headlight housing.

8



Slide the rubber grommet up to the bulb plug which keeps the bulb protected from the elements.

**DDM Tip:** At this stage of the install we recommend turning on lights to make sure everything works before proceeding.

9



Reinstall headlight assembly if removal was required.

10