

TOYOTA PRIUS 2010 - BODY SIDE MOLDING

Part Number: 00016-47050-01; 02;03;04;10 & 11

Accessory Code: MW3

Conflicts

Note:

Kit Contents

Item #	Quantity Req'd.	Description
1	1	Body Side Molding

Hardware Bag Contents

Item #	Quantity Req'd.	Description

Additional Items Required For Installation

Item #	Quantity Req'd.	Description
1	None	

Recommended Tools

Safety Tools	
Safety Glasses	
Special Tools	
Magnetic Straight Edge	
Installation Tools	
Wiping Cloth	Non-Scratch, Lint Free
Grease Pencil	
Tape Measure	
Molding Roller or Cloth	(Optional)
Special Chemicals	
Cleaner	Isopropyl Alcohol-Based
	Water 50:50

Color Applicability/Trim Level

Accessory Color Vehicle/Trim Color	00016-47050-10	00016-47050-01			00016-47050-11	00016-47050-12		
Blizzard Pearl (070)	X							
Classic Silver (1F7)		X						
Sandy Beach Metallic (4T8)			X					
Black (202)				X				
Winter Gray Metallic (8V1)					X			
Barcelona Red Metallic (3R3)						X		



General Applicability

Note: Prius Models 2010

Recommended Sequence of Application

Item #	Accessory	
1	Body Side Molding	

*Mandatory

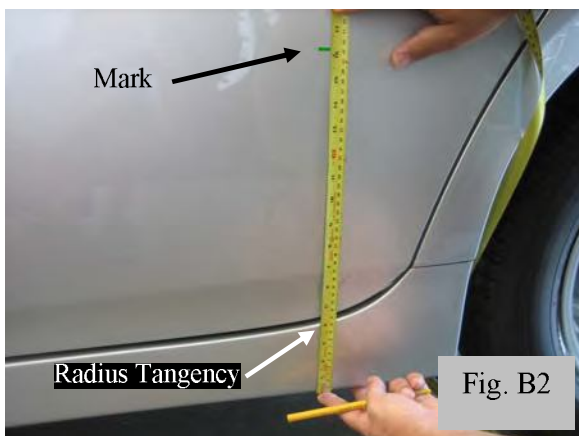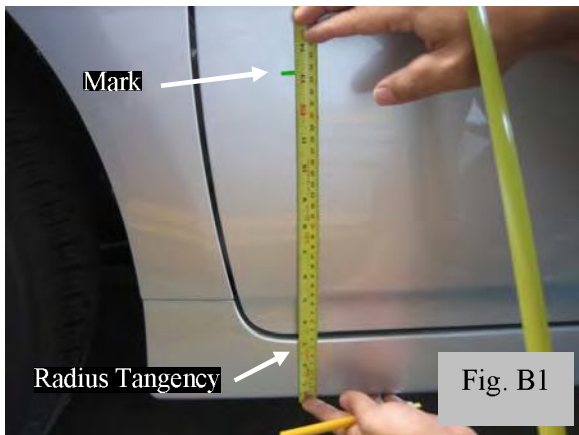

Care must be taken while installing this accessory to ensure damage does not occur to the vehicle. Approved guidelines to insure a quality installation.



These guidelines can be found in the “Accessory Installation Practices” document.

A. Installation Preparation

1. Verify that the part is for the correct vehicle model and that it fits the vehicle properly.
2. During installation, the vehicle, the part, and the tape **MUST** be between 60° and 110° F for proper adhesion. Failure to maintain proper installation procedure may result in the part not functioning correctly.
3. Inspect the vehicle and parts for damage prior to installing the Body Side Molding.
 - i. Paint: Prepare part surfaces per Toyota paint standards. Do not use lacquer thinner or enamel reducer as a degreaser.
4. Make sure that all Body Side Molding installation surfaces are free of dirt and/or grease. (Fig. A1)
 - i. Use a clean, lint-free cloth and isopropyl alcohol-based cleaner.

B. Installation

1. From the bottom of the rocker at the radius tangency of the front of the front door, measure up 13.25" and mark vehicle with a grease pencil. (Fig. B1)
2. From the bottom of the rocker at the radius tangency of the rear of the rear door, measure up 16.25" and mark vehicle with a grease pencil. (Fig. B2)

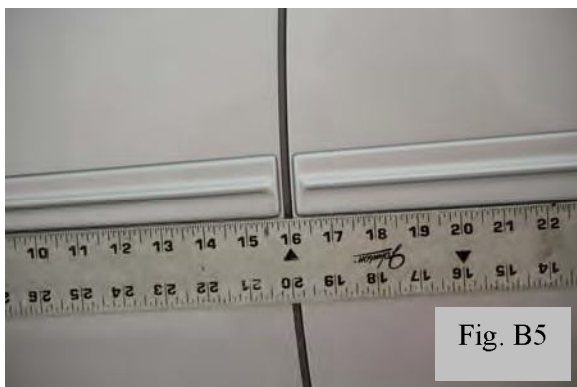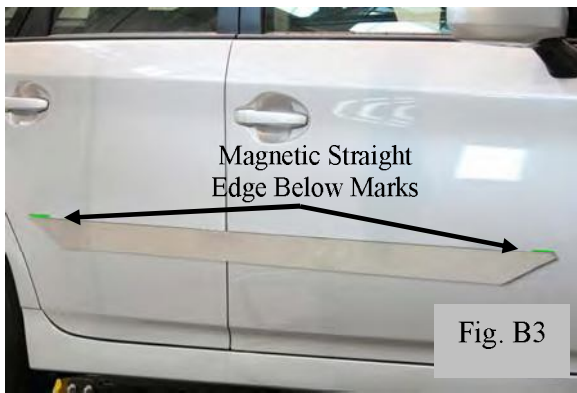

3. Using marks made in Steps 1 and 2, place magnetic straight edge under marks on vehicle. (Fig. B3)
4. Install Body Side Molding using magnetic straight edge applied in Step 3 as a guide. (Fig. B4)
5. Install Body Side Molding approximately 1/16" from front and rear door edge respectively. (Fig. B5)

NOTE: Orientation of left side and right side pieces is critical.

- i. The front Body Side Molding piece is beveled on the top. (Fig. B6)
 - ii. The end of the rear Body Side Molding piece is angled parallel with the door seam. (Fig. B7)
6. Apply firm pressure with roller or cloth to the taped areas for proper bond. Tape reaches maximum adhesive bond after 24 hours of contact.



Checklist –these point MUST be checked to ensure a quality installation

Check For:

Accessory Function Checks

Check visual Alignment

✓ No gap is allowed between the tape and the vehicle door surface

Vehicle Function Checks

Look For:

■ Molding should be straight

No gap is allowed between the tape and the vehicle door surface

□ Open & close both rear doors to ensure the molding does not rub or hit door frame.