


Toyota Prius Bluetooth


Connection Setup for: **Sony Ericsson T610**

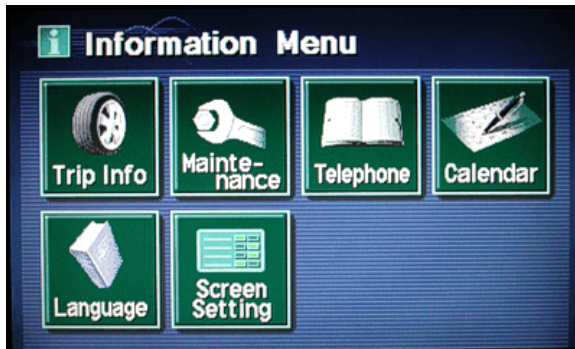

Press "Telephone"




Press "Settings"

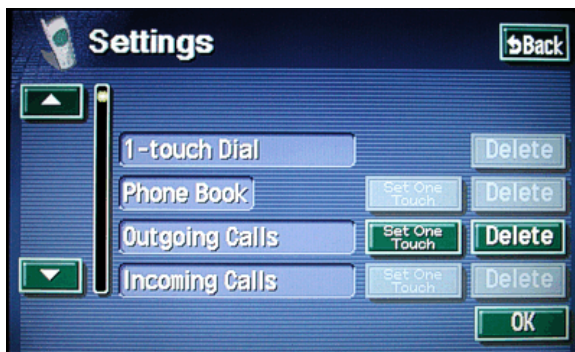


Press the arrow on the left to scroll down.




Press the "Add Phone" option for Bluetooth.

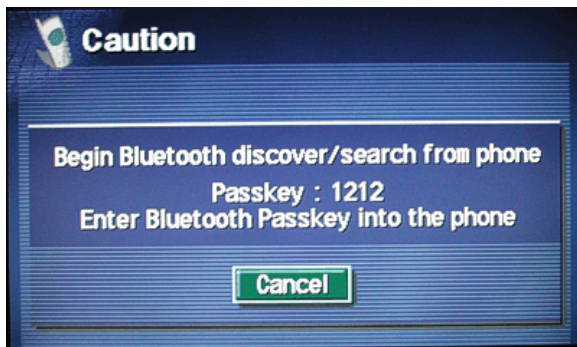

This message should automatically appear.

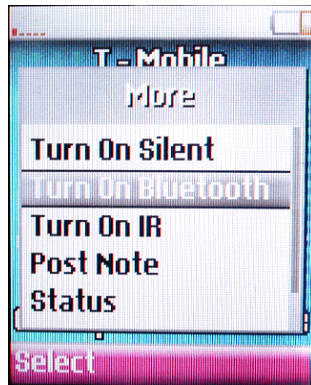


Select "Turn On Bluetooth"

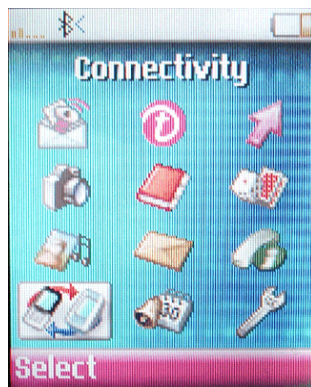


Select "Connectivity"




Select "Bluetooth"

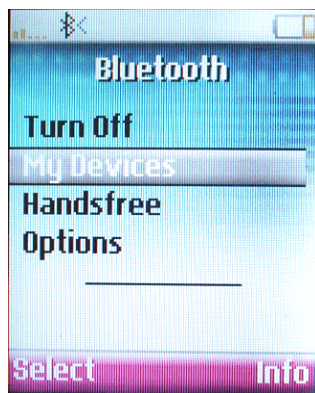


Select "My Devices"

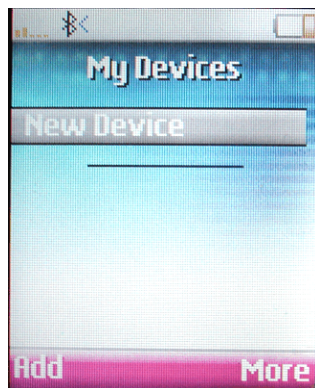


Add "New Device"

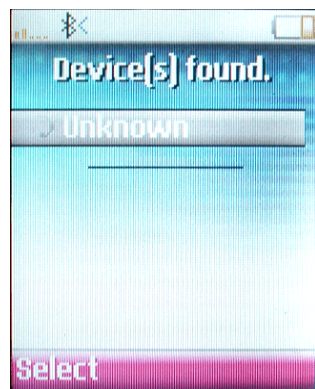


Select "Unknown"

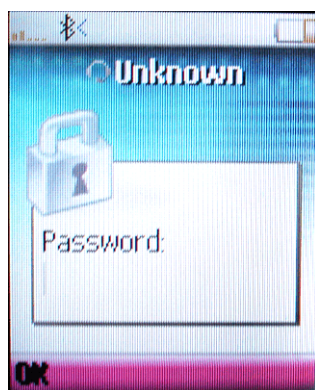


Enter the "1212" password/passkey.

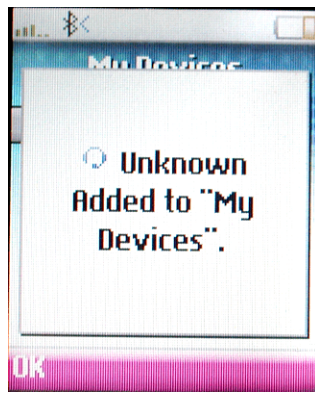


After this message appears, select "OK"

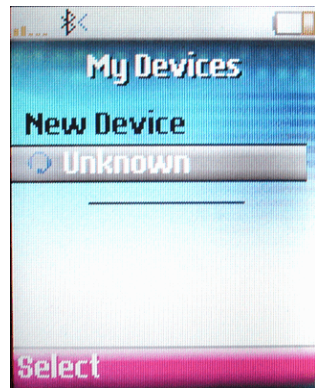


Select "Unknown"

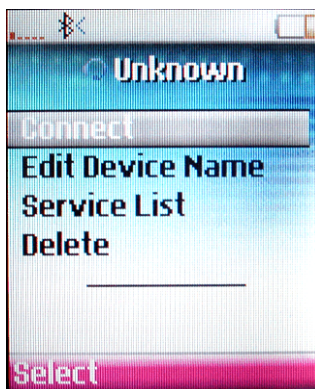

Select "Connect"

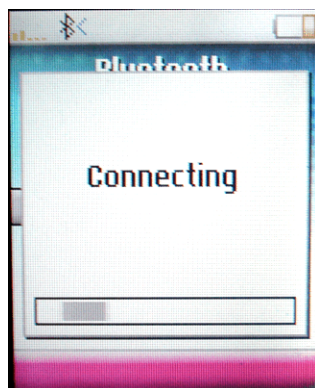


Connecting to the Prius system will occur.

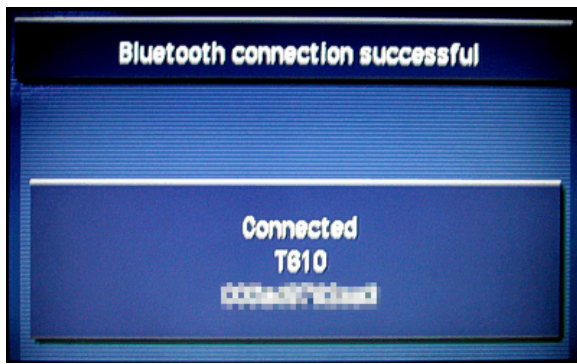


This message should appear after connecting.


Setup is complete.

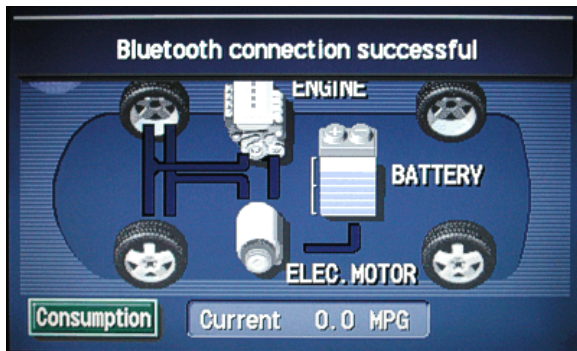

This message should automatically appear each time the Power button in the Prius is pressed on and have the phone with you.

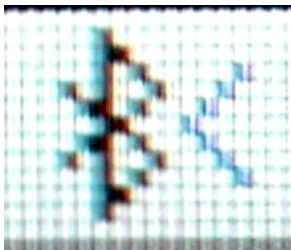

Symbol on phone indicating: NOT CONNECTED

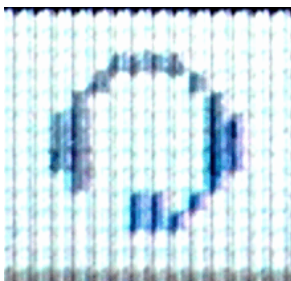

Symbol on phone indicating: CONNECTED