



Prius

Vertical Cargonet

Installation instructions

Model year: 2009

Vehicle code: ZVW30*-AHXEBW


Part number: PT347-47101

Manual reference number: AIM 001 955-0

Revision Record

Rev. No.	Date	Page	Picture	Update	New	Deleted

A

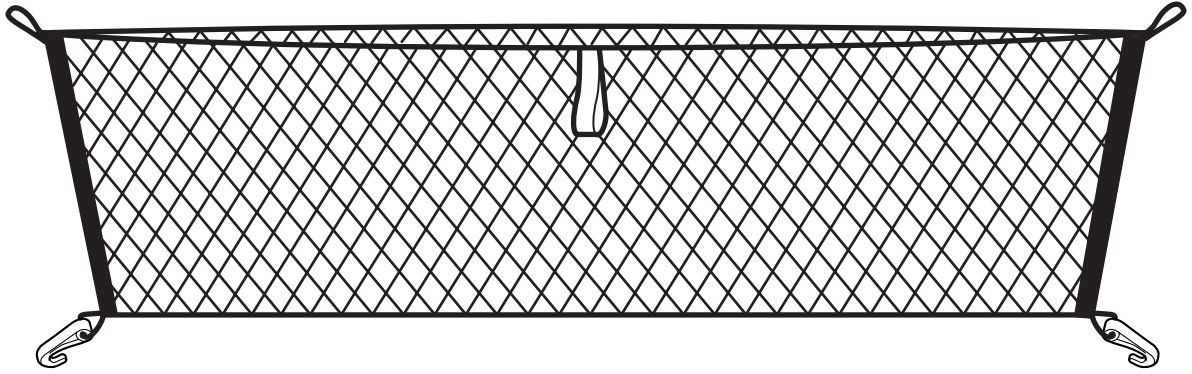



1x

B




2x

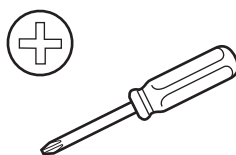


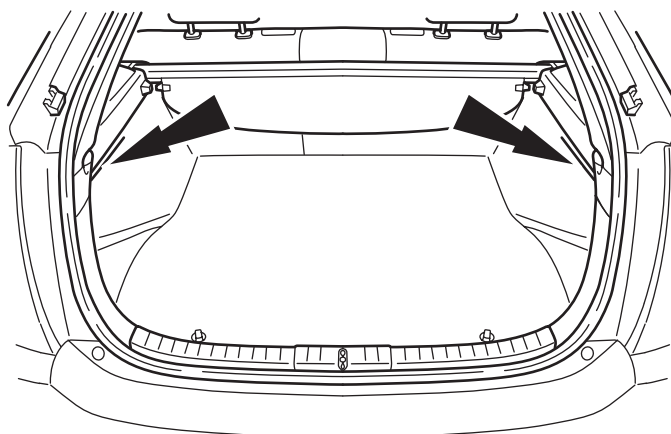


1

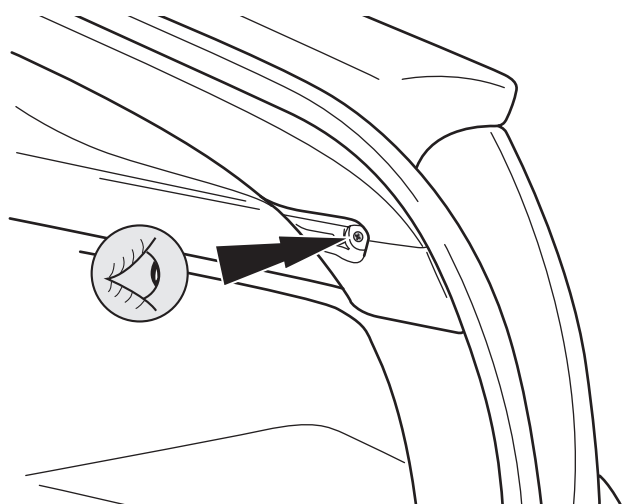

2

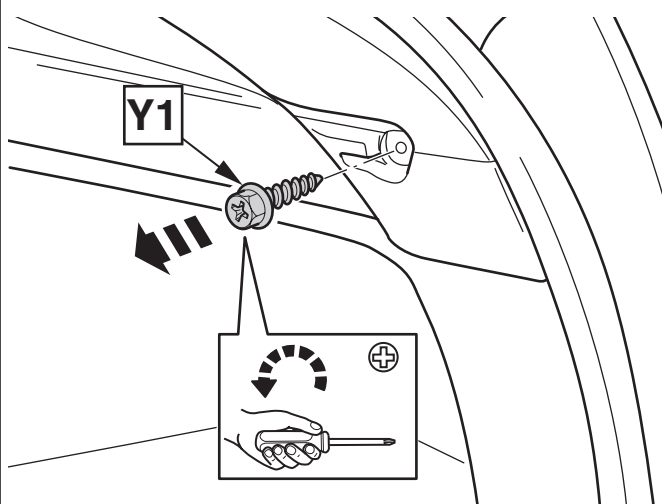

3

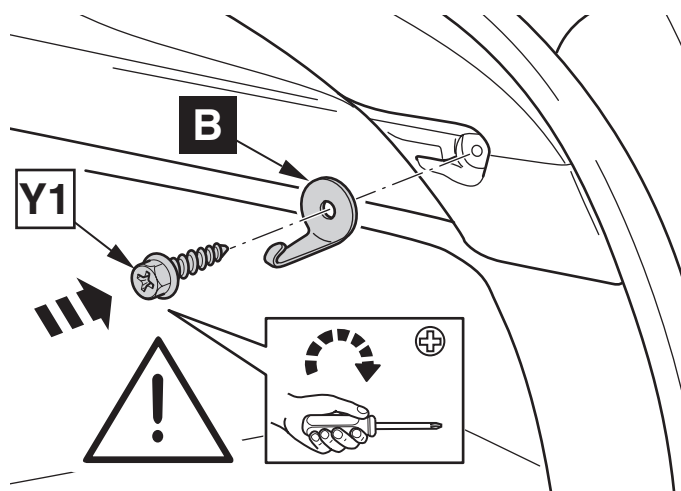

4

