


**37. REMOVE DECK TRIM SIDE PANEL ASSEMBLY LH**

- (a) Remove the screw and 2 bolts.
- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, detach the 7 claws and 3 clips, and remove the side panel.

**HINT:**

Tape the screwdriver tip before use.

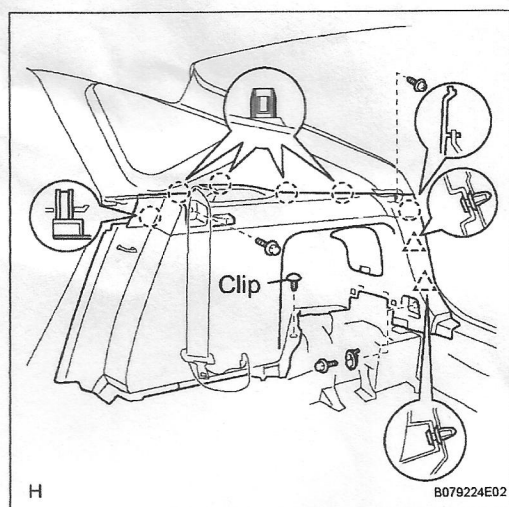


**38. REMOVE DECK TRIM SIDE PANEL ASSEMBLY RH**

- (a) Remove the screw and 2 bolts.
- (b) Using a clip remover, remove the clip.
- (c) Using a screwdriver, detach the 6 claws and 2 clips, and remove the side panel.

**HINT:**

Tape the screwdriver tip before use.

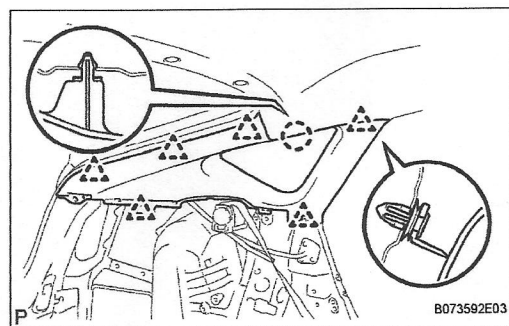

**39. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY LH**

- (a) Using a screwdriver, detach the 6 clips and claw, and remove the inner garnish.

**HINT:**

Tape the screwdriver tip before use.

**40. REMOVE ROOF SIDE INNER GARNISH ASSEMBLY RH**

**HINT:**

Use the same procedures described for the LH side.