



<b>DTC</b>	<b>P0A93/346</b>	<b>INVERTER COOLING SYSTEM PERFORMANCE</b>
<b>DTC</b>	<b>P0A93/347</b>	<b>INVERTER COOLING SYSTEM PERFORMANCE</b>

## CIRCUIT DESCRIPTION

The inverter converts the high-voltage direct current of the HV battery into the alternating current for the MG1 and the MG2. The inverter generates heat during the conversion process, and this heat could damage the inverter if a cooling system is unavailable. Therefore, similar to the MG1 and the MG2, the inverter is cooled by a dedicated cooling system, which consists of an electric water pump, cooling fan, and radiator. This cooling system is independent of the engine cooling system.

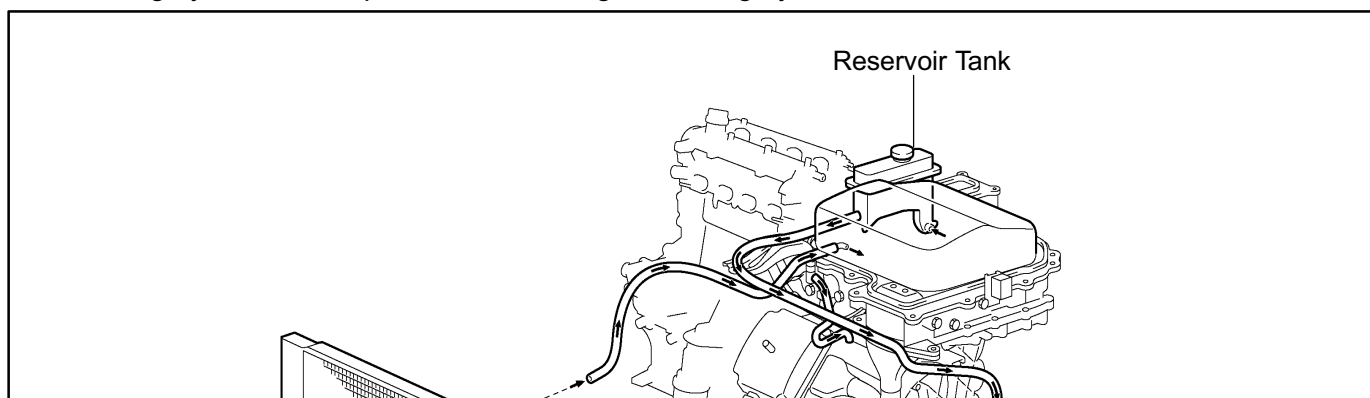

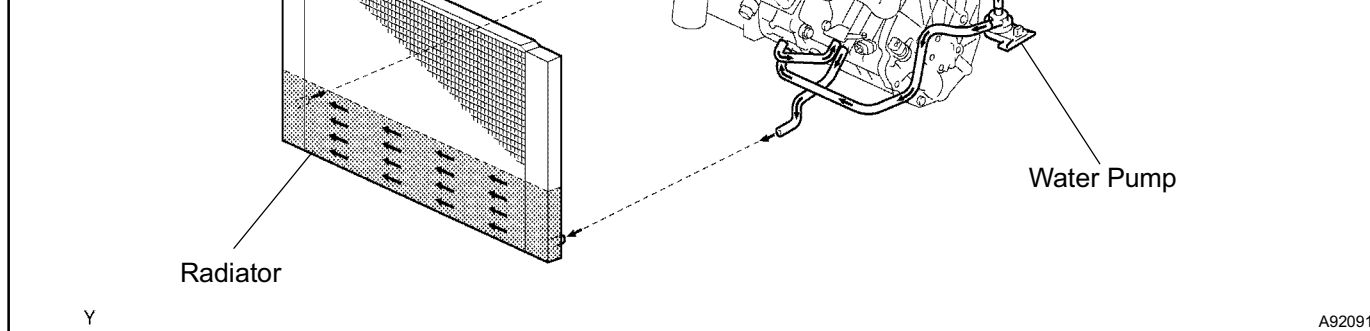

The HV control ECU monitors the electric water pump, cooling fan and cooling system, and detects malfunction.

DTC No.	INF Code	DTC Detection Condition	Trouble Area
P0A93	346	Inverter cooling system malfunction (water pump system malfunction)	<ul style="list-style-type: none"> <li>• Wire harness or connector</li> <li>• Inverter cooling system</li> <li>• Water w/ motor &amp; bracket pump assembly</li> <li>• Cooling fan motor</li> <li>• Cooling fan motor No. 2</li> <li>• w/ converter inverter assembly</li> </ul>
P0A93	347	Inverter cooling system malfunction (electric cooling fan system malfunction)	<ul style="list-style-type: none"> <li>• Wire harness or connector</li> <li>• Inverter cooling system</li> <li>• Water w/ motor &amp; bracket pump assembly</li> <li>• Cooling fan motor</li> <li>• Cooling fan motor No. 2</li> <li>• w/ converter inverter assembly</li> </ul>

## MONITOR DESCRIPTION

If the HV control ECU detects malfunction in the electric water pump, fan, or radiator, it illuminates the MIL and sets a DTC.

## MONITOR STRATEGY

Related DTCs	P0A93 (INF 346/347): Inverter cooling system performance/Inverter cooling system
Required sensor/components	Water pump, radiator fan, inverter, boost converter, DC/DC converter
Frequency of operation	Continuous
Duration	TOYOTA's intellectual property
MIL operation	Immediately
Sequence of operation	None

## TYPICAL ENABLING CONDITIONS

The monitor will run whenever the following DTCs are not present	TOYOTA's intellectual property
No other condition	-

## TYPICAL MALFUNCTION THRESHOLDS

TOYOTA's intellectual property	-
--------------------------------	---

## COMPONENT OPERATING RANGE

Water pump Radiator fan	DTC P0A93 (INF 346/347) is not detected
----------------------------	---

## INSPECTION PROCEDURE

**1**

**CHECK QUANTITY OF HV COOLANT**

- (a) Check that there is a sufficient amount of coolant for the inverter.

**OK: There is a sufficient amount of coolant for the inverter**

**NG**

**ADD HV COOLANT (See page [22-4](#) )**

**OK**

**2**

**CHECK COOLANT HOSE**


- (a) Check that the hoses of the cooling system are not bent or clogged (see the cooling system on page [05-695](#) ).

**OK: The hoses of the cooling system are not bent or clogged**

**NG**

**CORRECT TO NORMAL CONDITION**

**OK**

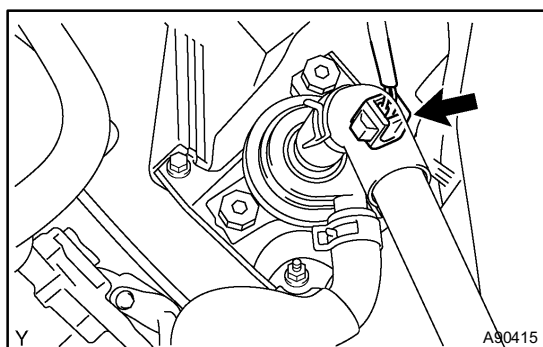**3 CHECK CONNECTION CONDITION OF WATER PUMP CONNECTOR(LOOSENESS AND POOR CONTACT)**

- (a) Check the connection condition of the water pump connector.

**OK: Connector has been connected securely and there is no poor connection.**


**NG****CONNECT SECURELY****OK****4 CHECK WATER W/MOTOR & BRACKET PUMP ASSY**

- (a) Turn the power switch ON (IG).  
(b) Check the operation of the water pump.

**OK: Coolant is sloshing in the reservoir tank**

**NG****REPLACE WATER W/MOTOR & BRACKET PUMP ASSY****OK**

5

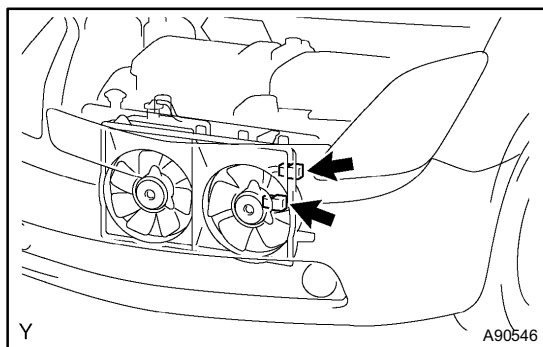**CHECK CONNECTION CONDITION OF COOLING FAN MOTOR CONNECTOR(LOOSENESS AND POOR CONTACT)**

- (a) Check the connection condition of the cooling fan motor connectors.

**OK: Connectors have been connected securely and there is no poor connection.**

**NG****CONNECT SECURELY****OK**

6

**INSPECT COOLING FAN MOTOR (See page 16-8 )****NG****REPLACE COOLING FAN MOTOR AND ADD ENGINE COOLANT****OK**

05-698

DIAGNOSTICS - HYBRID CONTROL SYSTEM

7	INSPECT COOLING FAN MOTOR NO.2 (See page 16-8 )
---	---

NG	REPLACE COOLING FAN MOTOR NO. 2 AND ADD ENGINE COOLANT
----	---

OK

REPLACE W/CONVERTER INVERTER ASSY (See page 21-23 )
---

2005 PRIUS REPAIR MANUAL (RM1130U)

**Author :**

**Date :**

**872**



This document was created with Win2PDF available at <http://www.win2pdf.com>.  
The unregistered version of Win2PDF is for evaluation or non-commercial use only.  
This page will not be added after purchasing Win2PDF.