

WASHER NOZZLE

ADJUSTMENT


1. INSPECT WASHER NOZZLE

- (a) With the power switch ON (IG), check the position that the washer fluid hits the windshield.

Standard:


Washer fluid hits the windshield in the areas indicated in the illustration.

for Front

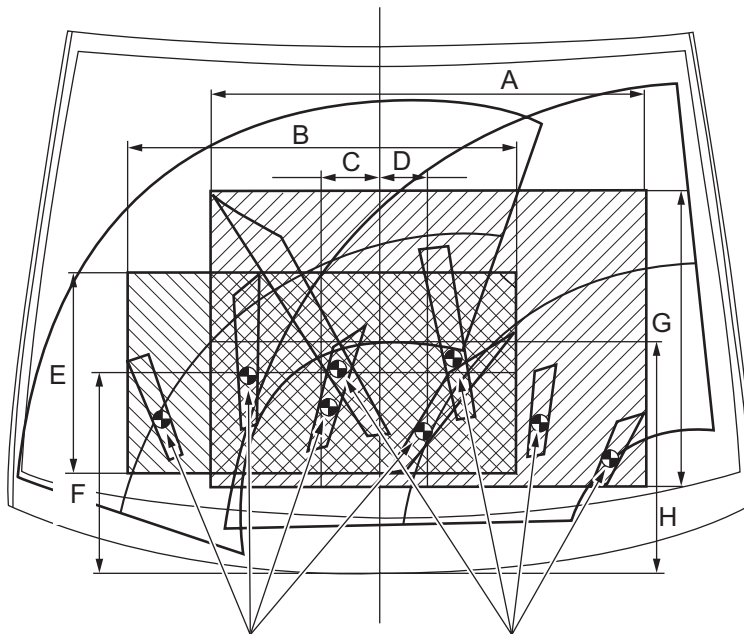

A: 820 mm (32.28 in.)	E: 380 mm (14.96 in.)
B: 735 mm (28.94 in.)	F: 375 mm (14.76 in.)
C: 112 mm (4.41 in.)	G: 555 mm (21.85 in.)
D: 90 mm (3.54 in.)	H: 435 mm (17.13 in.)

for Rear

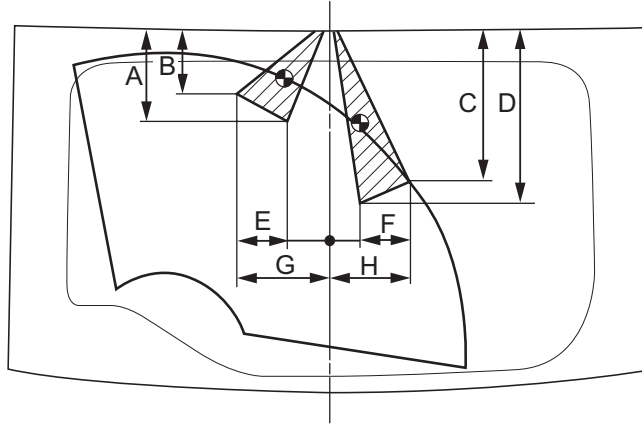

A: 157 mm (6.18 in.)	E: 76 mm (2.99 in.)
B: 110 mm (4.33 in.)	F: 52 mm (2.05 in.)
C: 261 mm (10.28 in.)	G: 163.6 mm (6.44 in.)
D: 301 mm (11.85 in.)	H: 143.6 mm (5.65 in.)


B139880E02

2. ADJUST WASHER NOZZLE

- (a) Using a TOYOTA 4 Way Nozzle Adjustment Tool, insert the bumpy part of the adjustment tool into the bumpy part of the nozzle jet and make the adjustment.

NOTICE:

- Clarify if the 4 mm or 5 mm diameter washer nozzle is being adjusted.
- Do not use a tool such as metal pin as it may damage the nozzle jet.

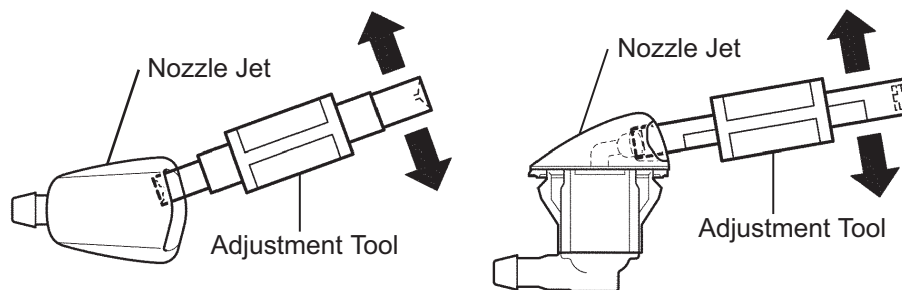

I040986E01

P

WW